

## iRobot Roomba 551 Front Wheel Replacement

A short guide on how to effectively remove and replace the front wheel of your Roomba.

Written By: Deborah Newberry




## **INTRODUCTION**

If you are looking to replace the side wheel, it is a slightly lengthier process that can be found here.

This is a simple guide to replace the front wheel of the Roomba, which is a simple grab and lift procedure.

## Step 1 — Front Wheel

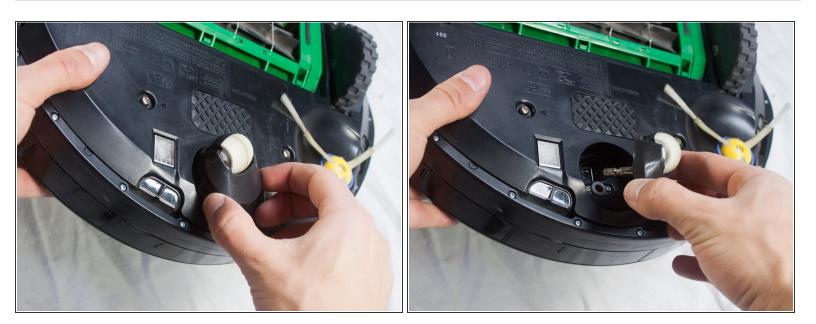

Grab the front wheel housing on the bottom of your Roomba and lift to remove.

## Step 2



Firmly grasp the wheel, and pull to separate from the housing.

To reassemble your device, follow these instructions in reverse order.