


Mt. Fury Roadmaster Brake Pad Replacement

This guide will accomplish the task of replacing the brake pads on the Men's Mt. Fury Roadmaster bicycle.

Written By: Monty Dodge Jr

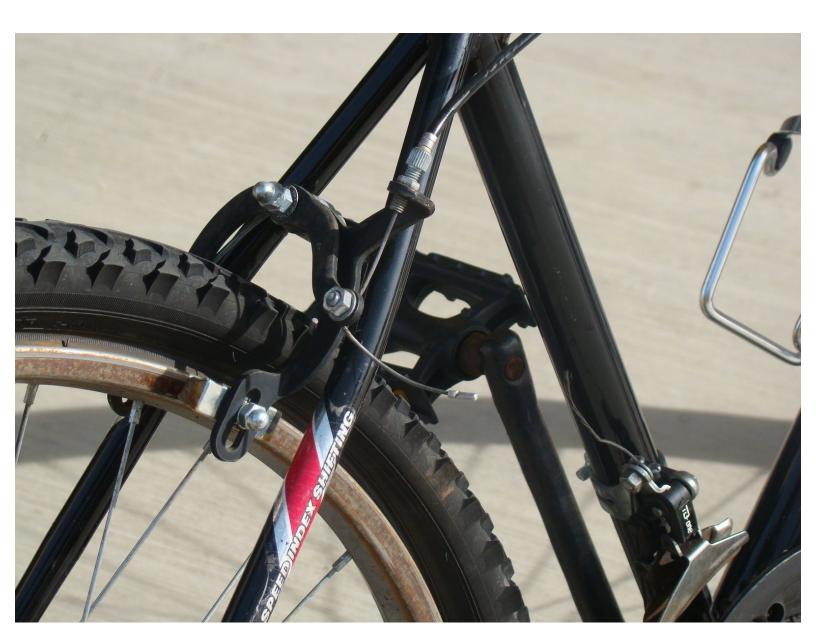

INTRODUCTION

Brake pads tend to wear down with use over time. Use this guide if you feel your brake pads have worn down enough that a replacement is necessary.



TOOLS:

• 10mm Wrench (1)



PARTS:

• Brake Shoes (2)

set

Brake shoes include the nut and washer while brake pads do not.

Step 1 — Brake Pad





Locate and remove the dome nut with a 10mm open-end wrench.

Step 2




Inspect brake pad for wear.

Step 3



- Dome nut (left), lock washer (middle), and brake pad (right).
- i Be sure to save the dome nut and lock washer just in case the replacement brake shoe does not include them.

Step 4

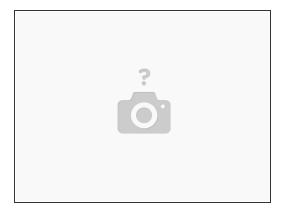

 When installing the new brake shoe, make sure it is properly aligned so it is in full contact with the edge of the rim.

To install your new brake shoes, follow these instructions in reverse order.