




Disassembling KDDI Kyocera A5521K Faceplate

These instructions will demonstrate how to...

Written By: Dominic Grisafe

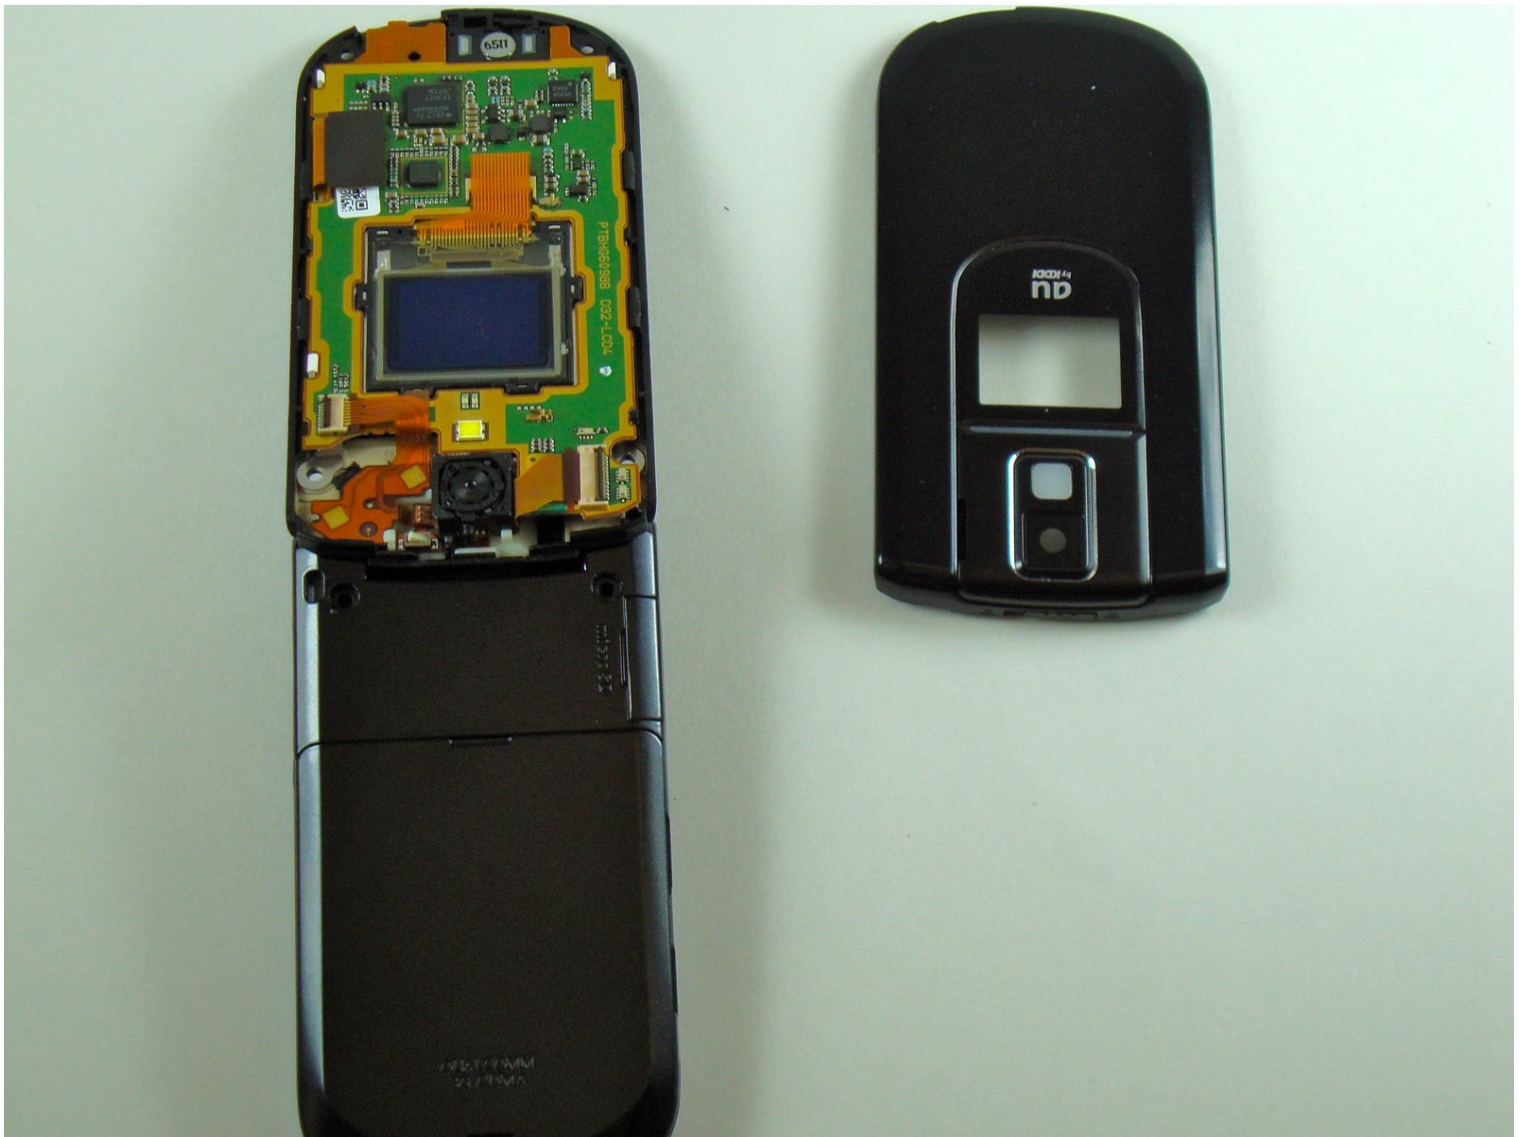

INTRODUCTION

These instructions will demonstrate how to remove the faceplate from the KDDI Kyocera A5521K.

TOOLS:

[Probe and Pick Set](#) (1)

[iFixit Opening Tool](#) (1)

[Tri-point Y1 Screwdriver](#) (1)

Step 1 — Disassembling KDDI Kyocera A5521K Battery




- Turn the phone over to expose the battery cover.
- Apply pressure to the back of the battery cover to slide it down.
- The battery cover is now separate from the phone.

Step 2



- Remove the battery by pushing it up and out from the bottom.
- The battery, cover, and phone should now be separated.

Step 3 — Disassembling KDDI Kyocera A5521K Faceplate

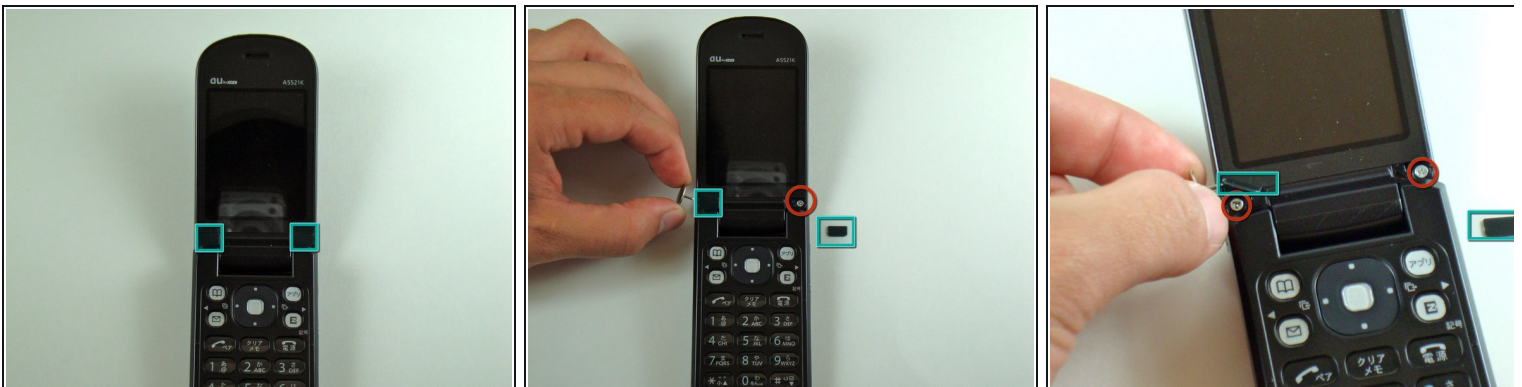


- Pry, with a metal probe, the black covers that are located by the pivoting joints of the phone.
- Beneath the covers are screws.

Step 4



- Remove the screws using a Y0 screwdriver.

Step 5

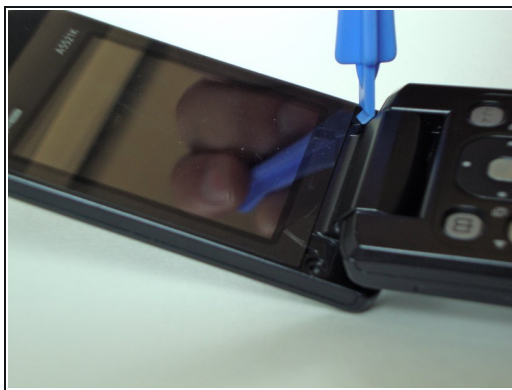

- Use the iPod pry tool to remove the outer screen.
 - Two screws are now visible.


⚠ Be careful not to crack the screen upon removal. It is adhered strongly to the phone.

Step 6





- Use the Y0 screwdriver to remove the screws.

Step 7

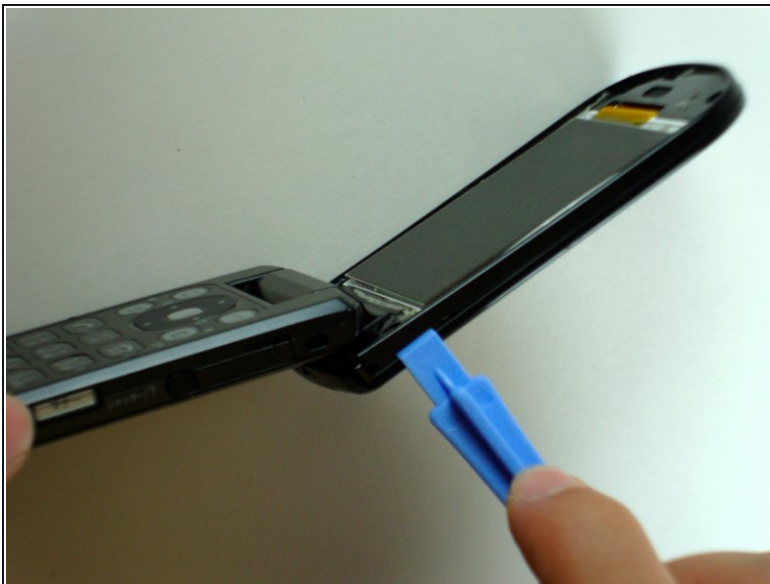

- Use the iPod pry tool to loosen the faceplate from the phone.
 - ① Slide the pry tool along the entire crease of the faceplate to completely detach it.

Step 8

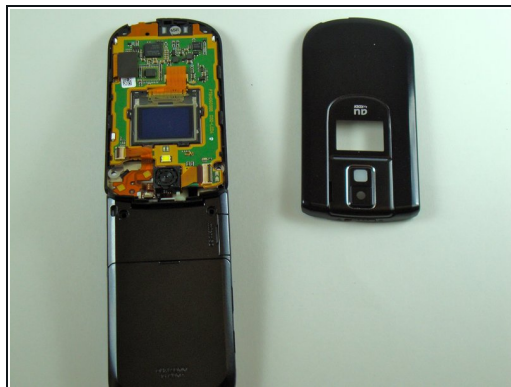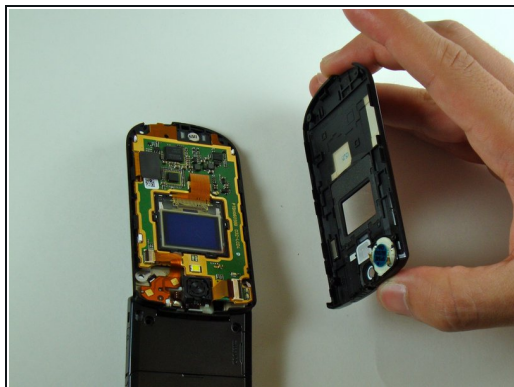

- Separate the faceplate from the phone.

To reassemble your device, follow these instructions in reverse order.