



Asus W2W-A1 Hard Drive Replacement

Replace the hard drive on your Asus W2W-A1.

Written By: Nolan Schock



INTRODUCTION

Replace a broken hard drive or upgrade your hard drive to increase your storage space.



TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Hard Drive



⚠ Before disassembly, make sure the laptop is powered off and the battery is disconnected.


- Remove the two screws (size?) on the lower panel at the bottom of the laptop (identify tool to use).

Step 2




- Grab the panel and lift upwards while pulling towards yourself.

Step 3

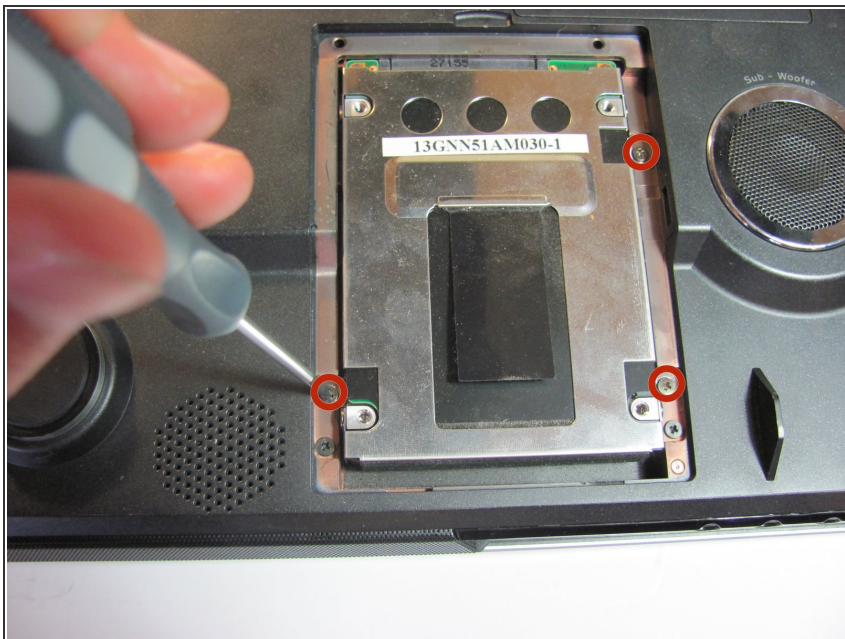

- Remove the 3 4 mm Phillips upper screws holding the hard drive down.

Step 4

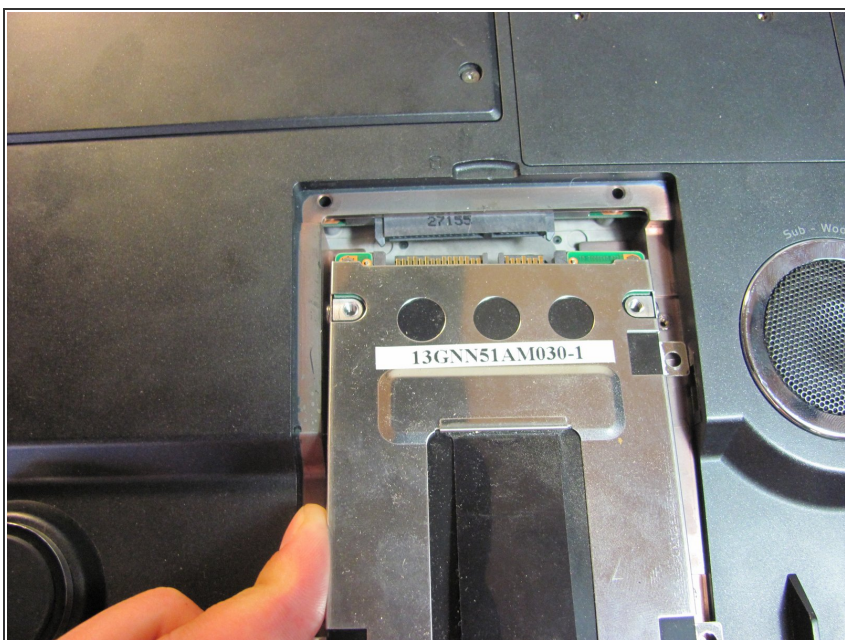

- Pull the hard drive towards yourself to disconnect it from the laptop.

Step 5



- Lift the hard drive upwards to remove it from the laptop.

To reassemble your device, follow these instructions in reverse order.