



# Oster 16-Speed Blender Blades Replacement

Replace your Oster Blender's blades.

Written By: Dana



## INTRODUCTION

Use this guide to remove the blades from the blender in order to replace them.

## Step 1 — Container





- First, remove the blender container from the Blender Base, by grabbing the handle and lifting up.

## Step 2



- Next, remove the lid from the Blender Container.

### Step 3

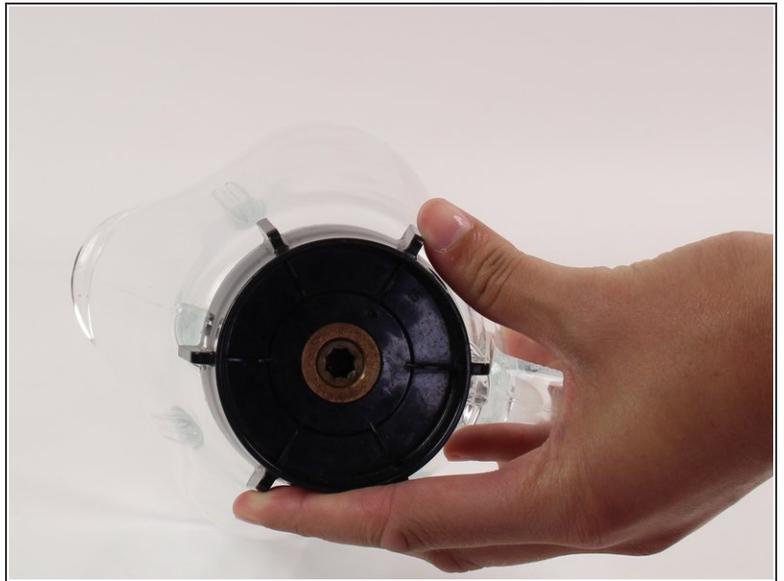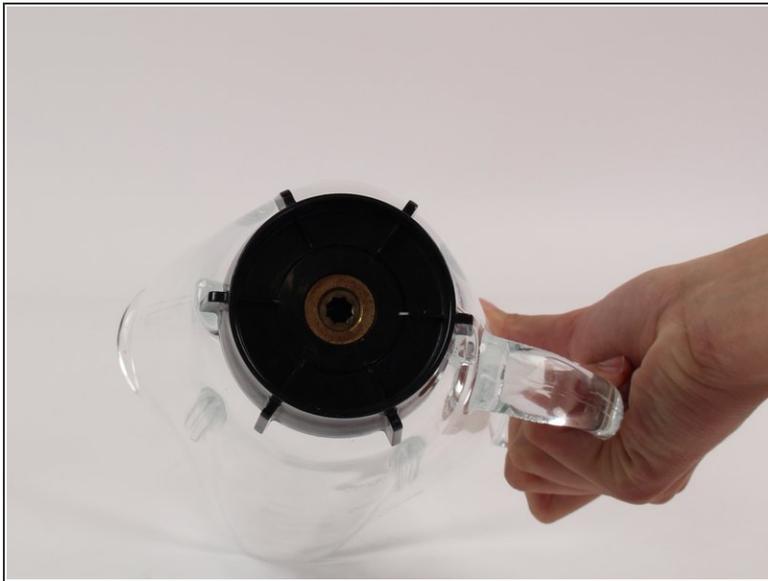

- Flip the container on its side so that the bottom faces you.
- Now rotate the bottom counter-clockwise to remove it from the container.

## Step 4



- Now you will see the bottom of the blender blades once the bottom piece is removed

 Carefully remove the blender blades from the container seeing as they are very sharp and can cut you.

## Step 5



- Now your container is separated.

## Step 6 — Blades



- Flip the blender container on its side so that the bottom faces you.
  - Now, you can insert the new set of blades into the container.
- ⚠** Be careful when handling the blender blades as they are sharp and can cut you.

To reassemble your device, follow these instructions in reverse order.