

iPhone 6 Plus SIM Card Replacement

Replace the SIM Card in the iPhone 6 Plus.

Written By: Walter Galan



INTRODUCTION

Use this guide to remove or replace the SIM card in your iPhone 6 Plus.



TOOLS:

• SIM Card Eject Tool (1)



PARTS:

• iPhone 6 Plus Nano SIM Card Tray (1)


Step 1 — SIM Card





- Insert a SIM card eject tool or a paperclip into the small hole in the SIM card tray.
- Press to eject the tray.
- (i) This may require a significant amount of force.

Step 2

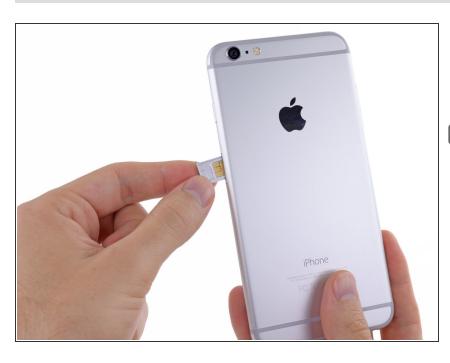

- Remove the SIM Card tray assembly from the iPhone.
- When reinserting the SIM card, ensure that it is in the proper orientation relative to the tray.

To reassemble your device, follow these instructions in reverse order.