



# iPhone 6 Plus Rear Facing Camera Replacement

Prereq only, battery removed.

Written By: Walter Galan



---

## INTRODUCTION

Prereq only, battery removed.

---

### TOOLS:


- [Phillips #000 Screwdriver](#) (1)
  - [Tweezers](#) (1)
-

## Step 1 — Rear Facing Camera



- Remove the following screws securing the rear-facing camera bracket to the rear case:
  - One 1.7 mm Phillips #00 screw
  - One 2.3 mm Phillips #00 screw

## Step 2

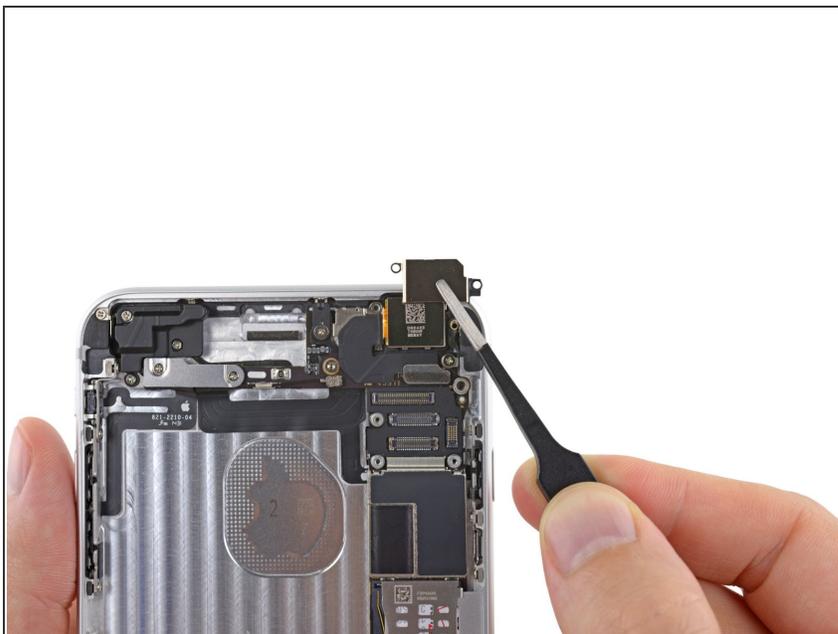


- Lift and remove the rear-facing camera bracket out of the iPhone.

### Step 3



- Use the flat end of a spudger to disconnect the rear-facing camera connector from its socket on the logic board.

### Step 4

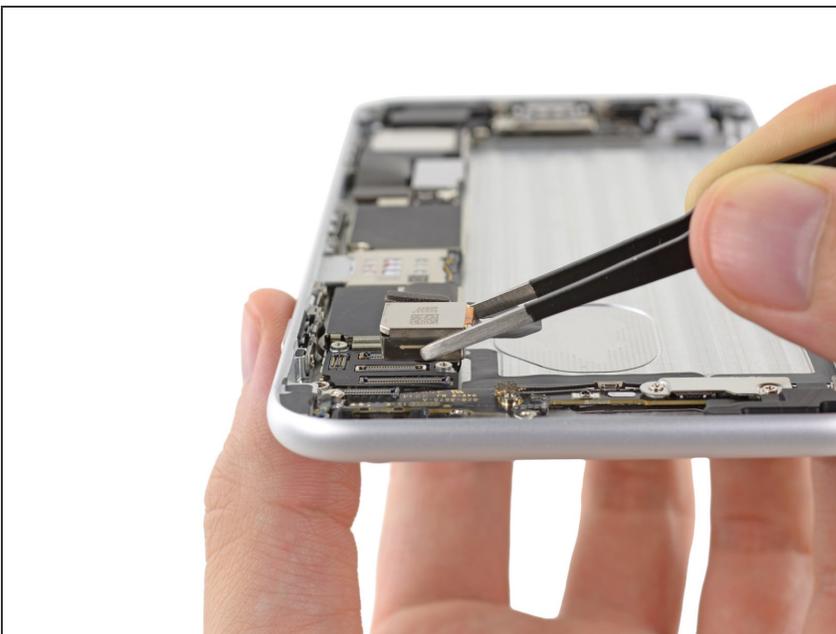

- Carefully lift and remove the rear-facing camera out of the iPhone.

To reassemble your device, follow these instructions in reverse order.