

# **HTC Desire 700 Dual Sim Battery Replacement**

This guide will show you how to replace the battery.

Written By: Steven Pate



#### **INTRODUCTION**


If the indicator button on the top of the phone illuminates when plugged in to charge but the battery does not hold a charge when unplugged, the battery is likely in need of replacement. This guide shows the step-by-step procedure involved in replacing the battery of the device. The back cover is easily removed using a spudger or the fingertips, allowing easy access to the battery as shown below. *Note: do not replace with a third party battery. They have been shown to overheat and damage the device, and are generally unsafe.* 



### TOOLS:

Spudger (1)

## Step 1 — Back Cover

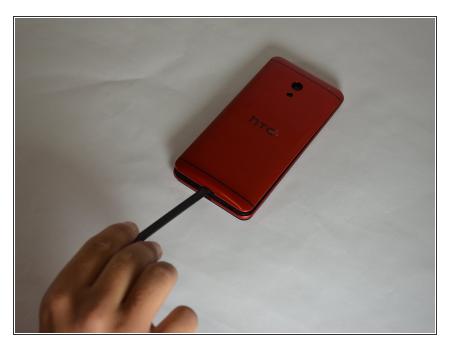

 Use the spudger to pry the back cover off.

### **Step 2** — Removing Battery



 Use spudger tool to pry under the battery to lift it up and out.

To reassemble your device, follow these instructions in reverse order.