


# **HTC One Max Fingerprint Sensor Replacement**

In this guide you are going to learn how to...

Written By: Andrey Sklyar

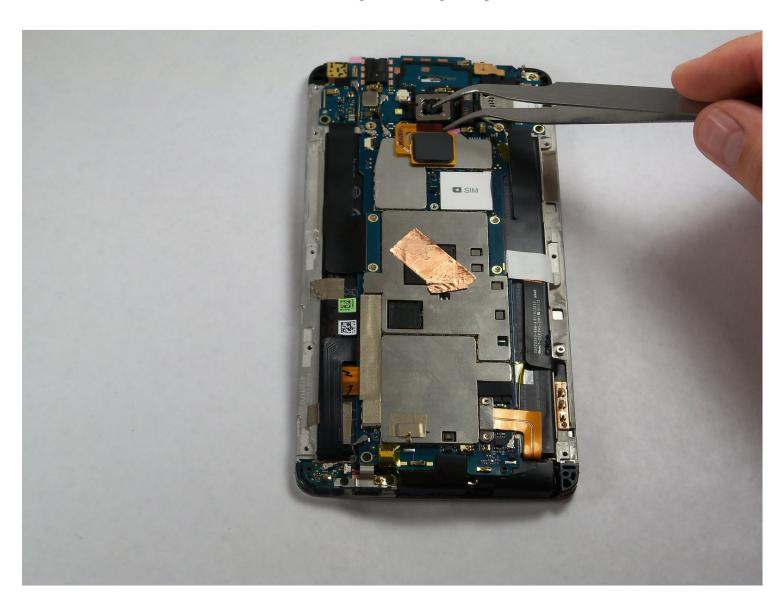

#### **INTRODUCTION**

In this guide you are going to learn how to replace the fingerprint sensor on the HTC One Max phone.

## TOOLS:

Spudger (1)
Phillips #00 Screwdriver (1)
Tri-point Y00 Screwdriver (1)

#### PARTS:


HTC One Max finger print sensor (1)

# Step 1 — Back Case



 Lift back cover while pressing highlighted release switch towards the center of the phone.


# Step 2

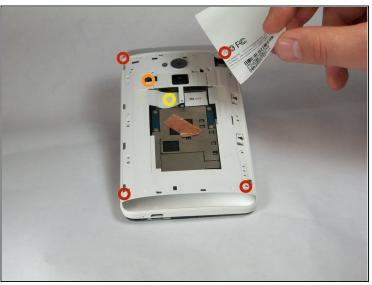




- Remove the four white stickers in each corner that cover the Tri-Wing screws.
- Remove the white sticker near the buttons that control the volume.
- Remove the white sticker near the SIM card.
- Remove the big white sticker with the bar-code in the center of the phone.

## Step 3

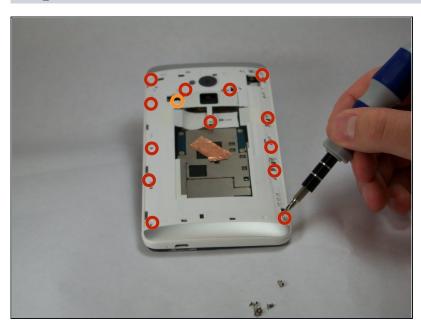


- Remove the thirteen Tri-Wing Y00 screws (Upper & Lower screws are 5 mm length, middle screws are 3.8 mm length) from the back case.
- Disconnect the cable near the volume buttons.

# Step 4

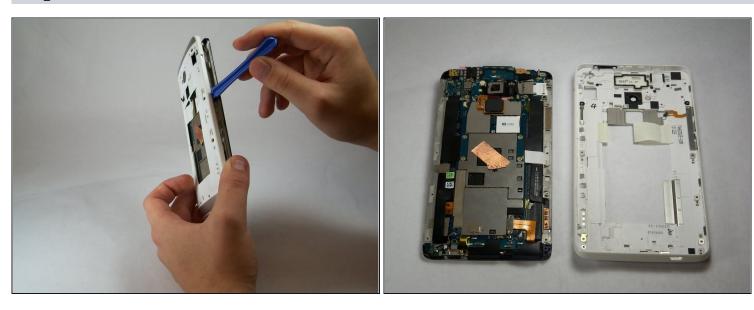

• Use the small plastic opening tool to pry between the screen and the rear case.

## Step 5 — Fingerprint Sensor

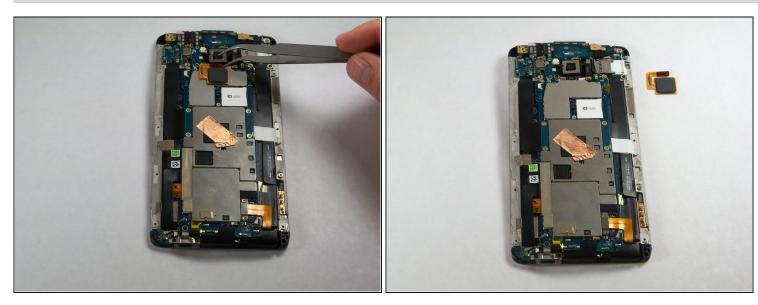

- Use <u>Tweezers</u> to disconnect the ribbon cable connecting the fingerprint sensor to the motherboard.
- When replacing the fingerprint sensor, make sure the ribbon cable snaps into the port on the motherboard.

