




# Samsung Galaxy Note 3 Midframe Replacement

Open the back chassis to gain access to covered parts of the phone, like the camera and headphone jack.

Written By: Brittany Gail

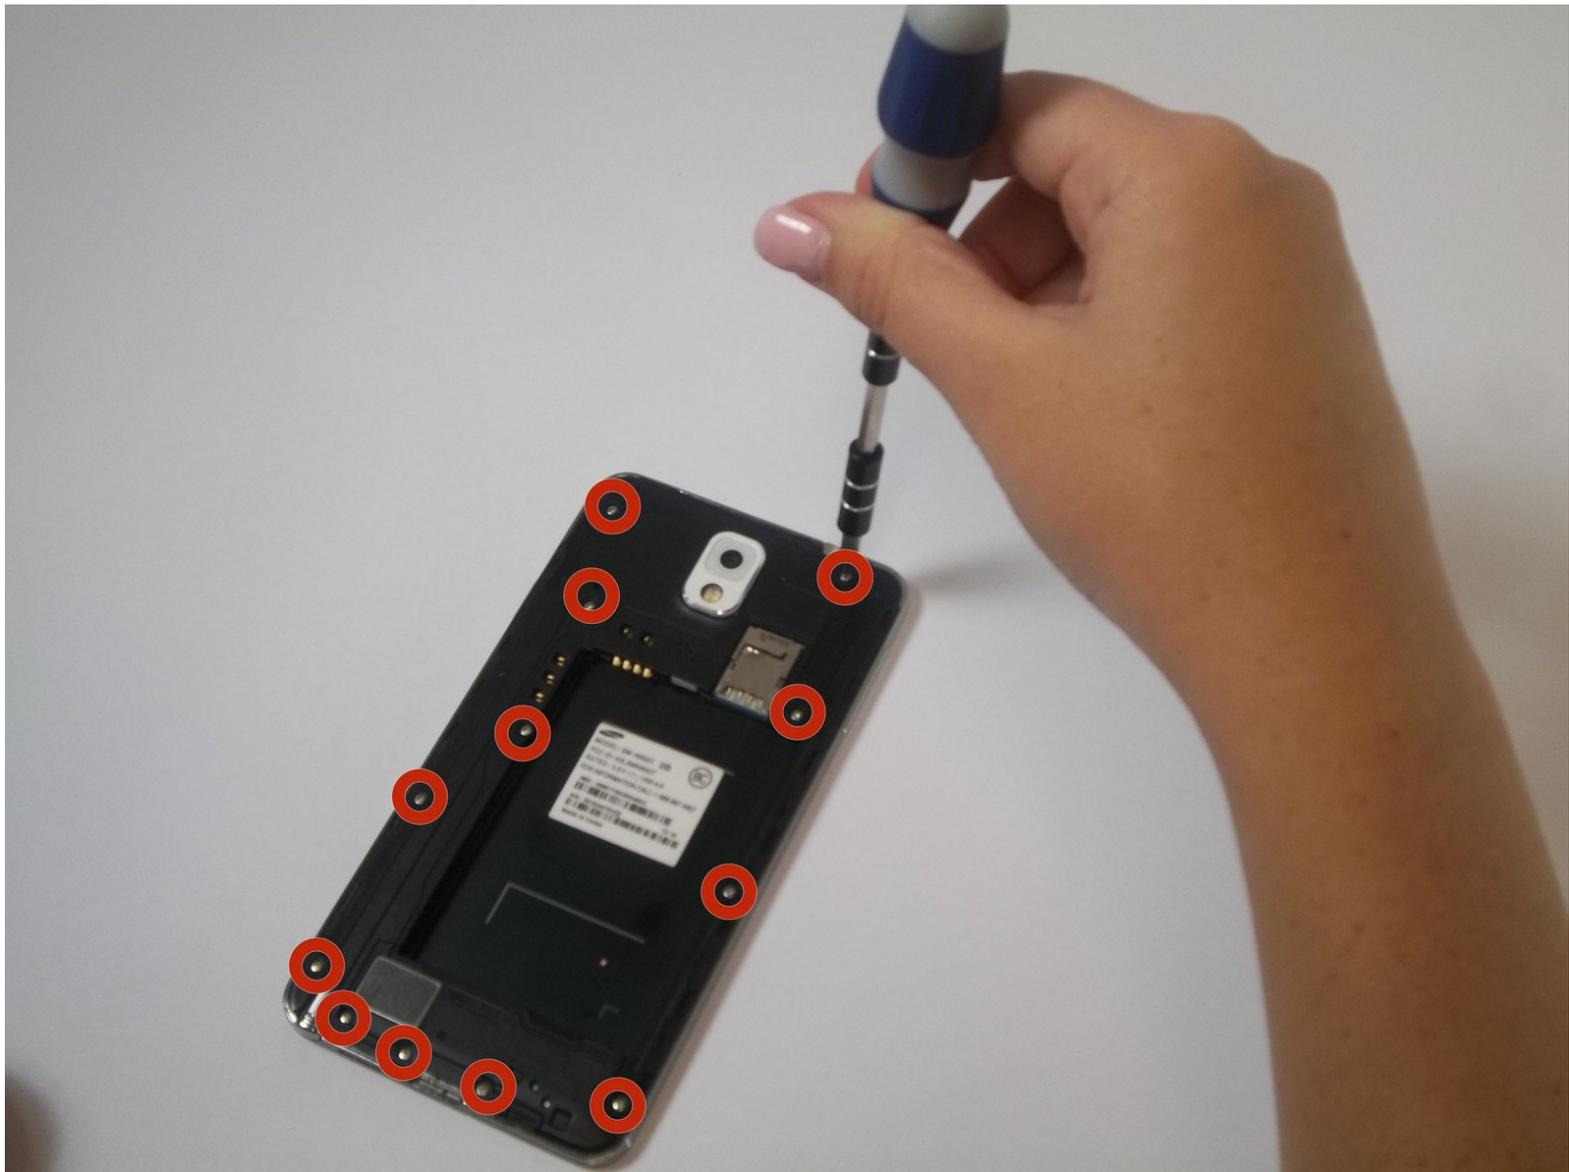

## INTRODUCTION

This shows how to remove the midframe to reveal the phone's bowels.



### TOOLS:

- [iFixit Opening Tools](#) (1)
- [Phillips #00 Screwdriver](#) (1)



### PARTS:

- [Galaxy Note 3 Midframe \(Verizon\)](#) (1)

## Step 1 — Remove the rear case




- Insert a fingernail or plastic opening tool in the gap between the rear case and the base of the phone.

## Step 2 — Remove Case from the Base



- Slide your fingernail or plastic opening tool along the edge of the rear case.
- Lift the case gently from the base.

### Step 3 — Battery

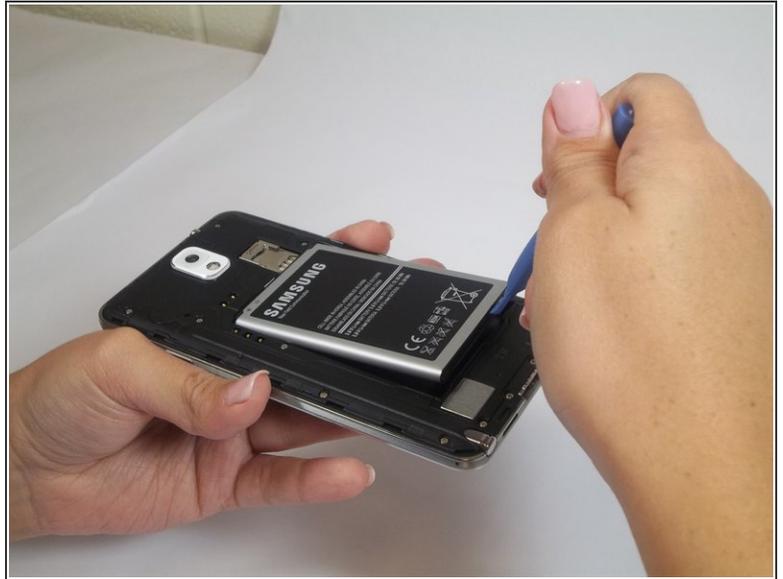


- Insert a fingernail or plastic opening tool into the small gap between the battery and the phone base.
- Lift the battery out of its recess.

### Step 4 — S Pen




- Place your fingernail in the groove of the stylus pen.
- Pull the stylus pen away from the phone.

## Step 5 — Unscrew Back Chassis

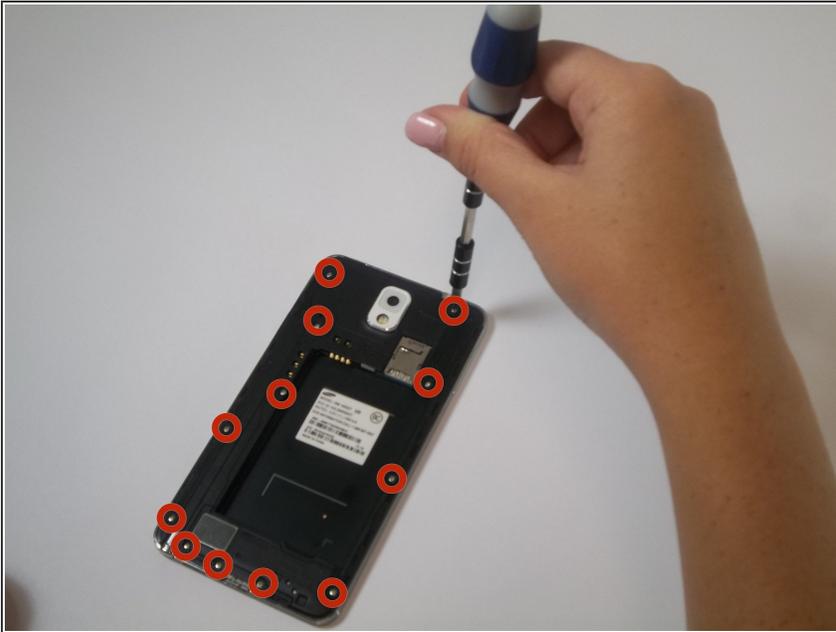

- Remove the twelve 4mm Phillips #00 screws from the back chassis.

## Step 6 — Remove Back Chassis

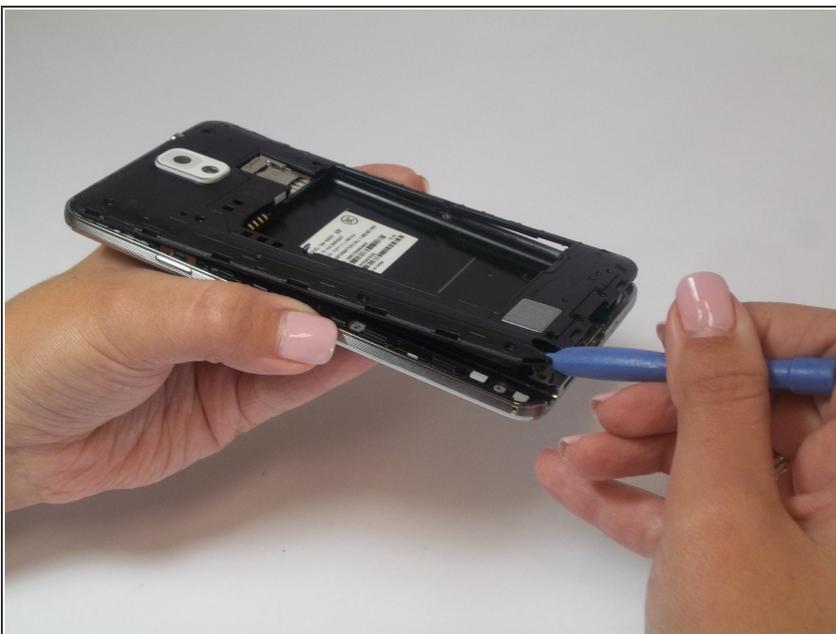

- Insert the plastic opening tool into the Stylus Pen placement holder.
- Lift the plastic opening tool so that the midframe separates from the base.

To reassemble your device, follow these instructions in reverse order.