



iPhone 6 Plus Logic Board Assembly Replacement

Prereq only, battery removed.

Written By: Walter Galan



INTRODUCTION

Prereq only, battery removed.

TOOLS:

- [Phillips #000 Screwdriver](#) (1)
 - [Tweezers](#) (1)
-

Step 1 — Logic Board Assembly



- Remove the single 2.8 mm Phillips #00 screw securing the plastic clip to the logic board.

Step 2



- Remove the single 1.3 mm Phillips #00 screw recessed against the top of the rear case.

Step 3




- Use a pair of tweezers to firmly grasp the plastic clip and remove it from the iPhone.

Step 4



- Remove the single 1.6 mm Phillips #00 screw securing the antenna clip to the rear case.

Step 5

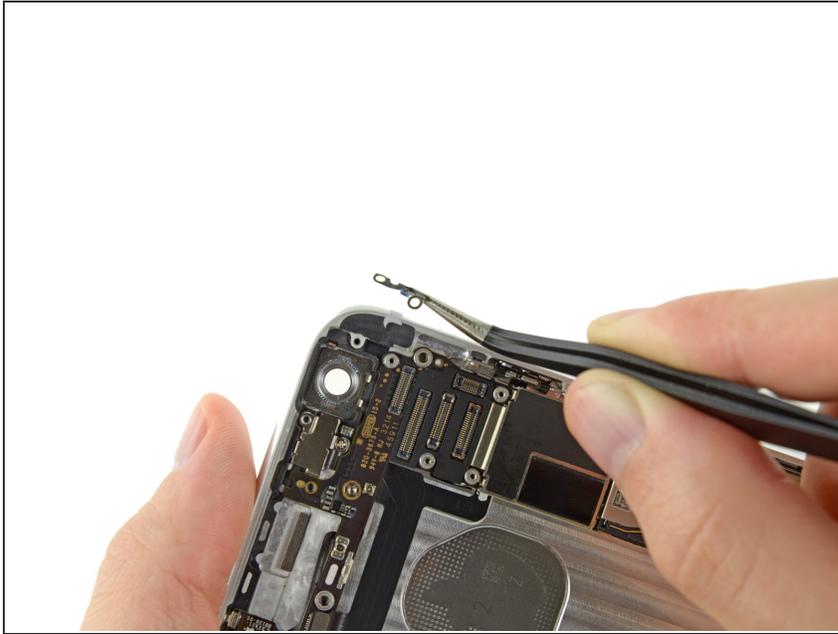

- Carefully grasp the antenna clip with a pair of tweezers and remove it from the iPhone.

To reassemble your device, follow these instructions in reverse order.