




Lenovo IdeaCentre K410 Optical Drive Replacement

This guide will show how to remove the optical drive.

Written By: Timothy Grebe

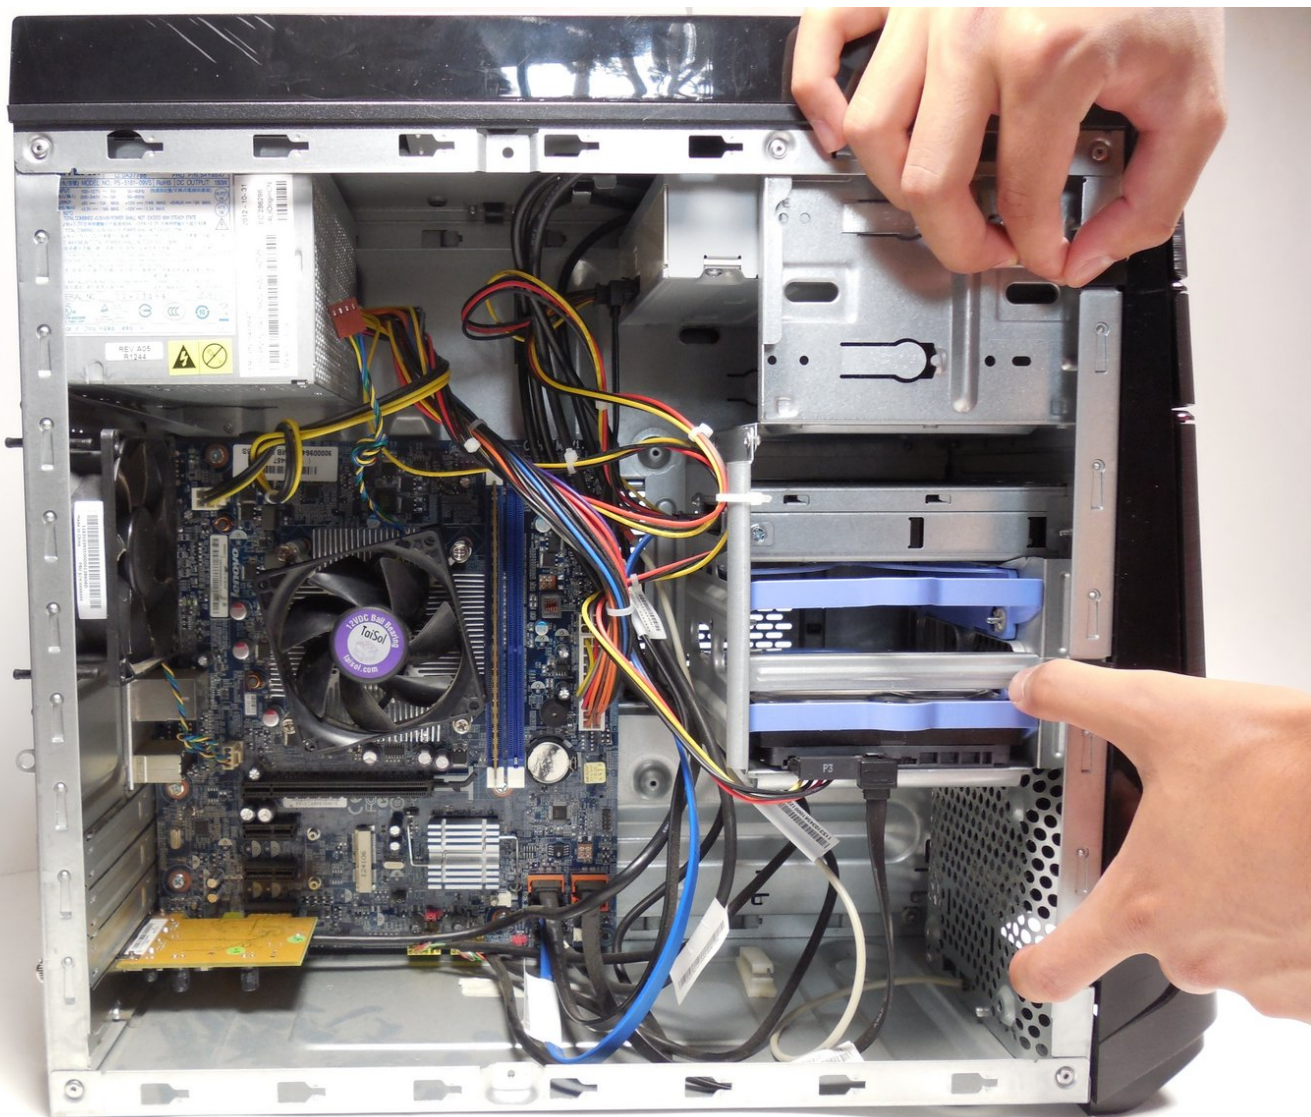



TOOLS:

- [Phillips #2 Screwdriver](#) (1)
-

Step 1 — Side Panel





- Lay the computer down on its side as shown.
- Remove the two 14mm screws shown. The screws are loose enough to unscrew with your hands.

Step 2




- Gently slide the side panel straight back and remove from the computer.

Step 3 — Optical Drive

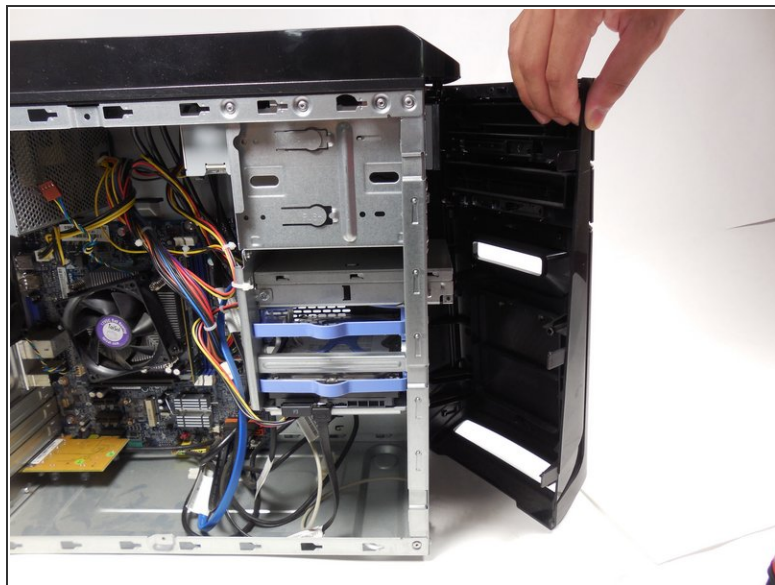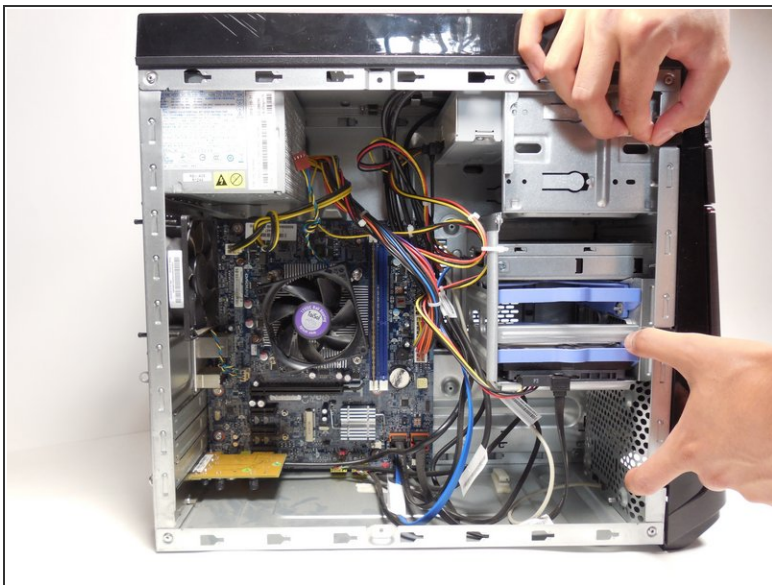

- Pull up on the three tabs shown
- Swivel the front panel so the front is open, and gently pull the cover off

Step 4

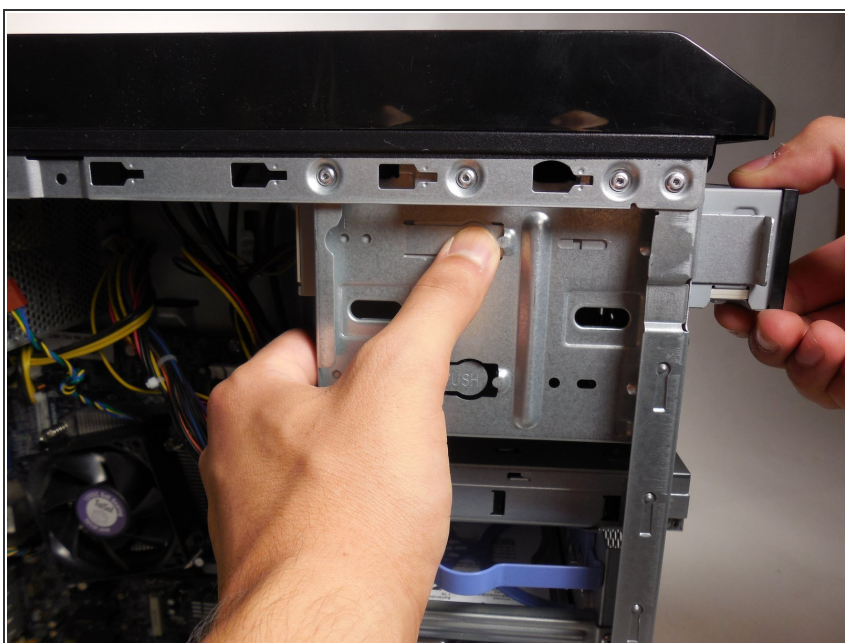

- Push down on the button that says "push" while pulling the optical drive outward.

To reassemble your device, follow these instructions in reverse order.