



JD Razor 2000 Wheelie Bar Replacement

The wheelie bar allows riders keep stability. The wheelie bar also allows riders to perform tricks. This guide will show the replacement of the wheelie bar.

Written By: Shane



INTRODUCTION

The wheelie bar may be deformed or just get in your way constantly. Learn how to remove and/or replace it with this guide.


If you need more assistance, visit our troubleshooting guide [here](#).



TOOLS:

- [Macro Bit Set](#) (1)
-

Step 1 — Unscrewing the Axle Bolt

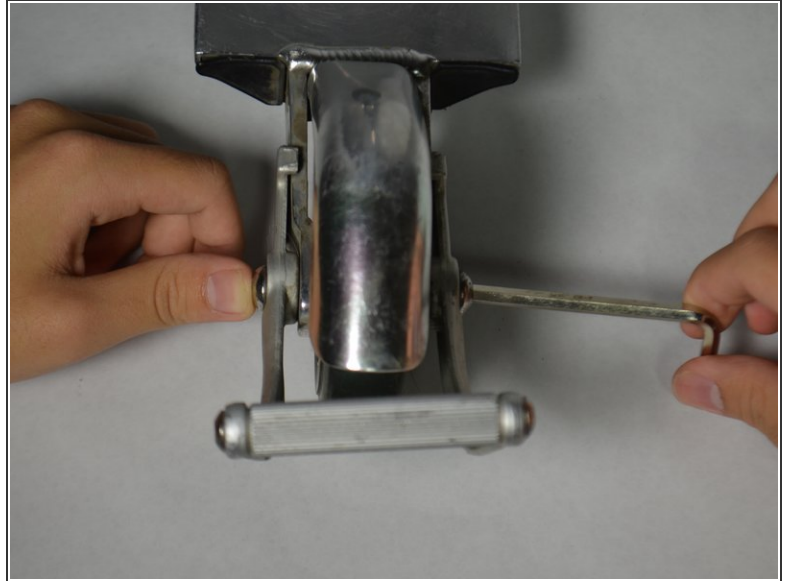


- Facing the wheelie bar as shown, place your left thumb on the bolt located on the left side of the back wheel and place the Allen wrench into the screw on the right side of the back wheel.
- Using the wrench, slowly unscrew the bolt while applying constant pressure from the left side.

Step 2 — Removing the Bolt and Bearing



- Remove the bolt from the right side and the bearing from the left.

Step 3 — Removing the Wheel

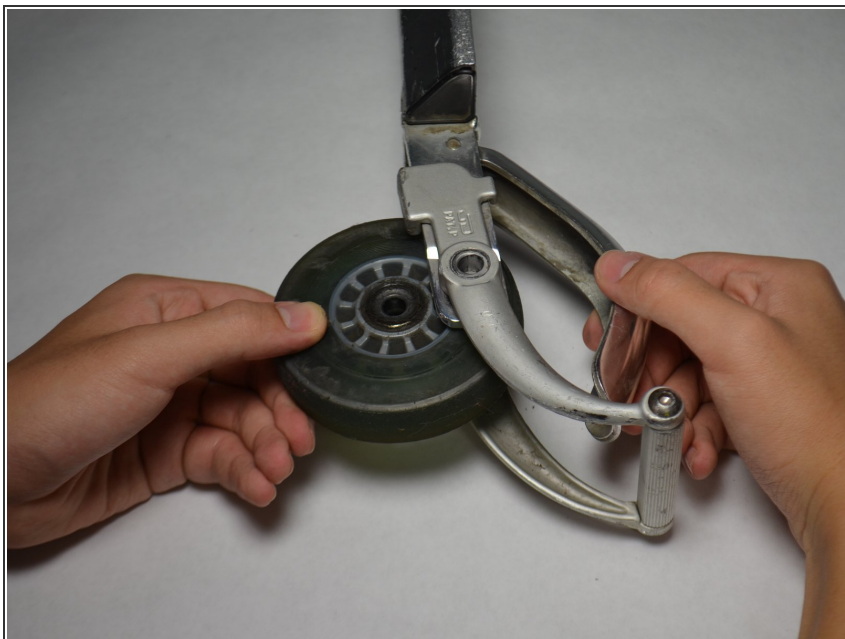

- Turn the JD Razor 2000 on its side as shown. Slowly remove the back wheel by pulling it out at a perpendicular angle to the scooter base.

Step 4 — Pulling Out the Wheelie Bar



- Pull the wheelie bar away from the deck of the scooter.

To reassemble your device, follow these instructions in reverse order.

If you need more assistance, visit our troubleshooting guide [here](#).