



# Samsung Galaxy Prevail 2 Home Button Replacement

If your home button is jammed or does not work, this guide will show you how to replace it.

Written By: Garrett Bowleg



---

## INTRODUCTION

This guide will show you how to replace the home button for the Samsung Galaxy Prevail 2. No background information is required.

---

### TOOLS:

- [Spudger](#) (1)
-

## Step 1 — Removing Back Casing



- Using your finger nails or the spudger; pry the plastic casing open, and pull away from the body of the phone.

## Step 2 — Remove Battery



- Gently pull the battery out of the phone.

### Step 3 — Remove Screws



- Unscrew all of the screws.
- ⓘ Be sure to set aside in a safe place.

### Step 4 — Pry Off Back of Phone




- Insert the plastic opening tool between the silver frame and the white face of the phone to pry off the front face.
- ⓘ Make sure to pry around the entire frame to loosen it before proceeding.
- Use your thumbs to separate the motherboard from the back of the phone

## Step 5 — Open Up the Motherboard



- With the plastic opening tool, lift up the flap to to fully open the motherboard.

## Step 6 — Detach Motherboard

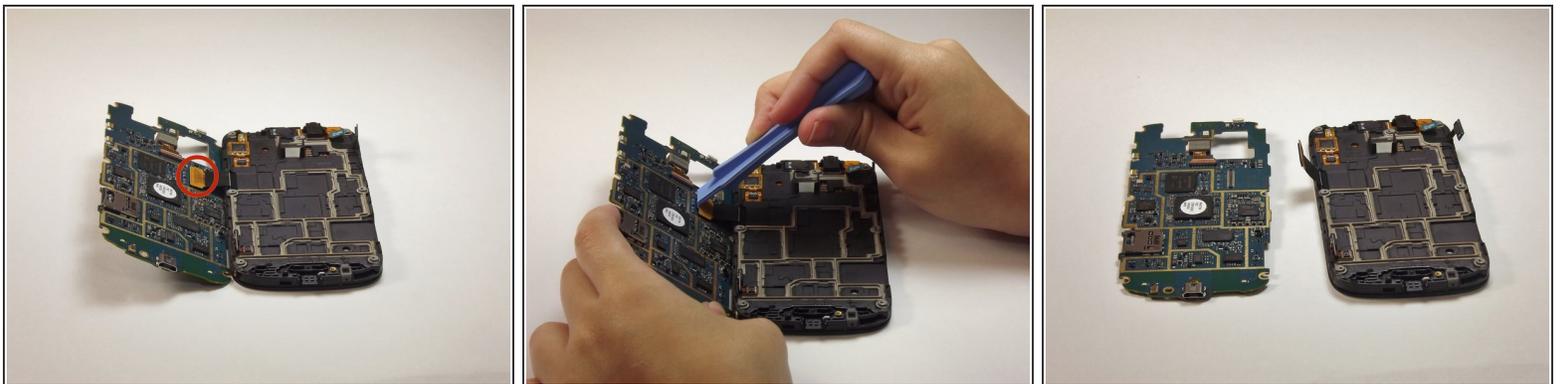


- With the plastic opening tool, lift the second flap up.

## Step 7 — Locate Home Button



- Choose the motherboard side that contains the home button, as shown in the image.

## Step 8 — Remove Home Button

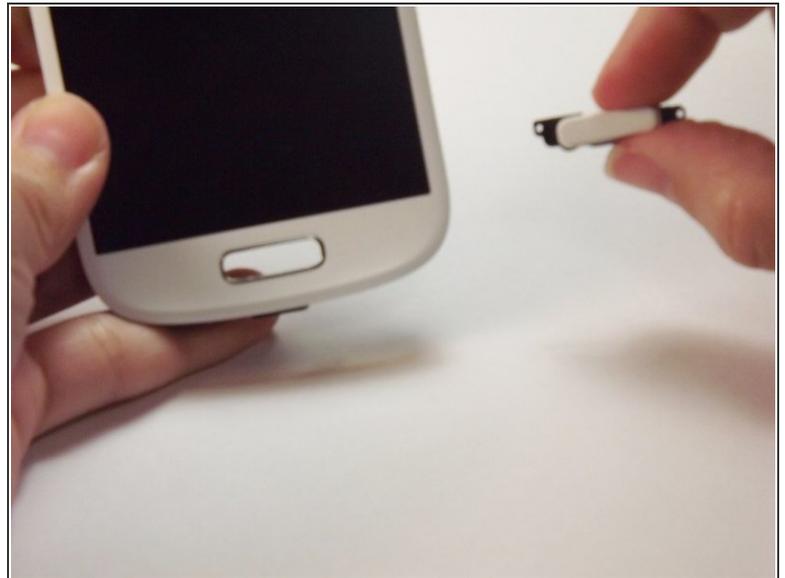

- Use the plastic opening tool to push the home button out.
- ⓘ Push the button from the face of the phone inwards as indicated in the first image.

To reassemble your device, follow these instructions in reverse order.