

HTC Rhyme Volume Button Replacement

Written By: Frederick





- Spudger (1)
- iFixit Opening Tool (1)
- Phillips #0 Screwdriver (1)



• HTC Rhyme Metal Frame (1)

Step 1 — Removing Back Cover



 Slide the bottom back cover off of the phone.

Step 2




 Locate the four screws on the plastic cover and unscrew them.

Step 3




- Pry the sticker off from the sides.
- i You can use a metal spudger to do this.
 - Peel the sticker off with your hands.

Step 4 — Remove the plastic cover

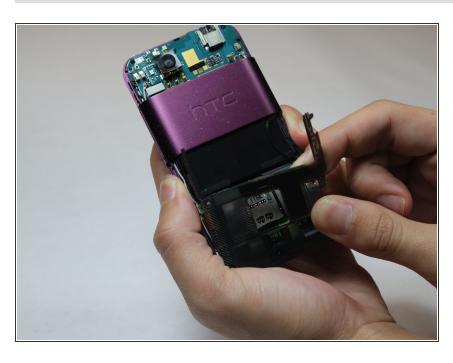


 Remove the plastic cover using your hands.

Step 5

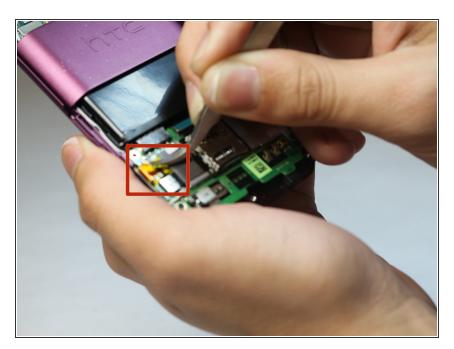

Remove the yellow ribbon.

Step 6

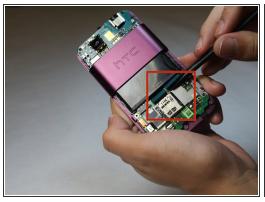






- Lift up the blue flaps underneath the battery.
- Lift up the black flap at the top of the phone.
- Lift up the black flap at the bottom of the phone.

Step 7 — Remove the Motherboard



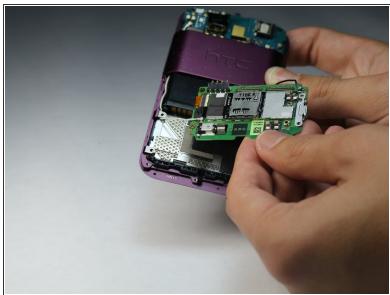

- Remove all 4 screws.
- Carefully remove the motherboard with your hands.

Step 8 — Removing the back plastic casing







Pry the back plastic casing off with your hands.

Step 9



Use the tip of a screwdriver to push the button out of the panel.

To reassemble your device, follow these instructions in reverse order.