




Motorola Photon 4G MB855 Speaker Replacement

How to replace the Speaker of the Motorola Photon 4G

Written By: Elizabeth Lee

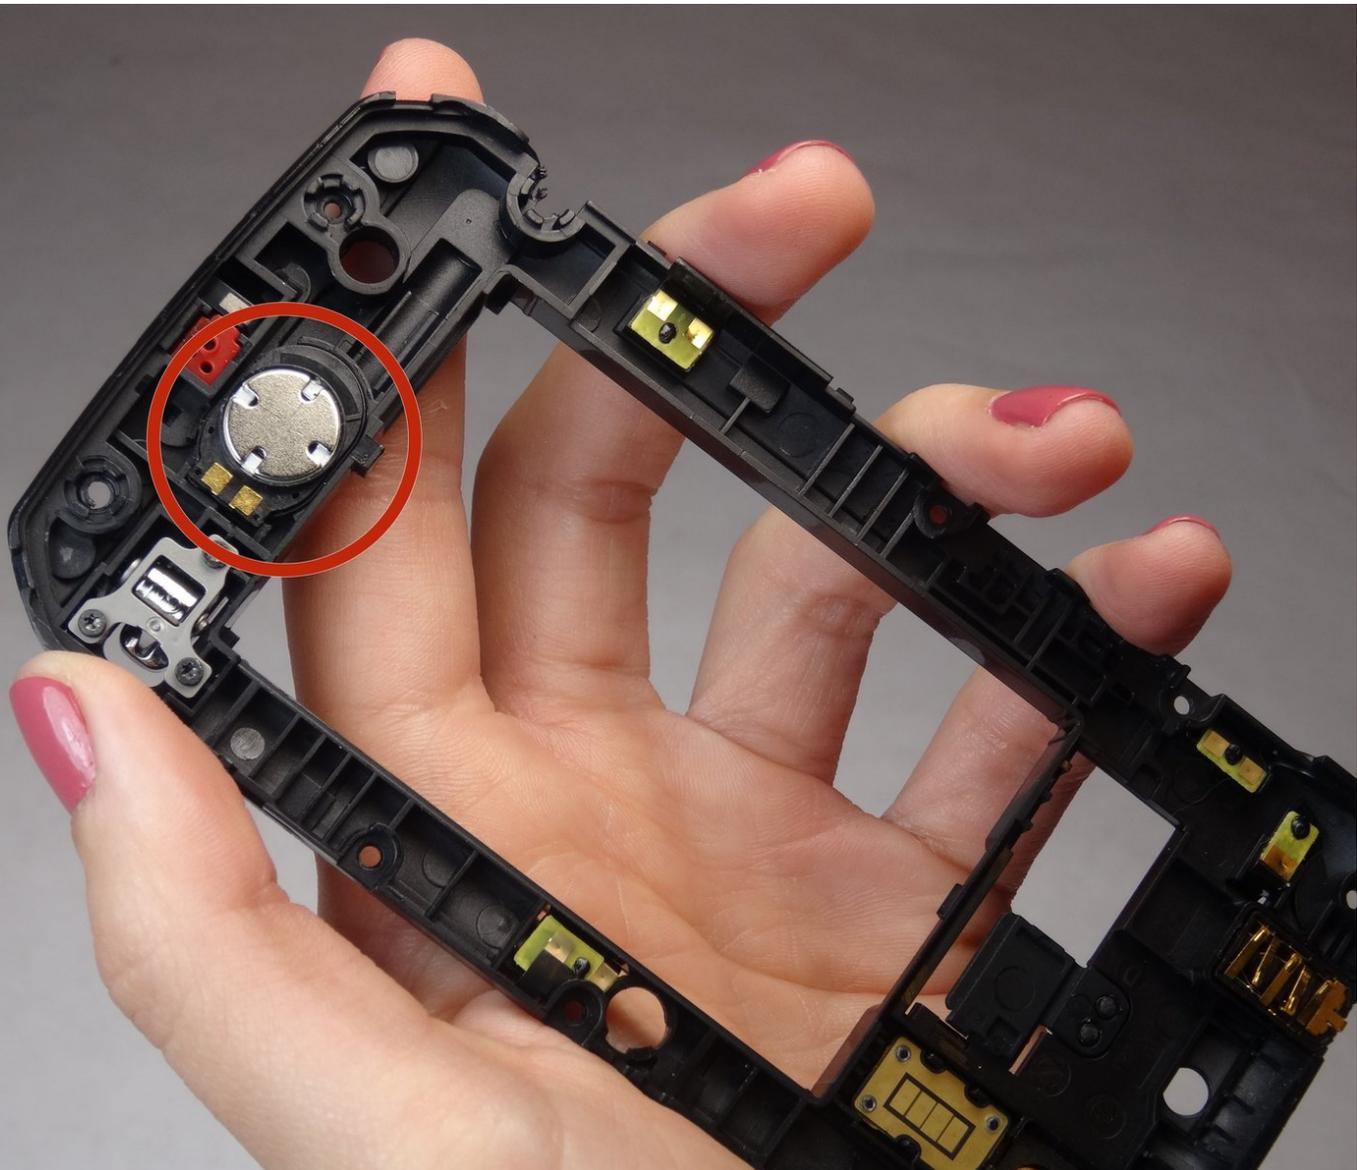

INTRODUCTION

If you are unable to hear from the speaker, then the speaker may be faulty. This is a guide on how to replace the speaker.

TOOLS:

- [iFixit Opening Tool](#) (1)
 - [T4 Torx Screwdriver](#) (1)
 - [Tweezers](#) (1)
 - [Metal Spudger](#) (1)
-

Step 1 — Removing the Back Cover



- Insert a plastic opening tool into the indentation at the bottom of the phone between the front and rear covers.
- Lift the back cover from the bottom and remove it from the phone.

Step 2 — Removing the Battery



- Insert a plastic opening tool, or your finger, into the notch in between the sim card and the battery and lift the battery upward.
- Remove the battery from your phone.

Step 3 — Removing Screw Covers



- Remove all five screw covers with tweezers located in the picture.

Step 4 — Removing the Midframe





- Remove the 10 T4 Torx screws securing the midframe to the display assembly.
- Gently pry the midframe from the display assembly and remove it.

Step 5 — Locating the Speaker



- Locate the speaker on the back of the midframe.

Step 6 — Removing the Speaker

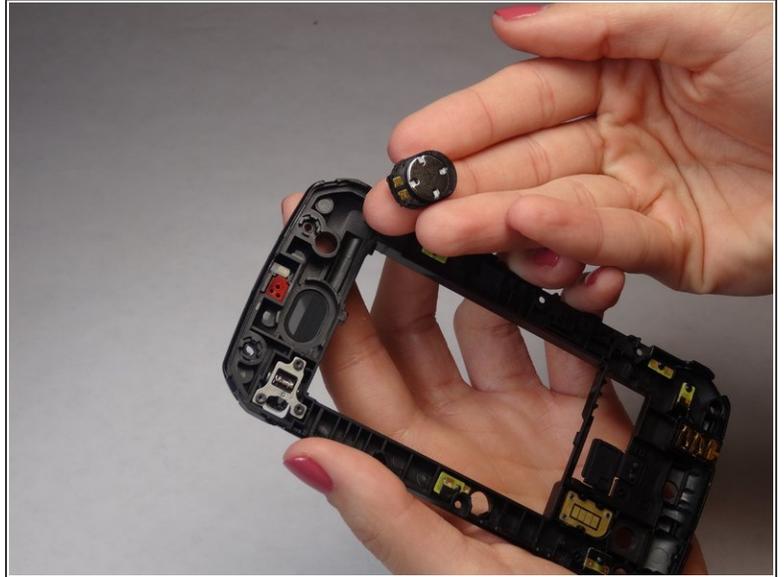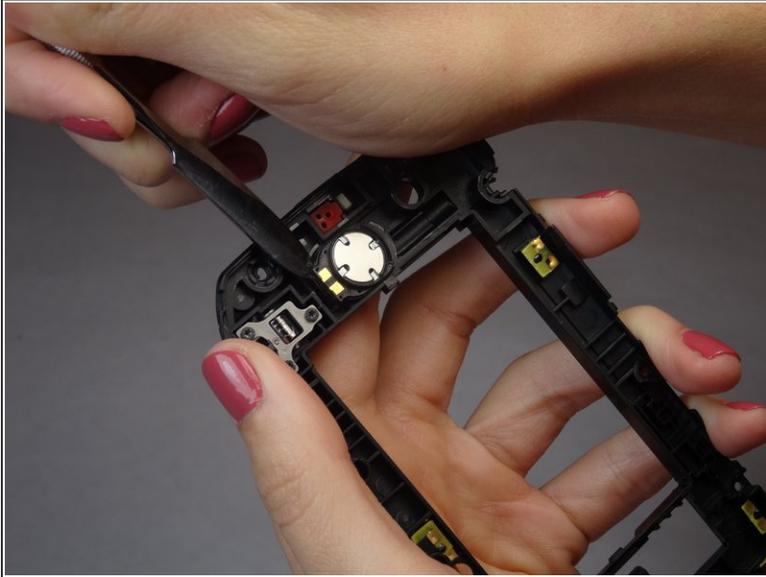

⚠ The speaker is attached to the midframe with adhesive. Remove carefully.

- Use the Metal Spudger to get between the speaker and the midframe and slowly lift the speaker upwards.
- Remove the speaker from the midframe.

To reassemble your device, follow these instructions in reverse order.