




Zeki Droid Tablet Front Screen Replacement

Use this guide to replace the screen on the...

Written By: Kyla

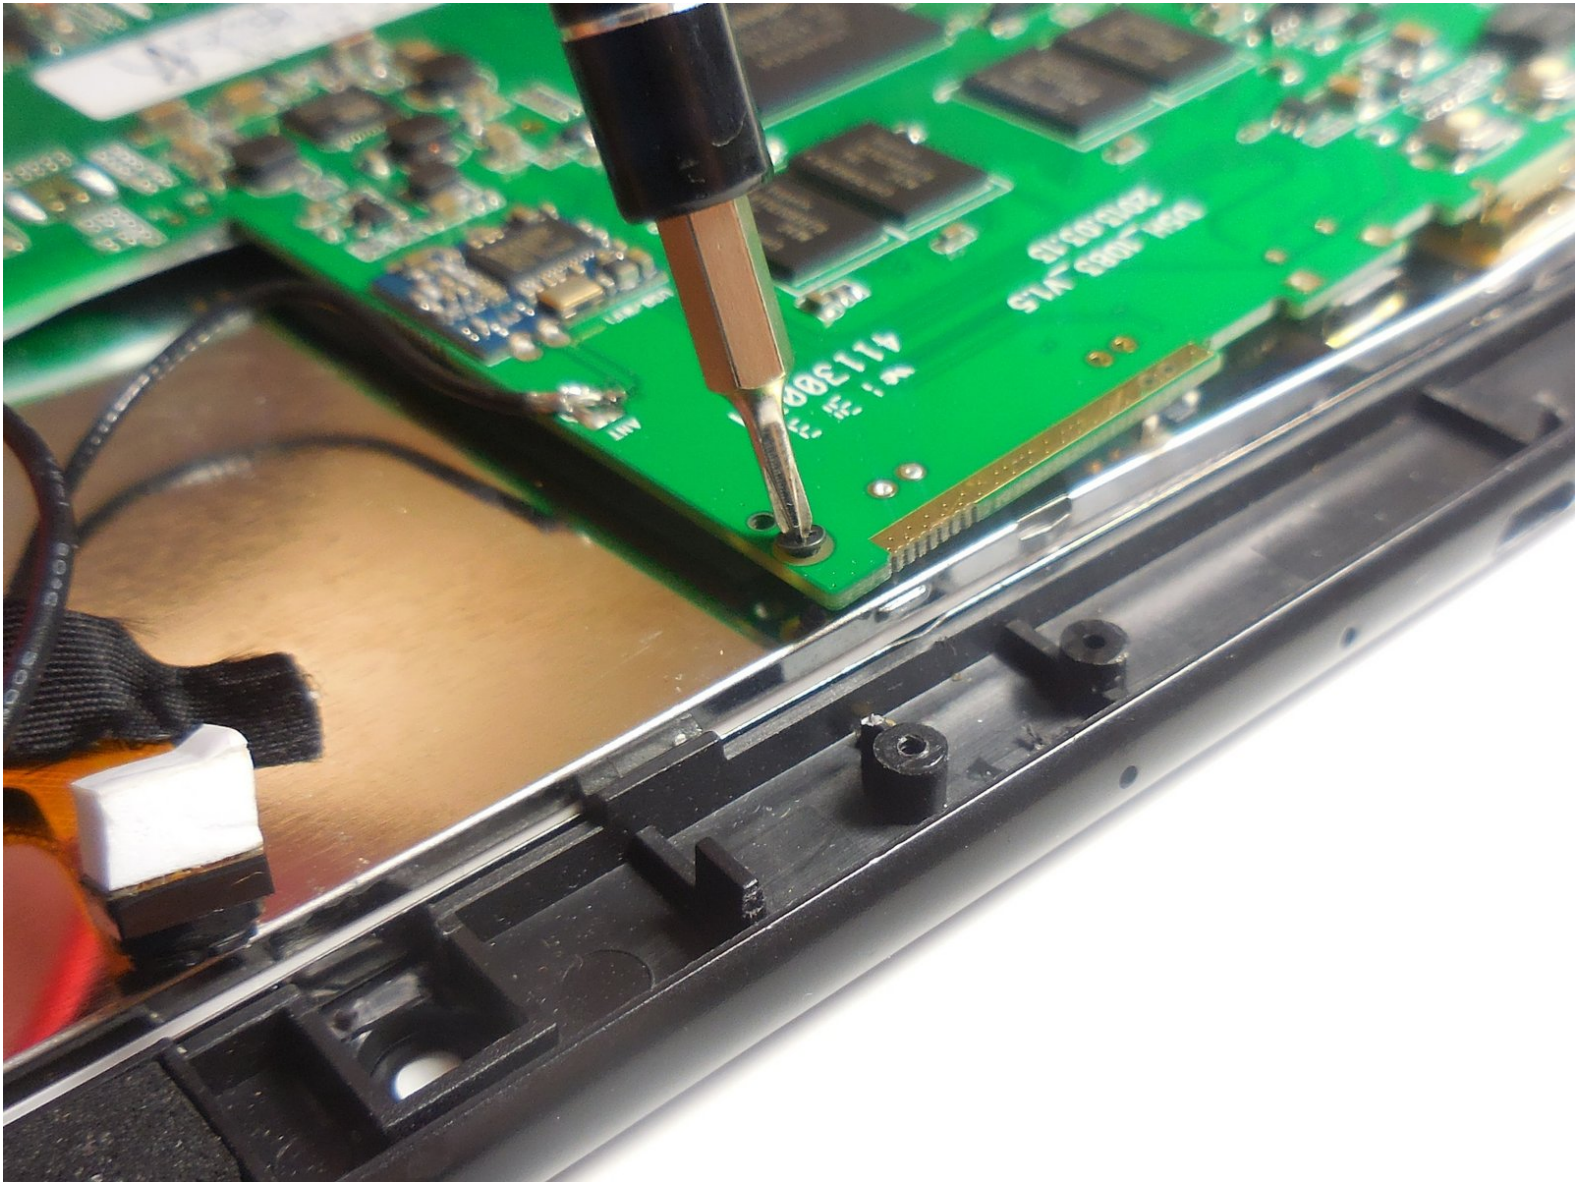

INTRODUCTION

Use this guide to replace the screen on the Zeki Droid TBDC1093B.

Follow these instructions to disassemble the Zeki Droid and gain access to the broken screen. To prevent injury, I recommend following [this guide](#) to reinforce the broken glass.



TOOLS:


- [Tweezers](#) (1)
 - [Spudger](#) (1)
 - [iFixit Opening Tool](#) (1)
 - [Phillips #000 Screwdriver](#) (1)
-

Step 1 — Back Casing




- Remove the back casing by slowly popping each tab out with a plastic opening tool.

Step 2

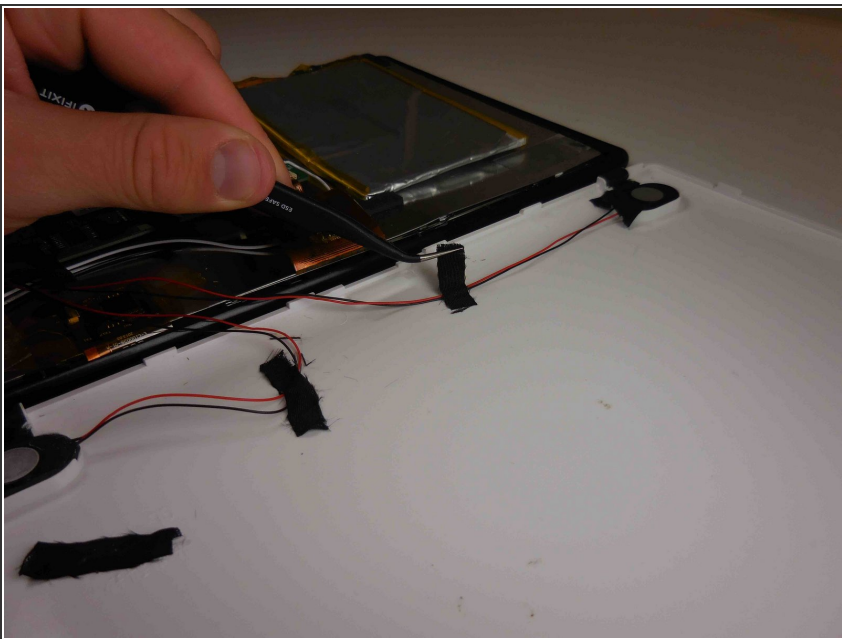


- Remove the tapes one by one from the connecting wires with tweezers.

Step 3

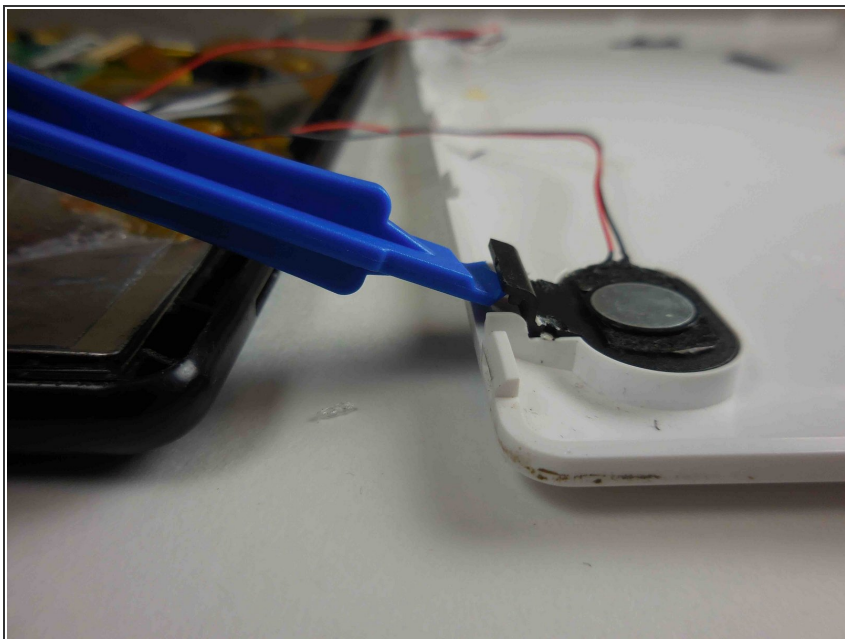


- Remove the black clips from both sides of the casing with a plastic opening tool.
- ⓘ The clips should pop off separate from the speakers.

Step 4

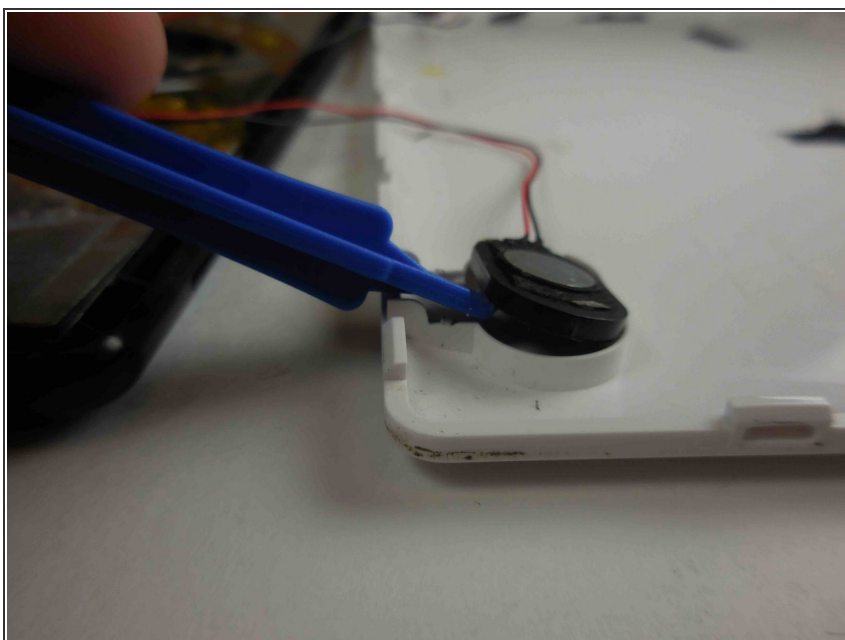


- Remove the speakers from the back casing.
- ⚠ Do not tug on the speakers because they are connected to fragile wires.

Step 5

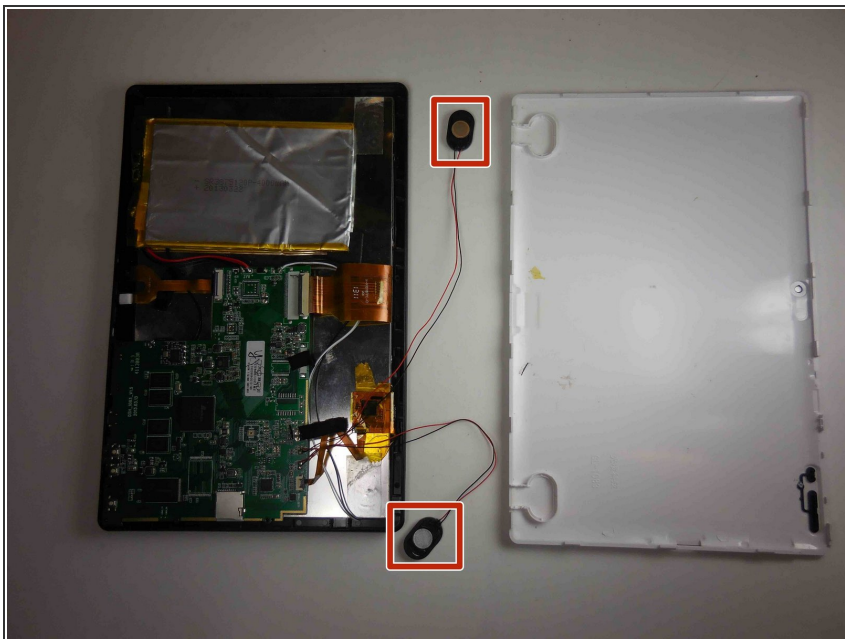


- Pull the speakers away from the back casing carefully.

Step 6 — Front Screen

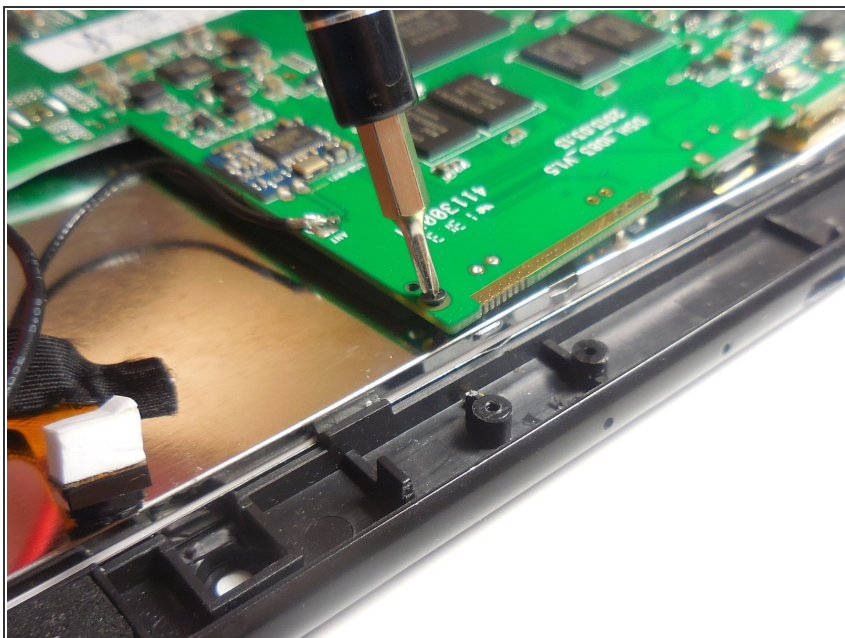


- Detach the motherboard from the framing by removing the four screws using a Phillips #000 screwdriver.

Step 7

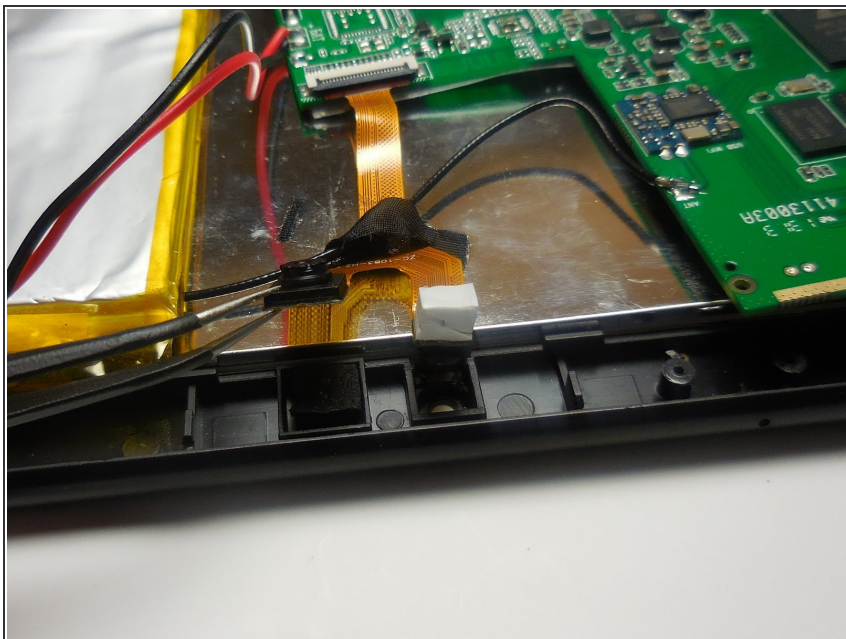


- Lift the camera and flash components from their fittings using tweezers.

Step 8

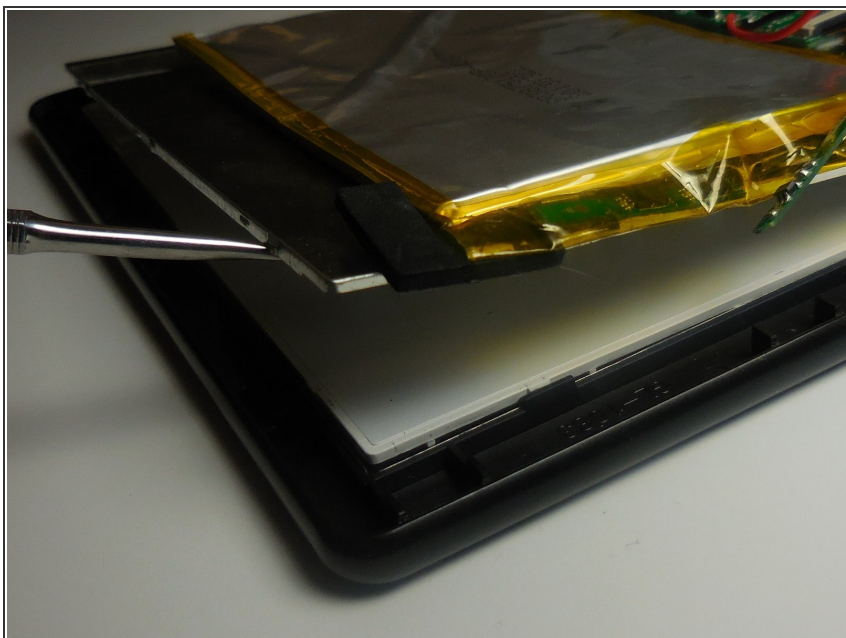

- Lift the metal framing to reach the components at the front of the device.
- ⚠ Do not pull the framing completely off. There is a ZIF connector holding it in place.

Step 9

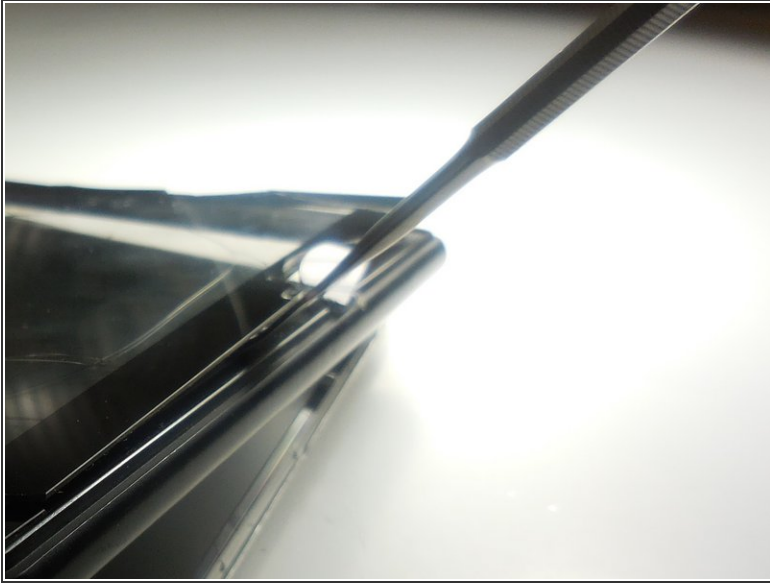

- Push the screen forward to remove.

To reassemble your device, follow these instructions in reverse order.