



# Acer Iconia Tablet A100 Screen Cover Glass Replacement

A step-by-step guide for replacing the Acer Iconia A100 tablet screen.

Written By: Omar Acosta



---

## INTRODUCTION

This guide has step-by-step information for replacing an Acer Iconia tablet A100 screen's cover glass. The guide provides necessary tools for the replacement of the tablet. If anyone is inquiring on how to fix a screen, this is the place to go.



### TOOLS:


- [iFixit Opening Tools](#) (1)
-

## Step 1 — Screen Cover Glass




- Begin with the screen facing in the upward position.

## Step 2

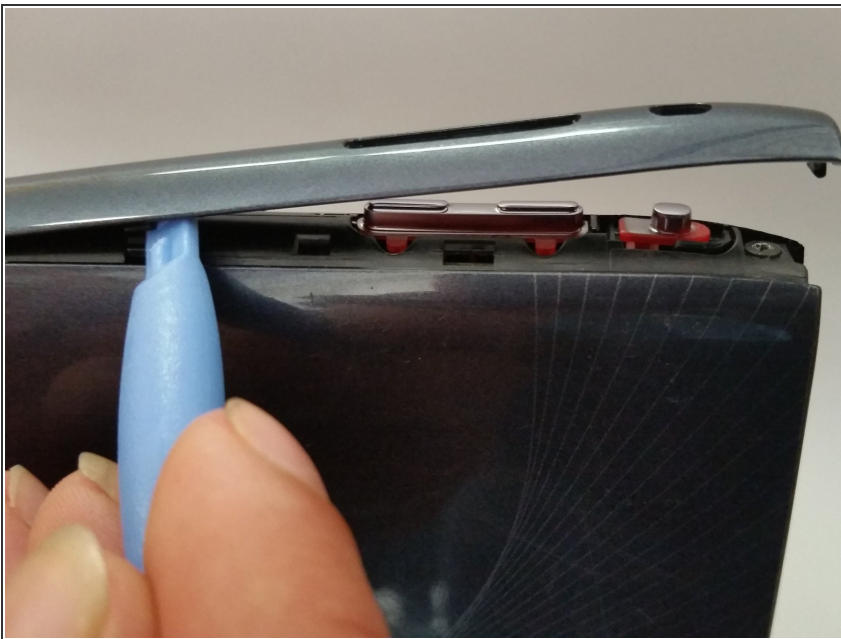

- Remove the four side pieces of the tablet.
- Start with either side and work your way around the tablet.

### Step 3

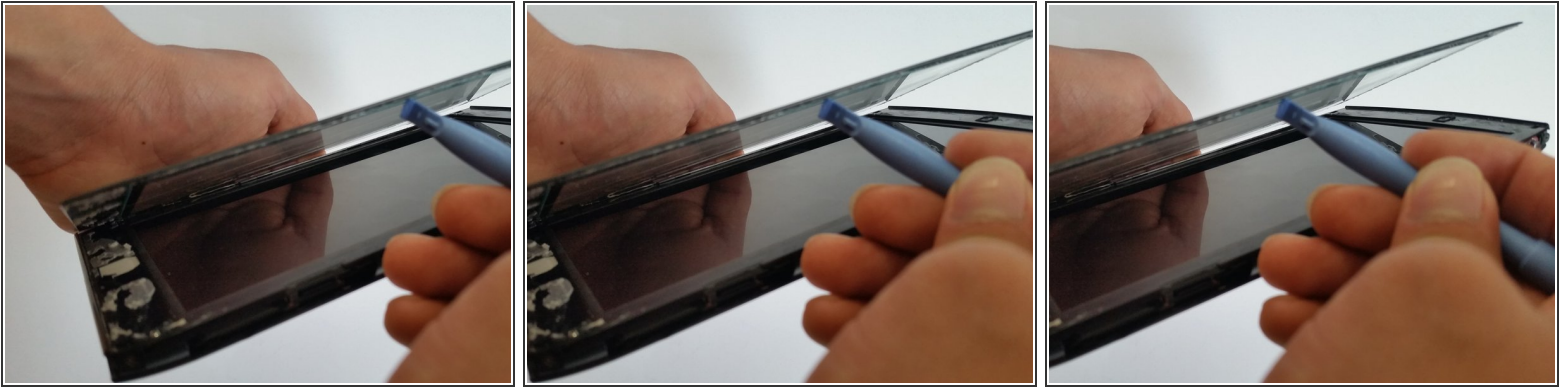

- Separate the screen from the device with a plastic opening tool (four sides in total).
- Start with a plastic opening tool along the top perimeter of the tablet, the thin line, and remove the screen.

### Step 4



- Grab the new screen, and place on top of the tablet.
- Position it to where everything is aligned correctly.

## Step 5



- Put the four side pieces back in its original place.

To reassemble your device, follow these instructions in reverse order.