



# Disassembling Nokia 2366i Rear Case

Written By: Jonathan Newman



---

## INTRODUCTION

This guide is a step by step procedure to disassemble the base of the phone. It is the preliminary step in gaining access to the inner components of the Nokia 2366i.

---

### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
  - [Spudger](#) (1)
  - [T6 Torx Screwdriver](#) (1)
-

## Step 1 — Battery



- Turn off the phone.
- ❗ Position the phone so that the back side is in view.

## Step 2



- Apply pressure on the cover while simultaneously sliding the cover downward.
- Remove the back battery cover.




### Step 3



- Insert the spudger between the base of the phone and the phone battery.
- Position the phone so that the battery won't fall out of the phone.
- Carefully lift the battery out of the phone.
- ⓘ The battery lifts out of the phone easily.

### Step 4 — Rear Case

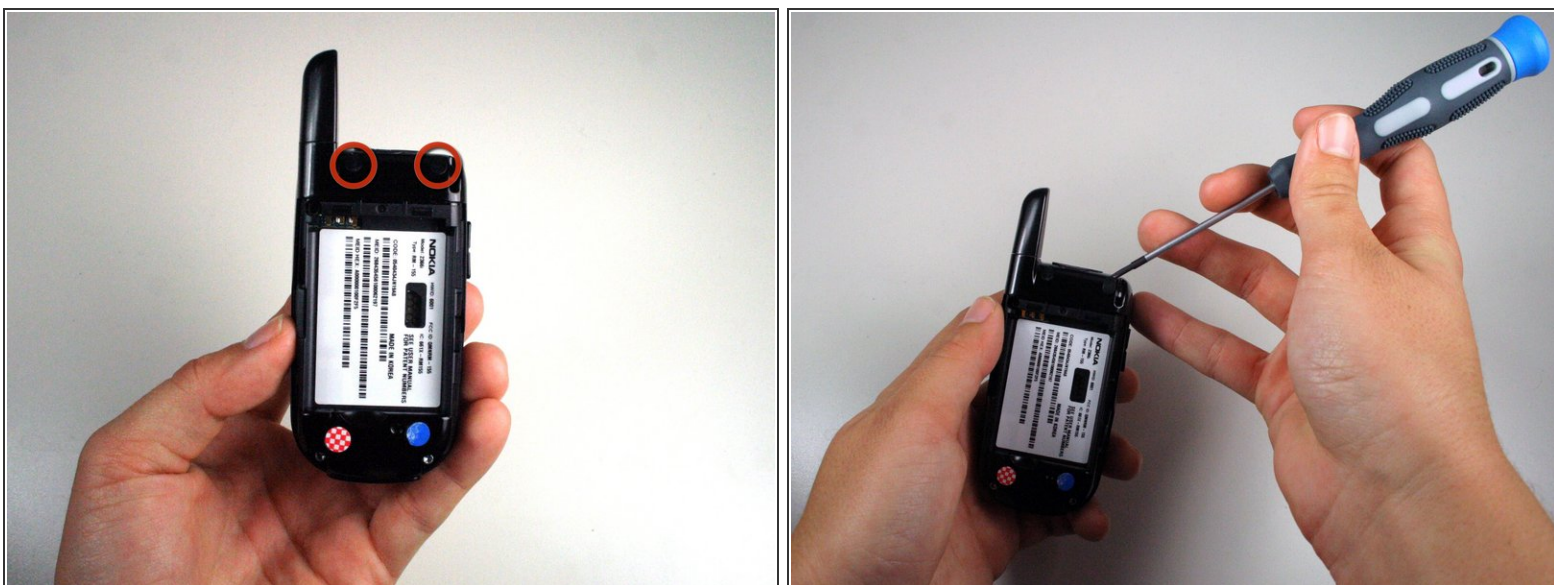

- Use a Phillips #00 screwdriver or your fingers to remove the rubber tabs at top back of the phone.

## Step 5



- Remove four 5mm screws from the back of the phone using a T6 Torx screwdriver:
  - 2 screws at the bottom
  - 2 screws at the top

## Step 6



- ⓘ Rotate the phone clockwise so the edge is facing you.
- Insert the spudger in tabs between the outer casing and the inside frame.
- Slide the spudger upwards.
- ⓘ This will remove the rear case of the phone.



## Step 7



- The phone should now be in two different sections.
- 1) The rear case of the phone.
- 2) The motherboard and the rest of the phone.

To reassemble your device, follow these instructions in reverse order.