




# LG G4 Front Camera Replacement

If the front camera on your LG G4 is not working properly, this guide will show you how to replace it.

Written By: Austin Stratton

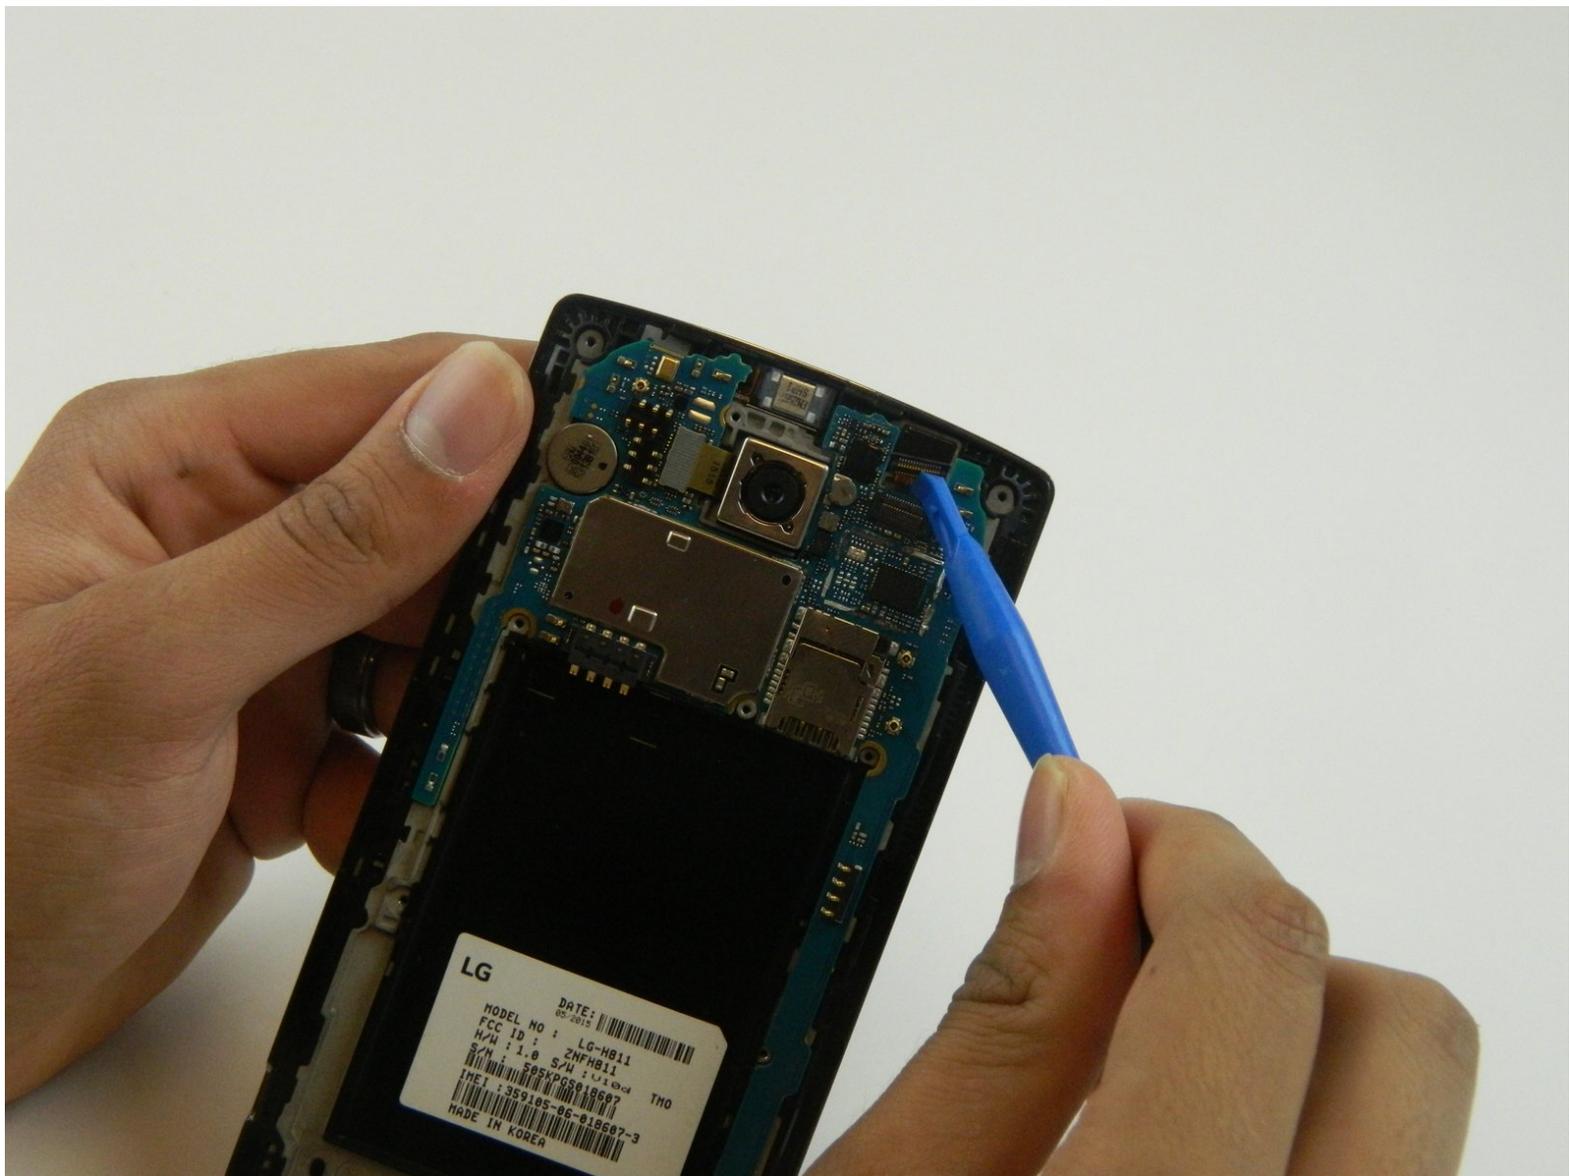

 **TOOLS:**

- [Phillips #00 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)

 **PARTS:**

- [LG G4 Front Camera](#) (1)

## Step 1 — Back Cover



**⚠** Make sure the phone is powered off.


- Remove the rear cover by placing the plastic opening tool in the groove on the bottom left side of the LG G4 and gently prying up.

## Step 2




- Place the plastic opening tool at the bottom edge of the battery and lift up. Carefully remove battery with your hands.

### Step 3

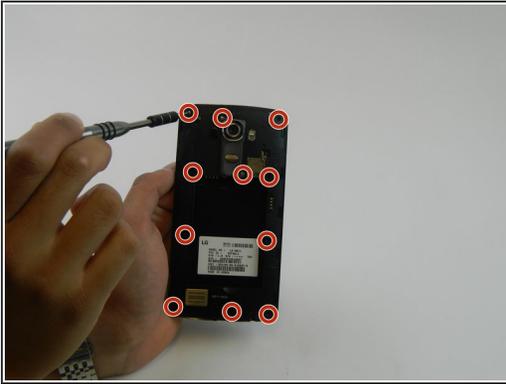

- Remove the **eleven** 3.9 mm Phillips #00 screws found at the back of the phone.

### Step 4

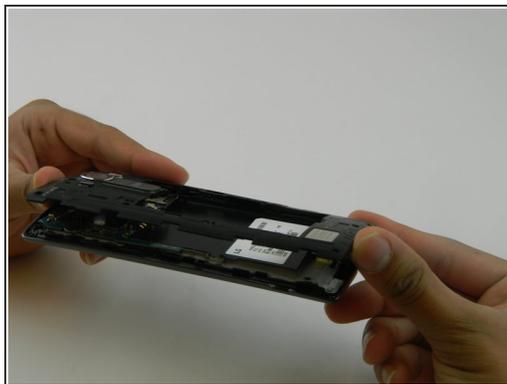

- Once all the screws have been removed, place the plastic opening tool in the lower left corner and firmly lift the cover up.
- Detach the cover with your fingers

## Step 5 — Front Camera



- Detach the Front Camera ribbon cable located on the top right corner of the back of the phone by gently lifting it up with a plastic opening tool. Remove the front camera.

 Be careful when removing the cables and pulling out the front camera to avoid tearing the attached cable.

To reassemble your device, follow these instructions in reverse order.