




Lenovo Yoga 2 Pro Battery Replacement

This guide will walk you through the necessary steps to replace the battery in your computer.

Written By: Thomas Simko

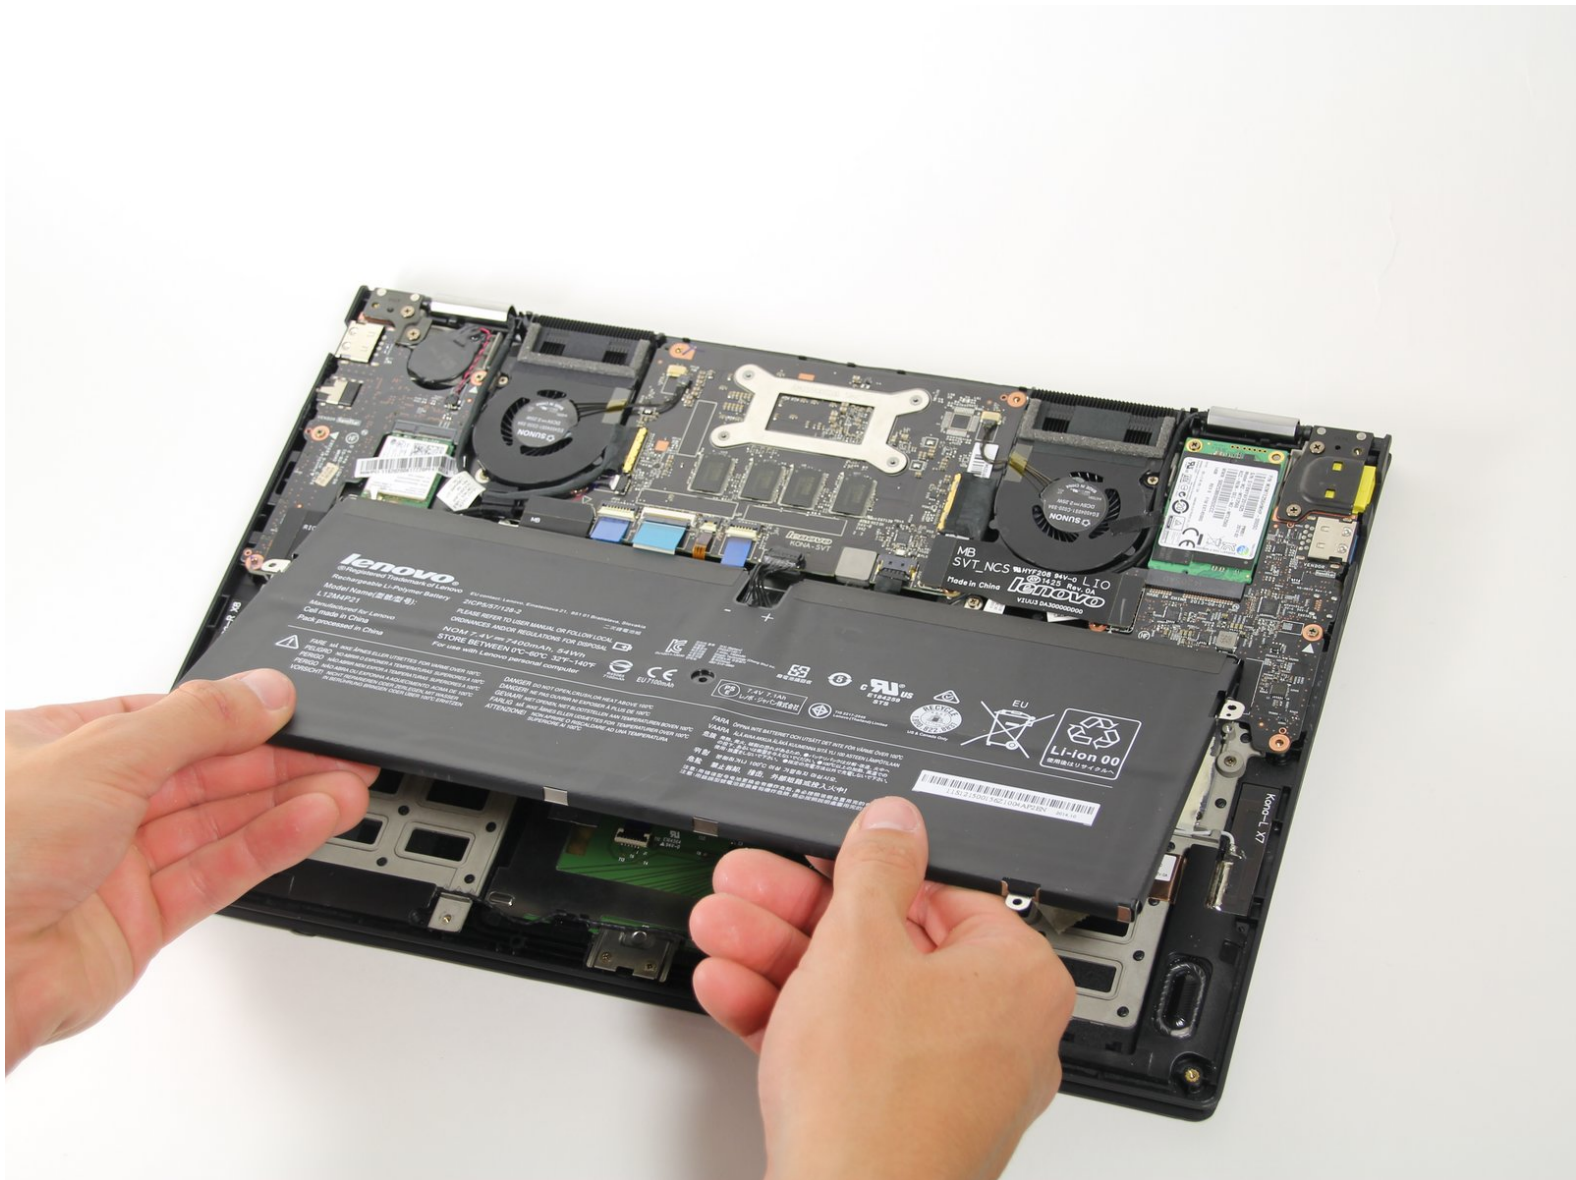

INTRODUCTION

Use this guide to replace the battery in your Lenovo Yoga 2 Pro.



TOOLS:


- [Phillips #00 Screwdriver](#) (1)
- [Tweezers](#) (1)



PARTS:

- [Lenovo Yoga Pro 2 Replacement Battery](#) (1)

Step 1 — Battery

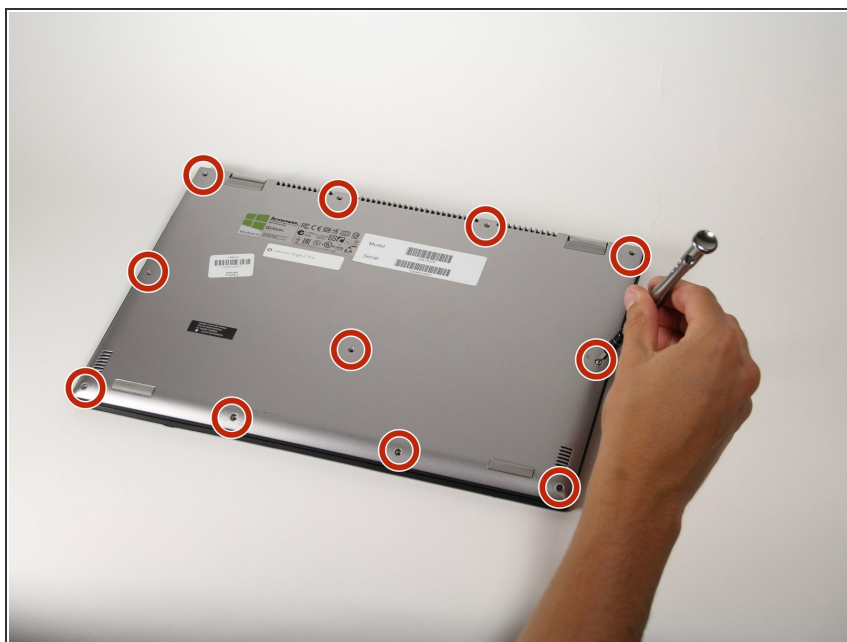


- ⚠ Please ensure that the laptop is turned off before beginning.
- Using a Phillips #00 screwdriver, remove the eleven 1/4" screws from the back of the laptop.

Step 2




- Gently unclip and lift off the back cover.

Step 3

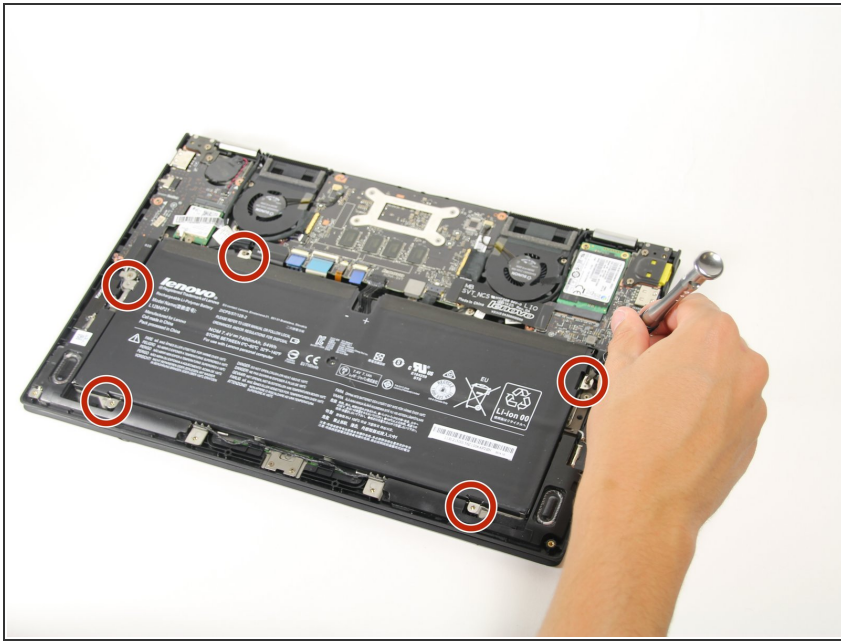


- Using a Phillips #00 Screwdriver, remove the five 5/16" screws surrounding the battery.

Step 4

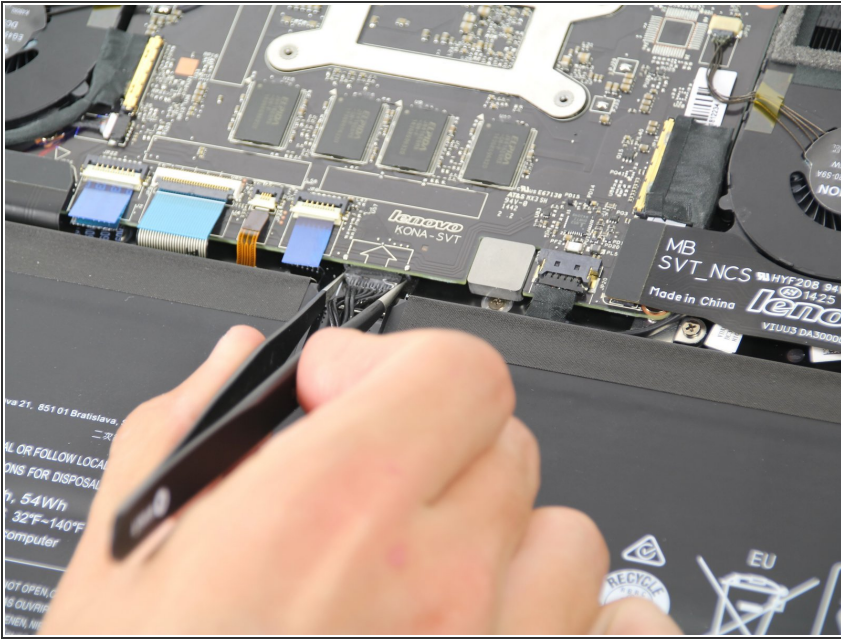

- Using either tweezers or your fingers, disconnect the black battery cable by pinching either side of the connector and pulling towards the battery.

Step 5

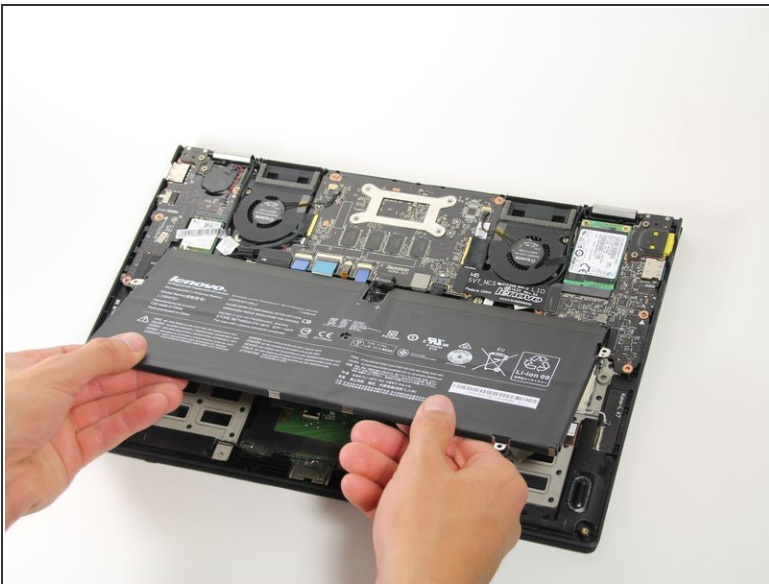

- Remove the battery from the computer.

To reassemble your device, follow these instructions in reverse order.