



HP Envy 23-d060qd TouchSmart Back Panel Replacement

This guide will demonstrate how to properly remove the back panel on the HP Envy 23-d060qd TouchSmart. This guide is a prerequisite for all other guides.

Written By: Zachary Dicks





TOOLS:


- [Phillips #2 Screwdriver](#) (1)
-

Step 1 — Back Panel



- Use your hands to unclip the plastic snaps on the back panel of the device.

Step 2

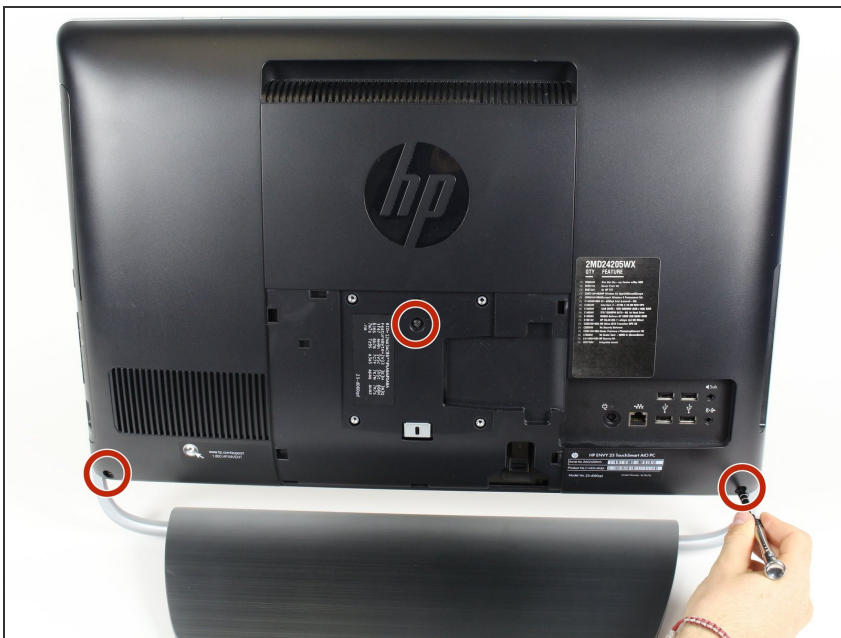

- Remove the three 11.5mm PH2 screws from the back panel.
- ⓘ The screws will not fall out of the back panel, but they will unscrew to release the back panel.

Step 3



- Now, take the back panel off by pulling at it gently with your hands.

To reassemble your device, follow these instructions in reverse order.