



Dell Inspiron 13-7352 Battery Replacement

This guide will help user remove battery to be able to complete most other device repairs safely and user will learn how to remove and replace battery.

Written By: Mikinna Martin



INTRODUCTION

This guide shows how to remove and replace a worn out battery for the Dell Inspiron 13-7352 laptop.



TOOLS:


- [iFixit Opening Tools](#) (1)
- [Phillips #0 Screwdriver](#) (1)



PARTS:


- [Dell Inspiron 13-7352 Laptop Battery](#) (1)

Step 1 — Battery

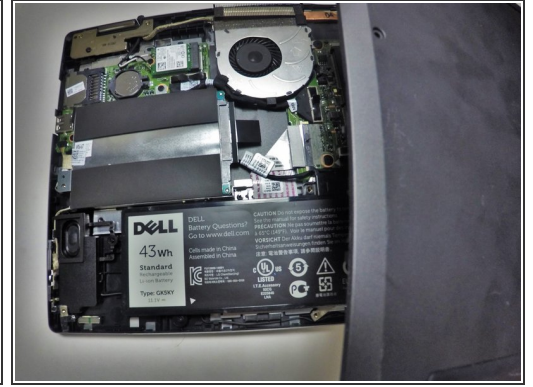

- i** Before you begin, be sure to turn off your laptop and unplug it from the outlet.
- Use a Phillips screwdriver to remove the ten 7.5mm screws that securing the back panel.
 - Use the plastic opening tool to pry up and loosen the back panel.
 - Remove the back panel.

Step 2

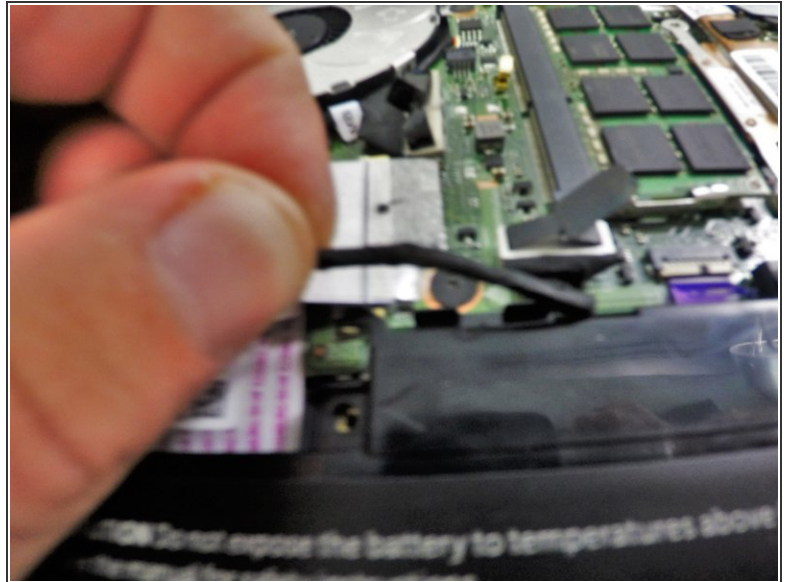

- Use a Phillips screwdriver to remove the two 3 mm screws securing the battery.
- Unclip the hard drive wire from the battery.

Step 3



- Gently remove the battery from the rest of the device.

To reassemble your device, follow these instructions in reverse order.

For optimal performance, after completing this guide, [calibrate](#) your newly installed battery.

Take your e-waste to an [R2 or e-Stewards certified recycler](#).

Repair didn't go as planned? Try some [basic troubleshooting](#), or ask our [Answers community](#) for help.