


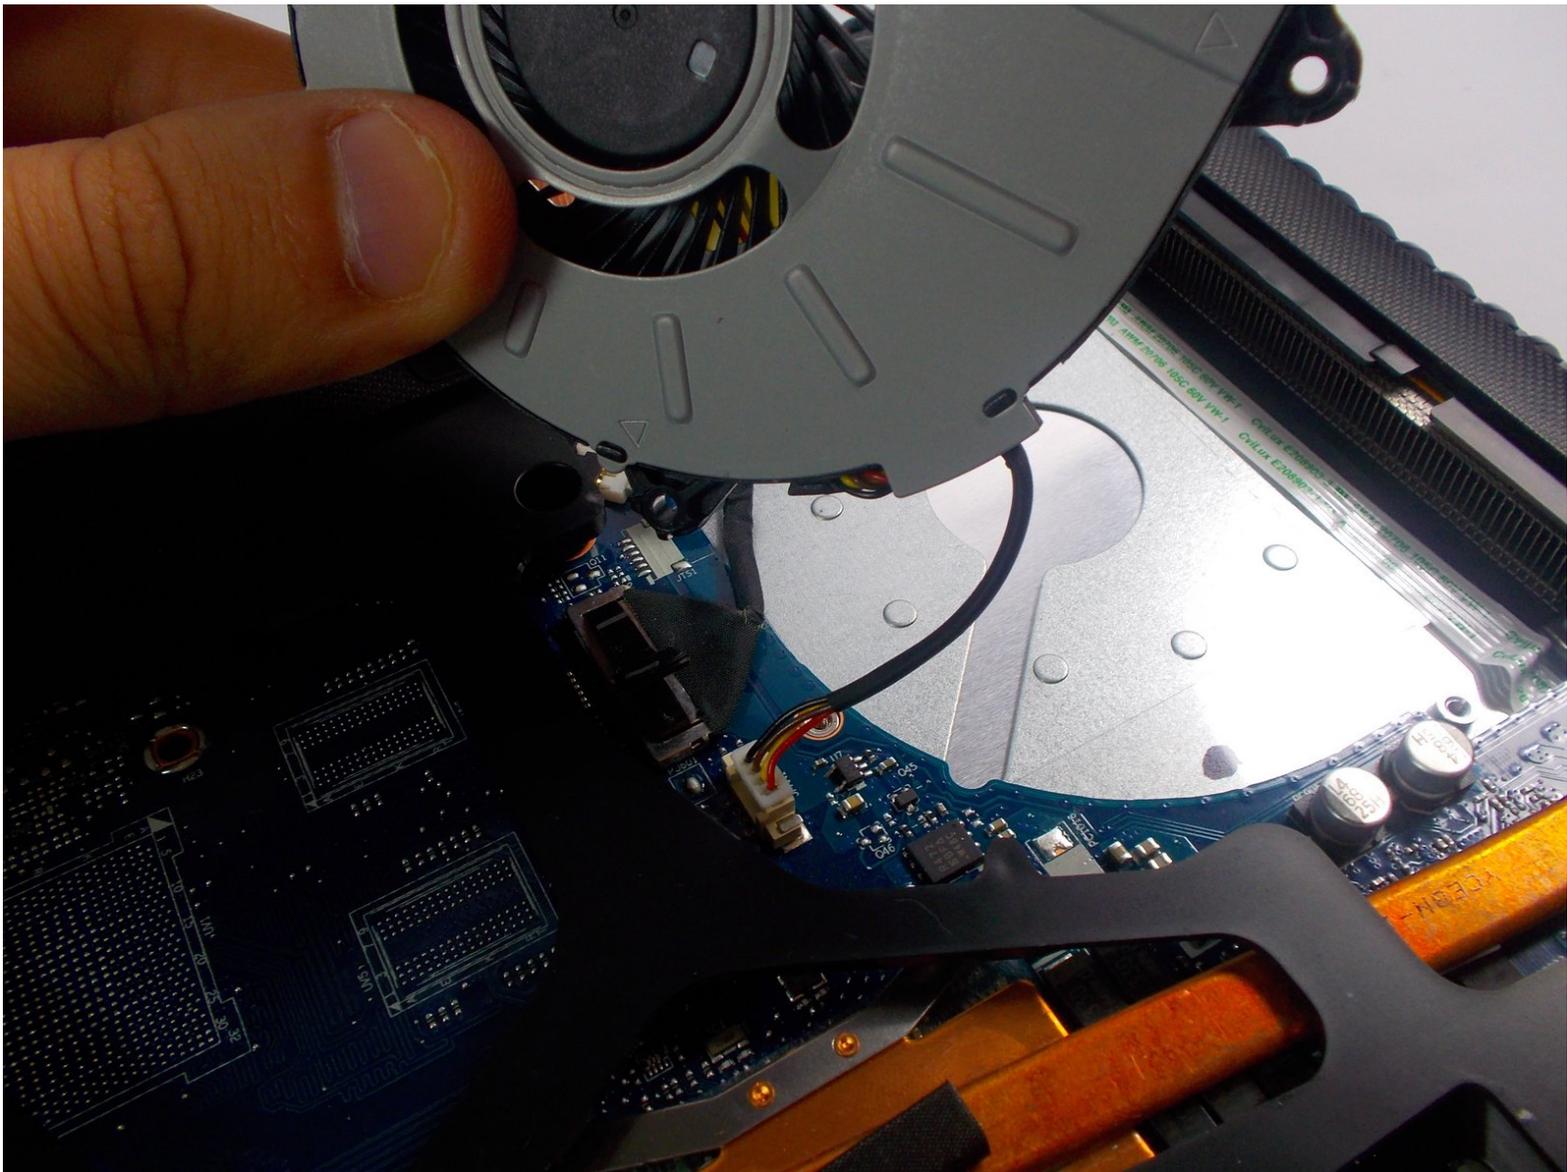

# Lenovo IdeaPad G50-45 Fan Replacement

After reading this guide you should be able to replace the fan in a Lenovo IdeaPad G50-45.

Written By: Robert Muir



## INTRODUCTION

If you need to replace the fan on a Lenovo IdeaPad G50-45 then this guide will walk you through that process.



### TOOLS:

- [Phillips #2 Screwdriver](#) (1)



### PARTS:


- [Lenovo IdeaPad G50-45 Fan Replacement](#) (1)

## Step 1 — Fan




- Safely flip the device upside down and use the Phillips head screwdriver to remove the 3 screws at the bottom of the device which are circled.

## Step 2

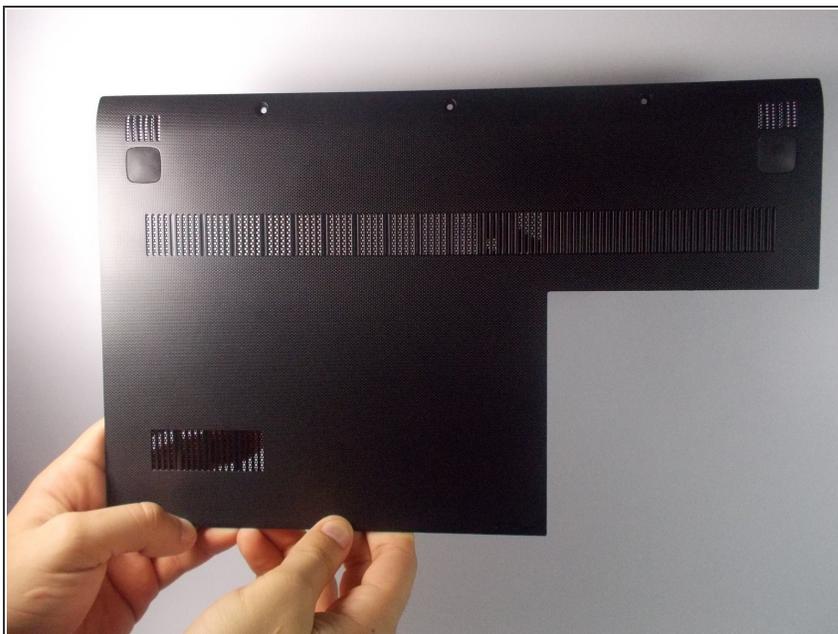

- Slide, do not lift, the bottom panel off once the 3 screws are off.

### Step 3

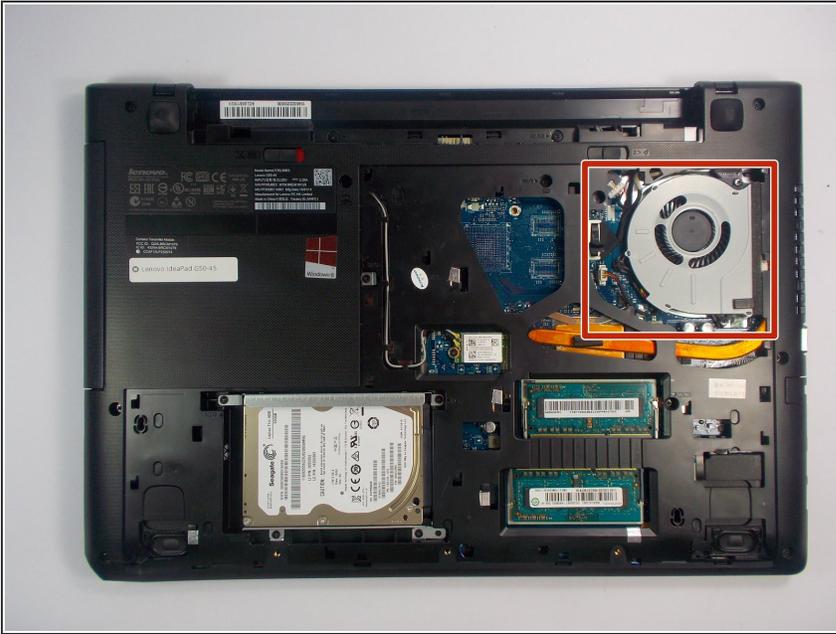


- Locate the fan in the upper right corner above the orange bar and appears as a silver semicircle.

### Step 4



- Remove the 3 screws attaching the fan to the device.

## Step 5

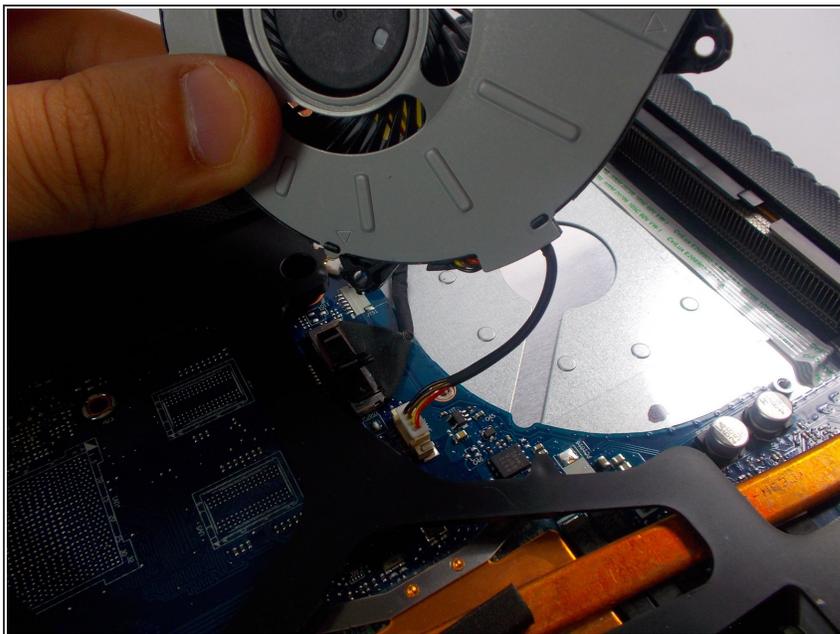

- Once the screws are removed slowly lift the fan out, there will be a thin wire connected to the device and fan still, Firmly grasp the white end of the wire where the wire splits into 2 and pull it out.

## Step 6



- The fan should be removed now and appear as so.

To reassemble your device, follow these instructions in reverse order.