



Hipstreet Titan Plus Speaker Replacement

This guide demonstrates how to replace a Hipstreet Titan Plus speaker.

Written By: Kari Cannon



INTRODUCTION

This speaker replacement guide lists steps necessary to replace the speaker. Replacing the speaker is a moderate three step process using the necessary tools.

TOOLS:


- [iFixit Plastic Opening Tool](#) (1)
 - [Spudger](#) (1)
 - [Soldering Iron](#) (1)
-

Step 1 — Speaker



- Use the plastic opening tools to pry the screen from the back of the device.
- Gently flip the back over without damaging the wire connecting the speaker to the rest of the device.

Step 2

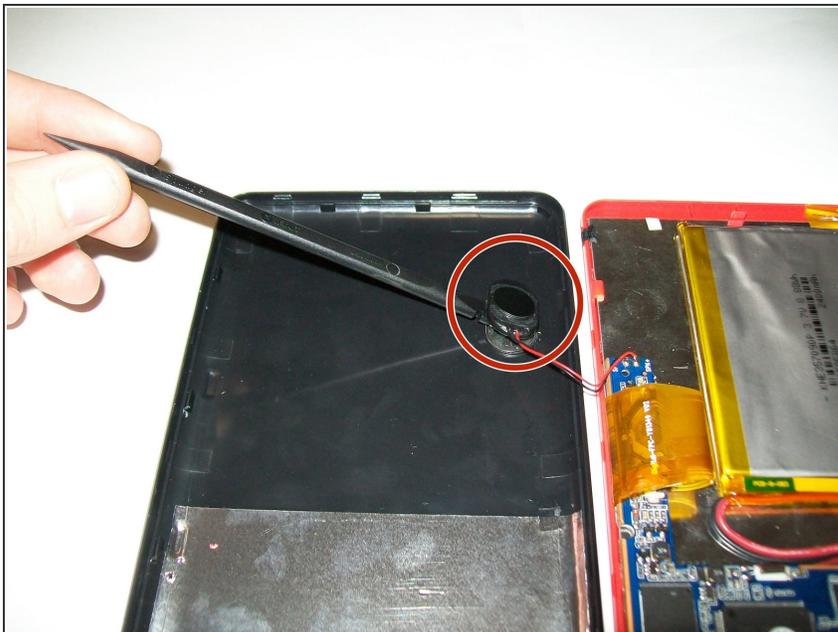

- Use Spudger to remove speaker from back casing of the device.

Step 3



- Use Soldering Iron to heat up the ends of wires connecting the speaker to the motherboard until they come free.
- Remove the speaker from the device.

To reassemble your device, follow these instructions in reverse order.