




AYL SoundFit Speaker Grill Replacement

Replace the plastic speaker grills in the AYL SoundFit.

Written By: Taylor Shuler

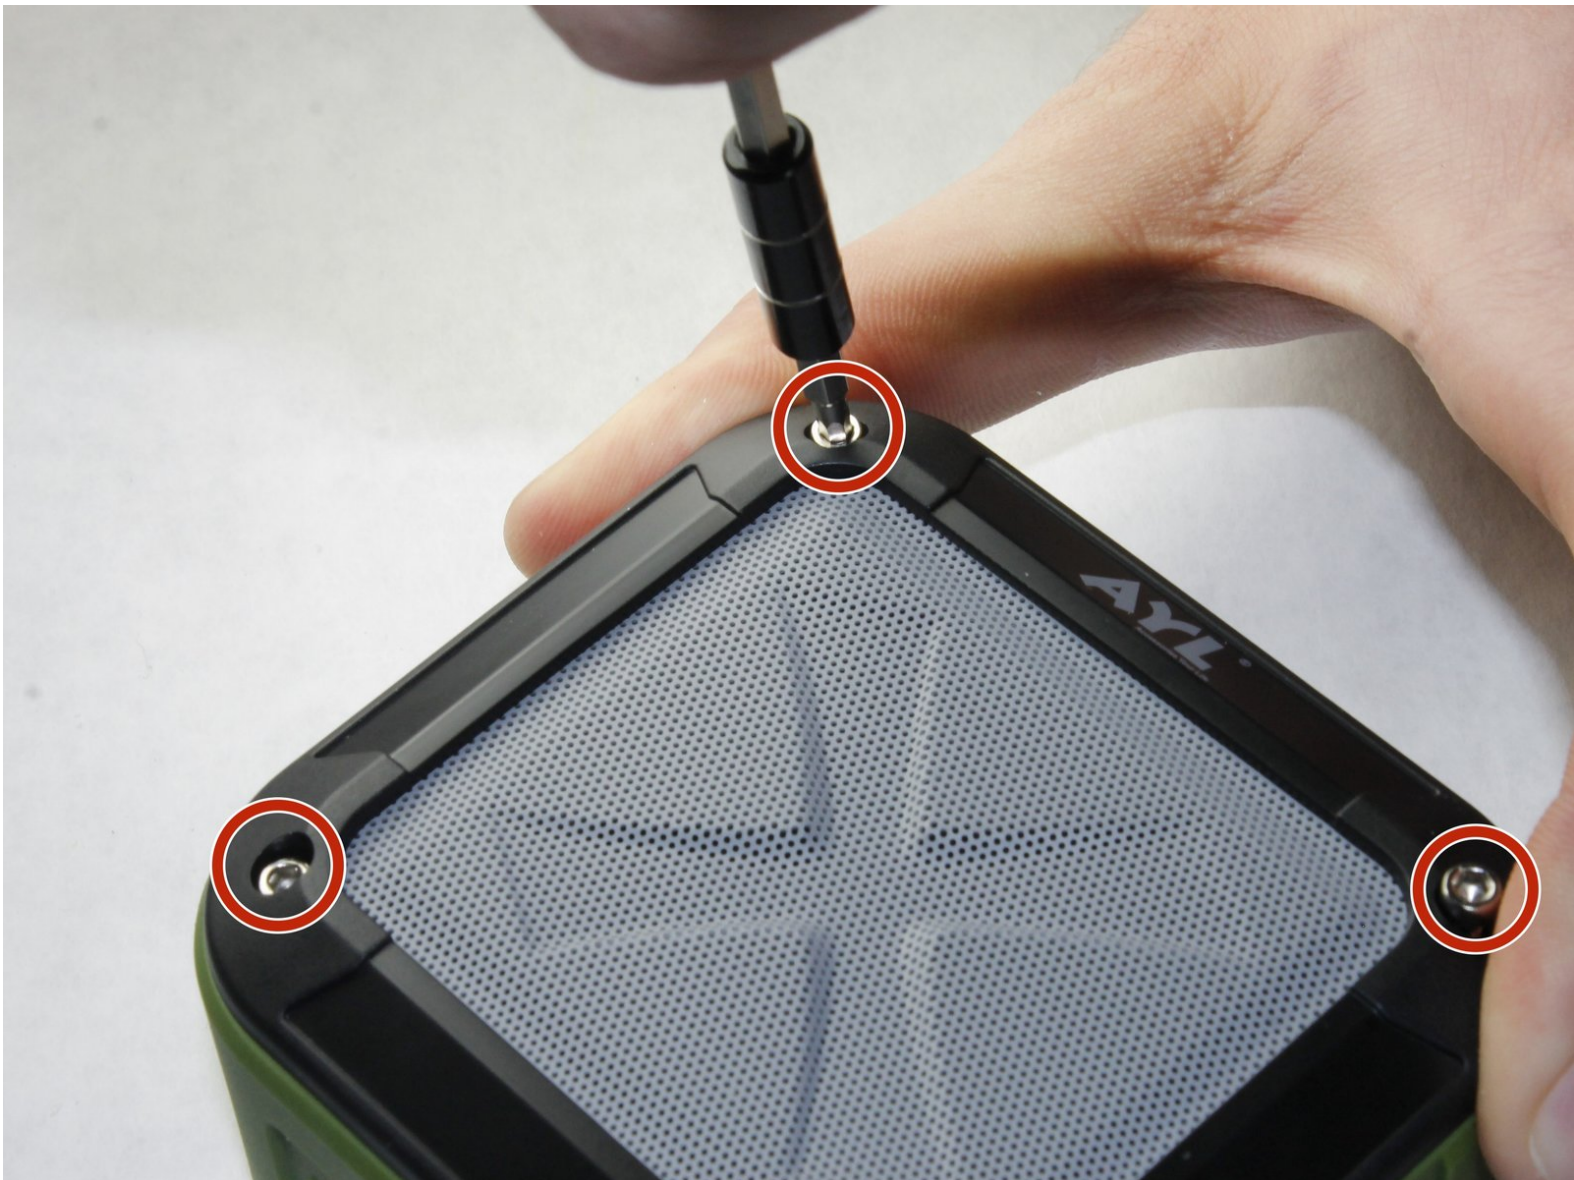


INTRODUCTION

This guide will teach you how to remove damaged speaker grills in the AYL SoundFit. With just a screwdriver, the speaker grills can be removed and replaced in a few simple steps.

TOOLS:

- [2.5 mm Hex Bit](#) (1)
 - [Spudger](#) (1)
-

Step 1 — Speaker Grill

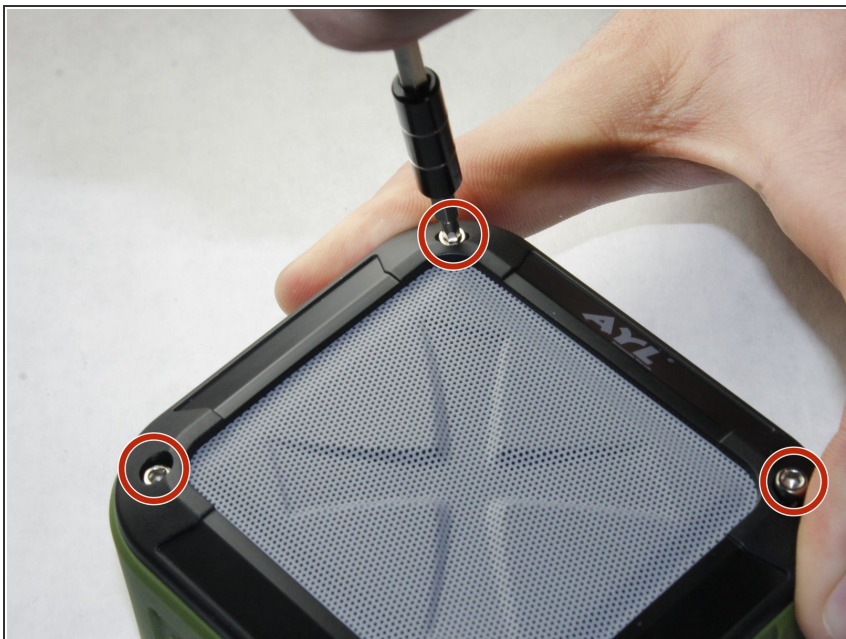


- Remove each of the 4 screws on the front cover using the 2.5mm Hex Bit in the screwdriver.

Step 2



- Remove the cover with a spudger.

Step 3

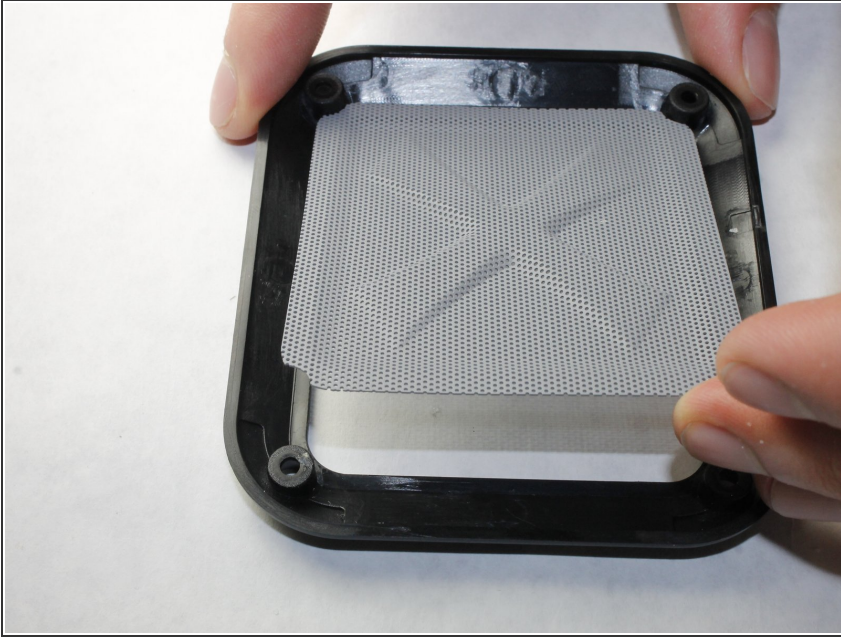

- Remove the speaker grill.
- ★ During reassembly, be sure to place the replacement grill in the same position as the original.

To reassemble your device, follow these instructions in reverse order.