




HTC Touch Pro CDMA Screen Replacement

A step-by-step guide on how to replace the HTC Touch Pro Screen.

Written By: Zhaowei Zhang

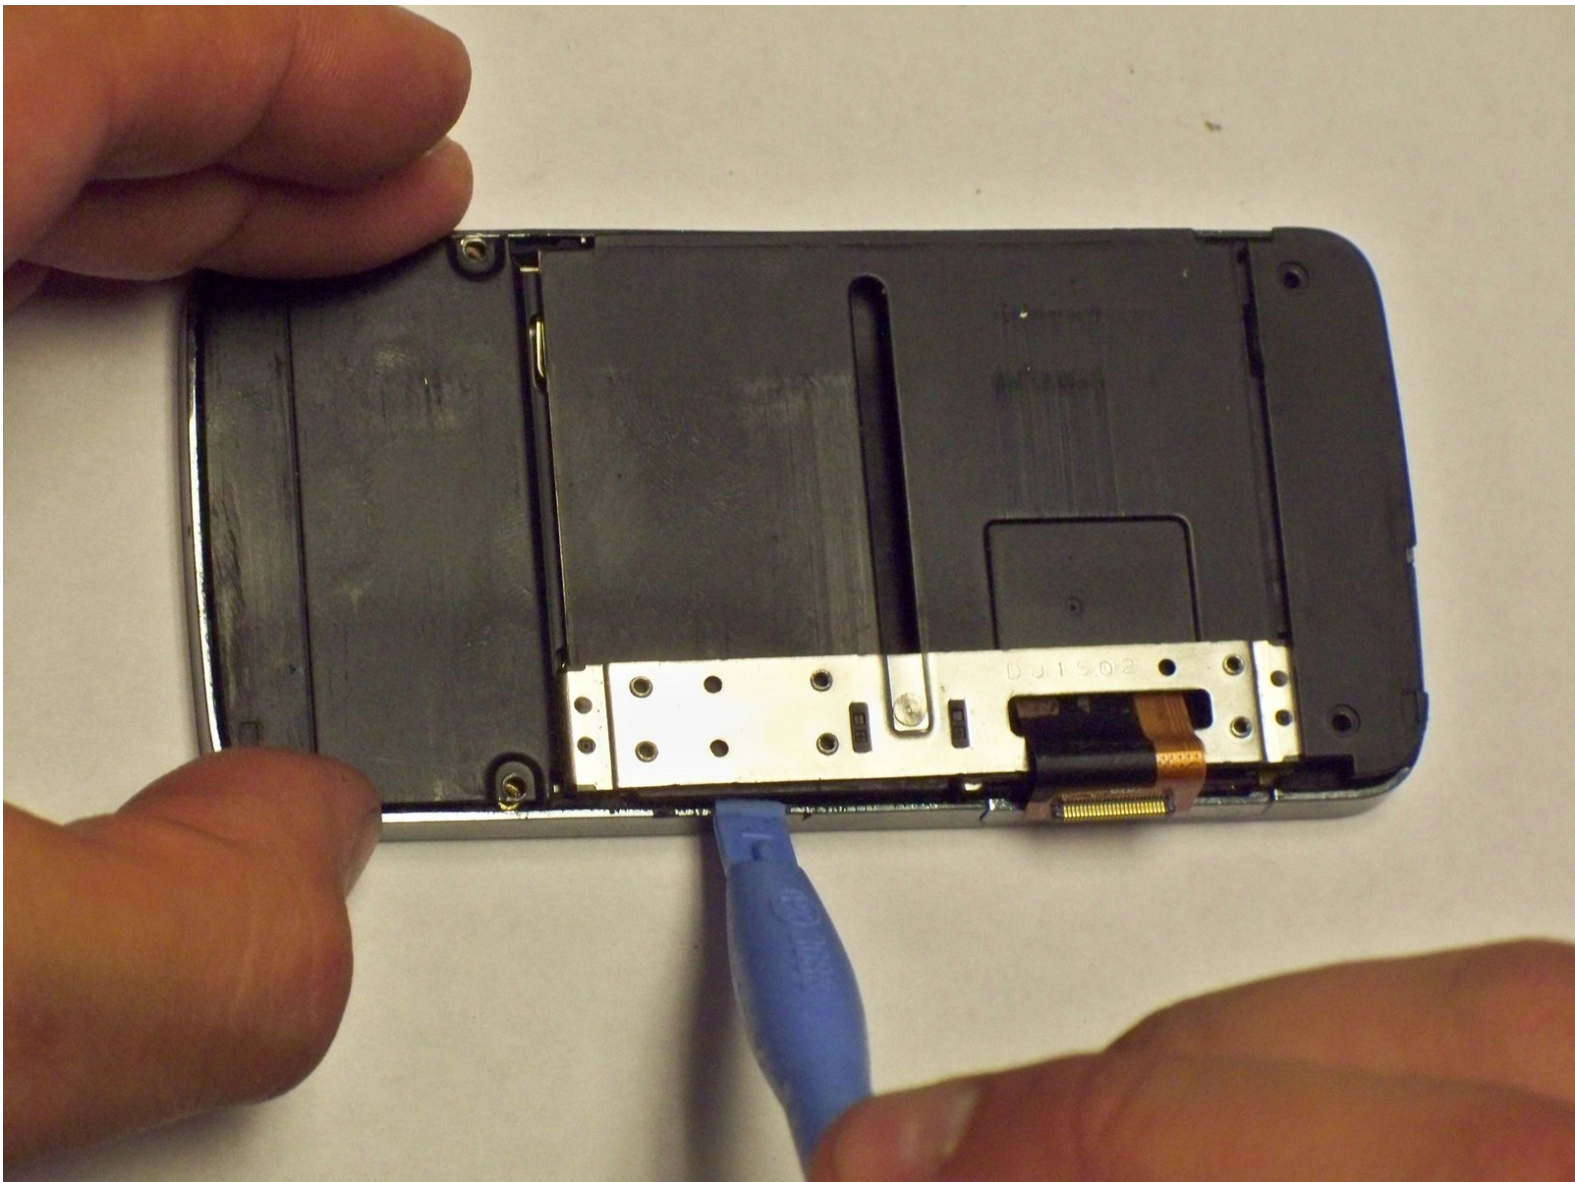

INTRODUCTION

This easy to follow guide will show you in the ins and outs on how to repair your HTC Touch Pro.



TOOLS:


- [Phillips #00 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
 - [T6 Torx Screwdriver](#) (1)
-

Step 1 — Battery




- First, gently press on the back plate and push down toward the camera.

Step 2

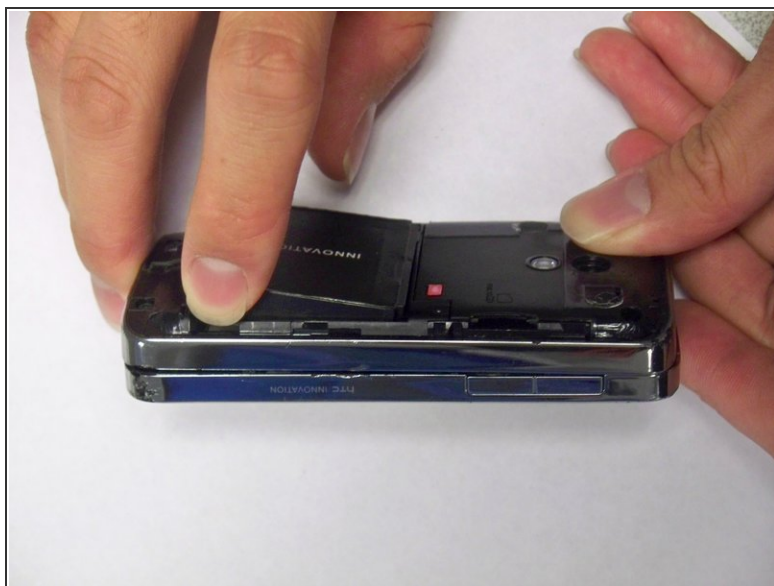


- Use your finger to lift up the edge of the battery.

Step 3 — USB Logic Board

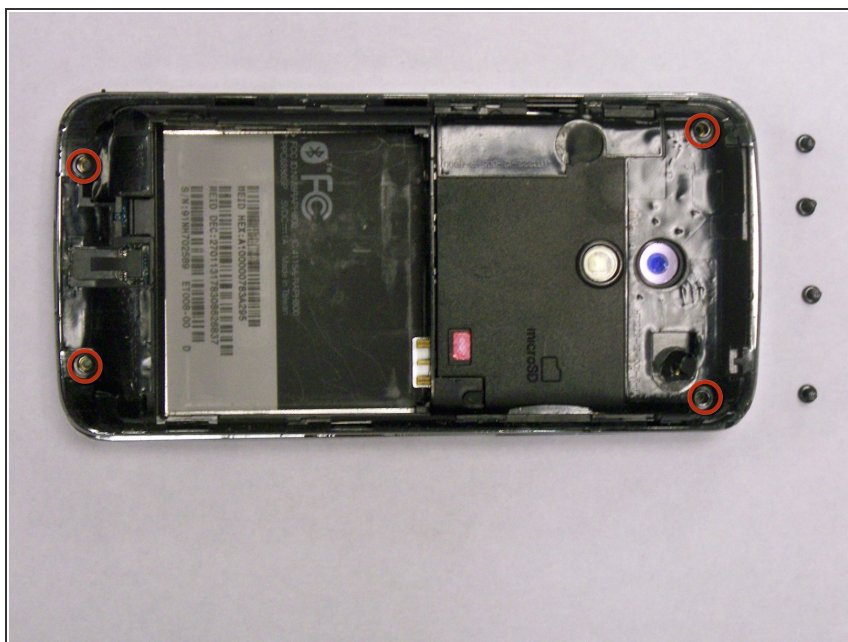


- Remove the 4 screws using the T6 screw driver.

Step 4

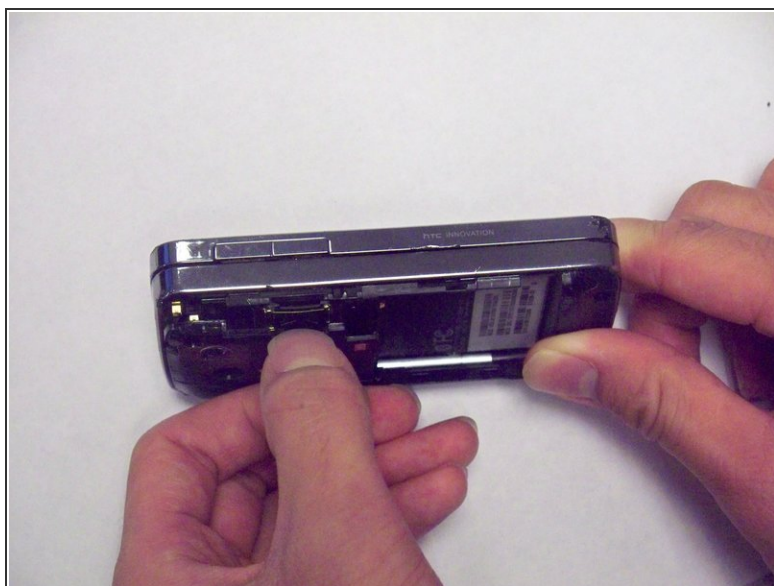


- Lift the plastic cover near the memory card slot.

Step 5

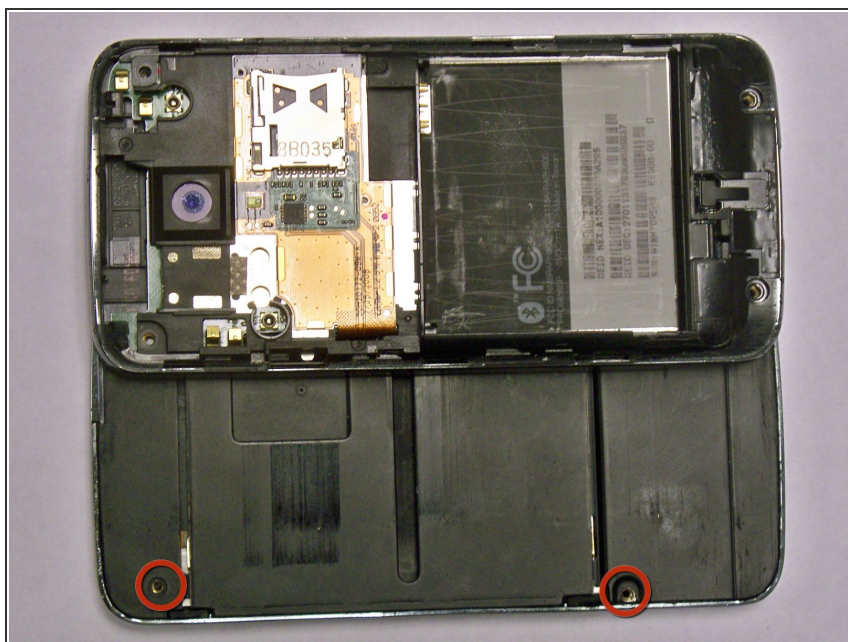



- Remove the two Phillips #00 screws from the backside of the screen.

Step 6

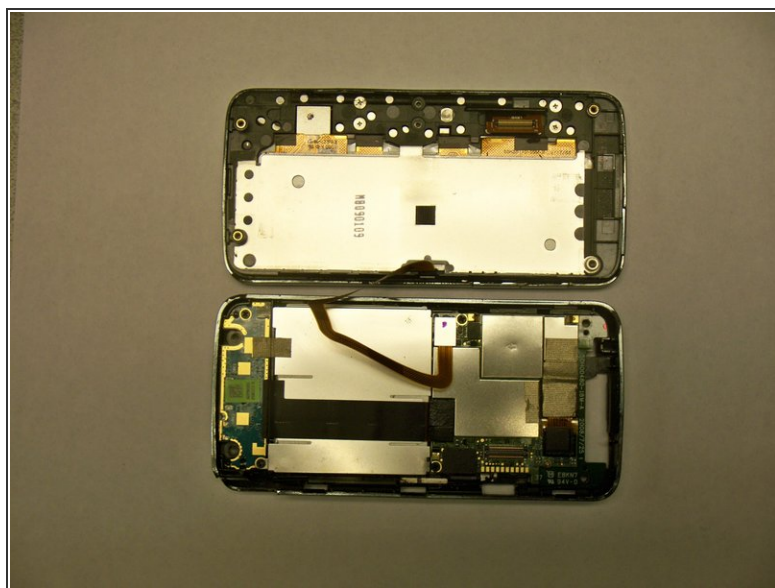



- Insert a spudger or a plastic opening tool into the seam on the side of the phone.
- Gently pry apart the two halves of the phone.

Step 7

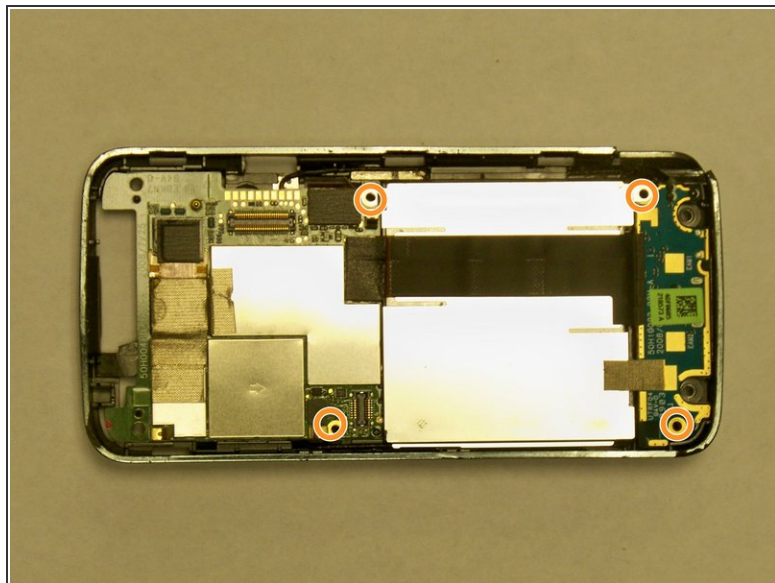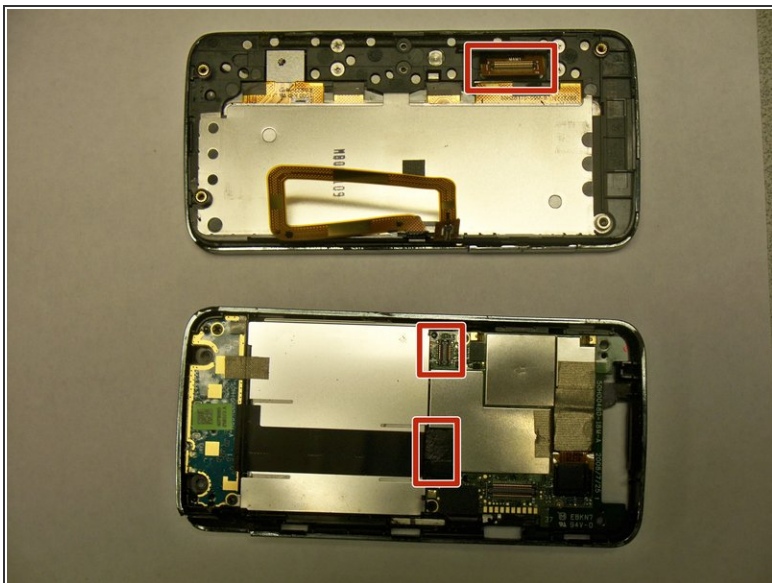

- Gently unplug the connectors.
- Remove the screws with a 00 Phillips-head screwdriver.



Step 8

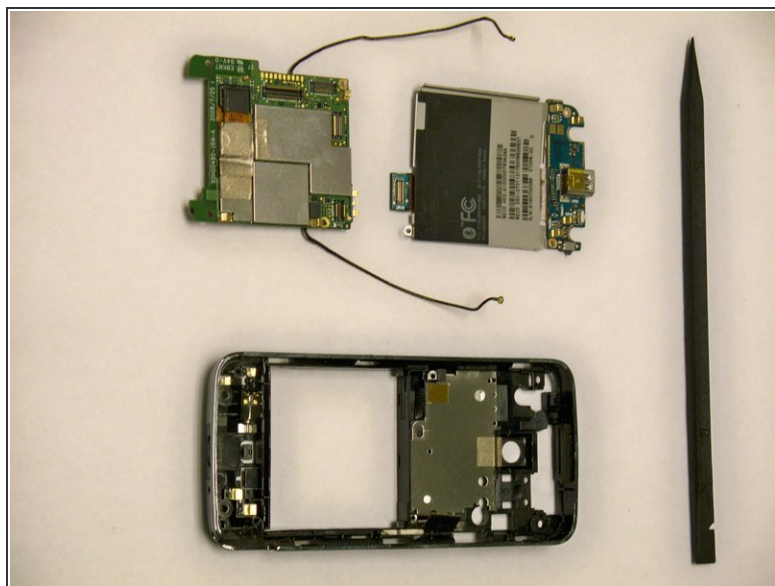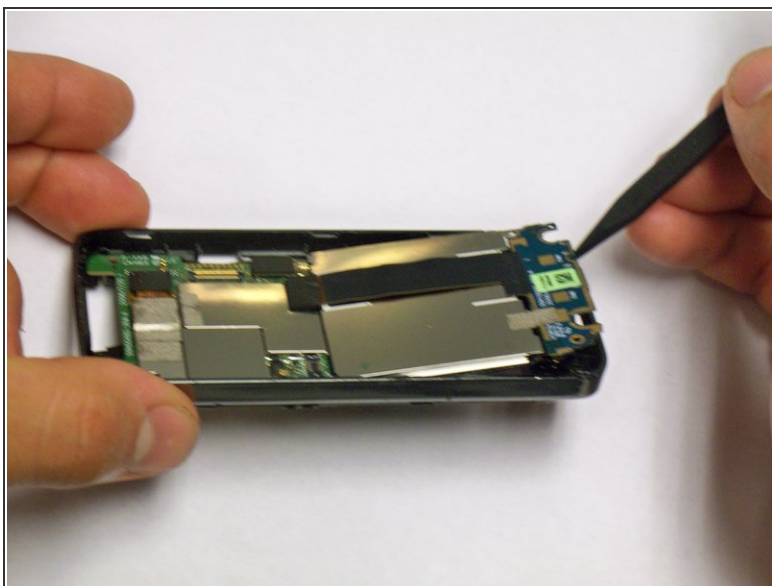

- Gently lift the motherboard up using a nylon spudger.



 **BE AWARE OF THE ANTENNA.**

Step 9 — Keyboard

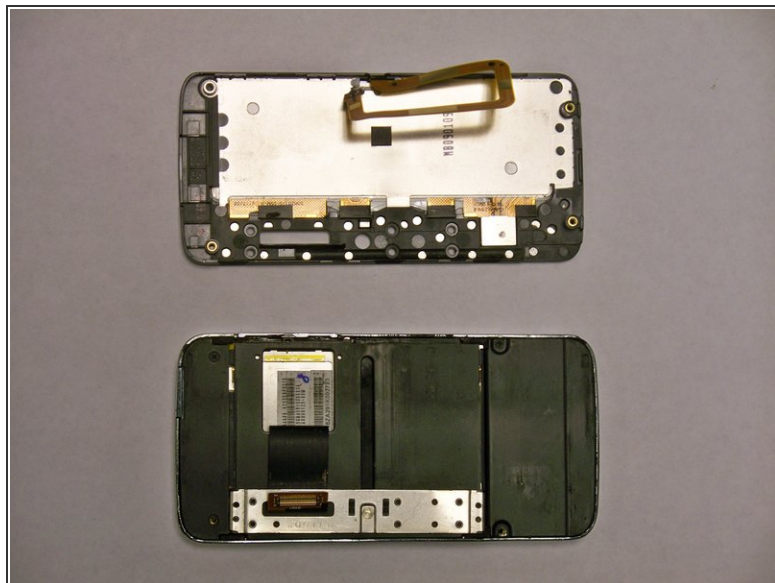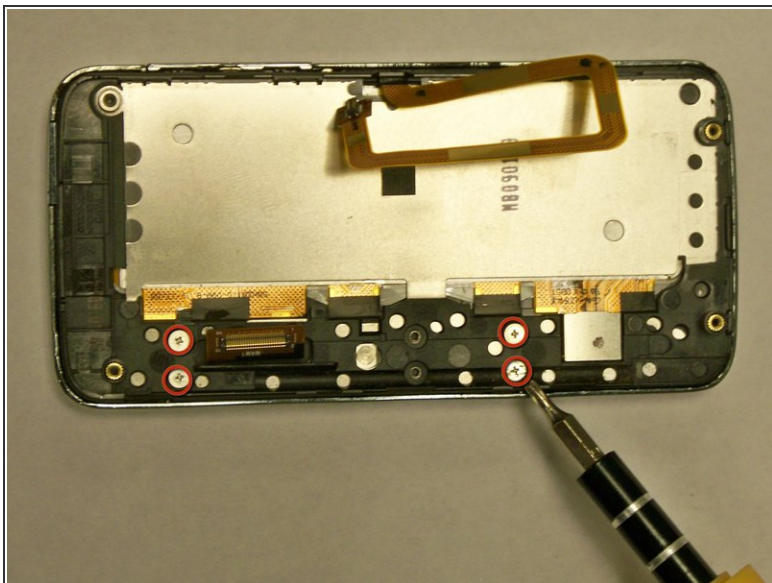


- Remove the 4 screws circled in red using a 00 Phillips-head screwdriver.

Step 10 — Screen

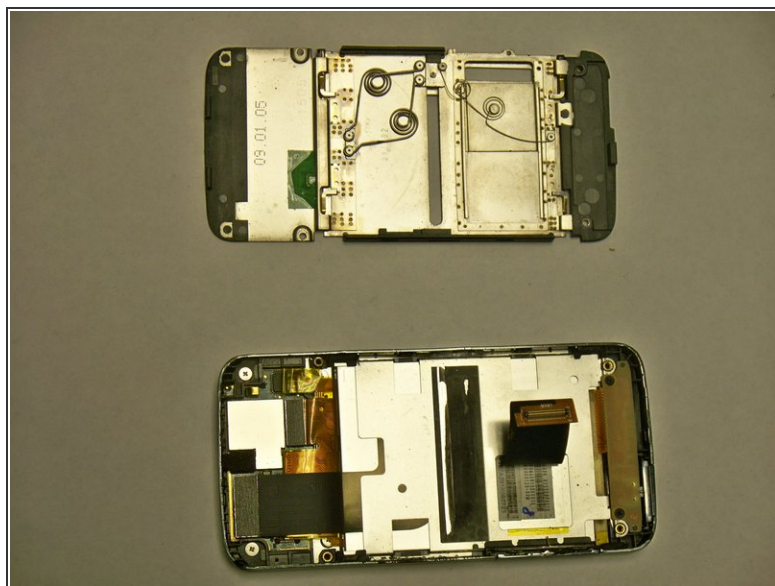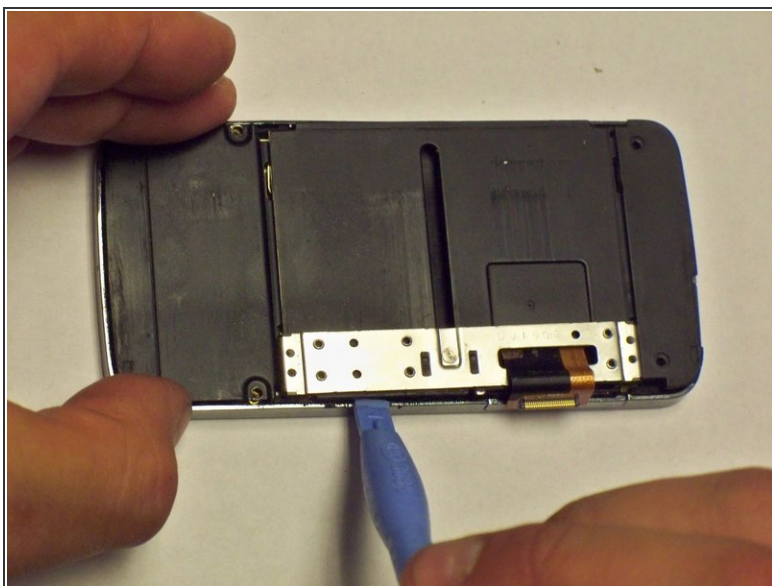

- Start by lifting the back plate of the screen by using your finger or a plastic opener tool.

Step 11

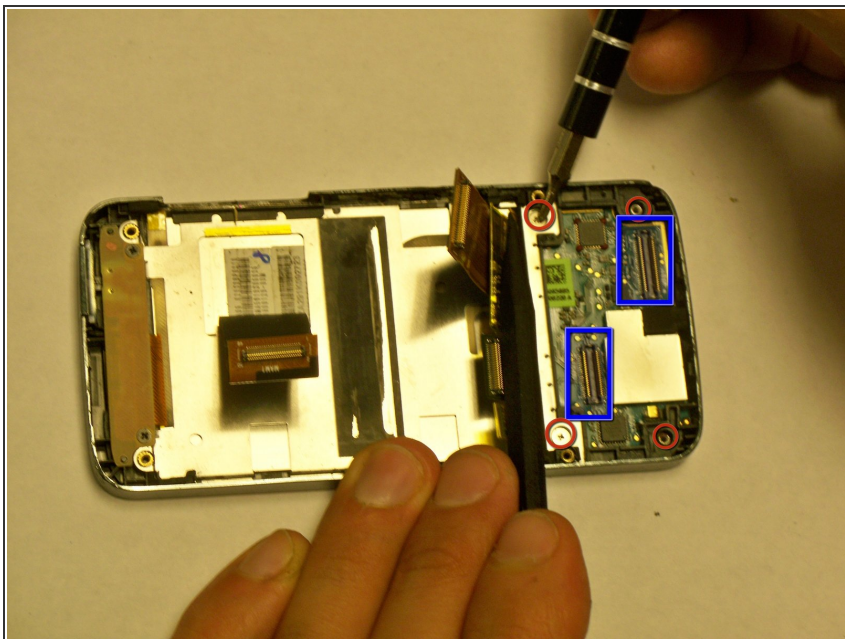

- Remove the 4 screws by using a 00 Phillips-head screwdriver.
- Gently lift the connectors.

Step 12



- Lift the front keyboard by removing the screws with a 00 Phillips-head screwdriver.

Step 13



- With the front keyboard removed, gently lift the screen up with a plastic opener tool and remove it .

To reassemble your device, follow these instructions in reverse order.