




# HTC HD2 Camera Replacement

This guide will help you get to the camera of the HTC HD2 to perform possible repairs or replacements.

Written By: Sam Luedloff

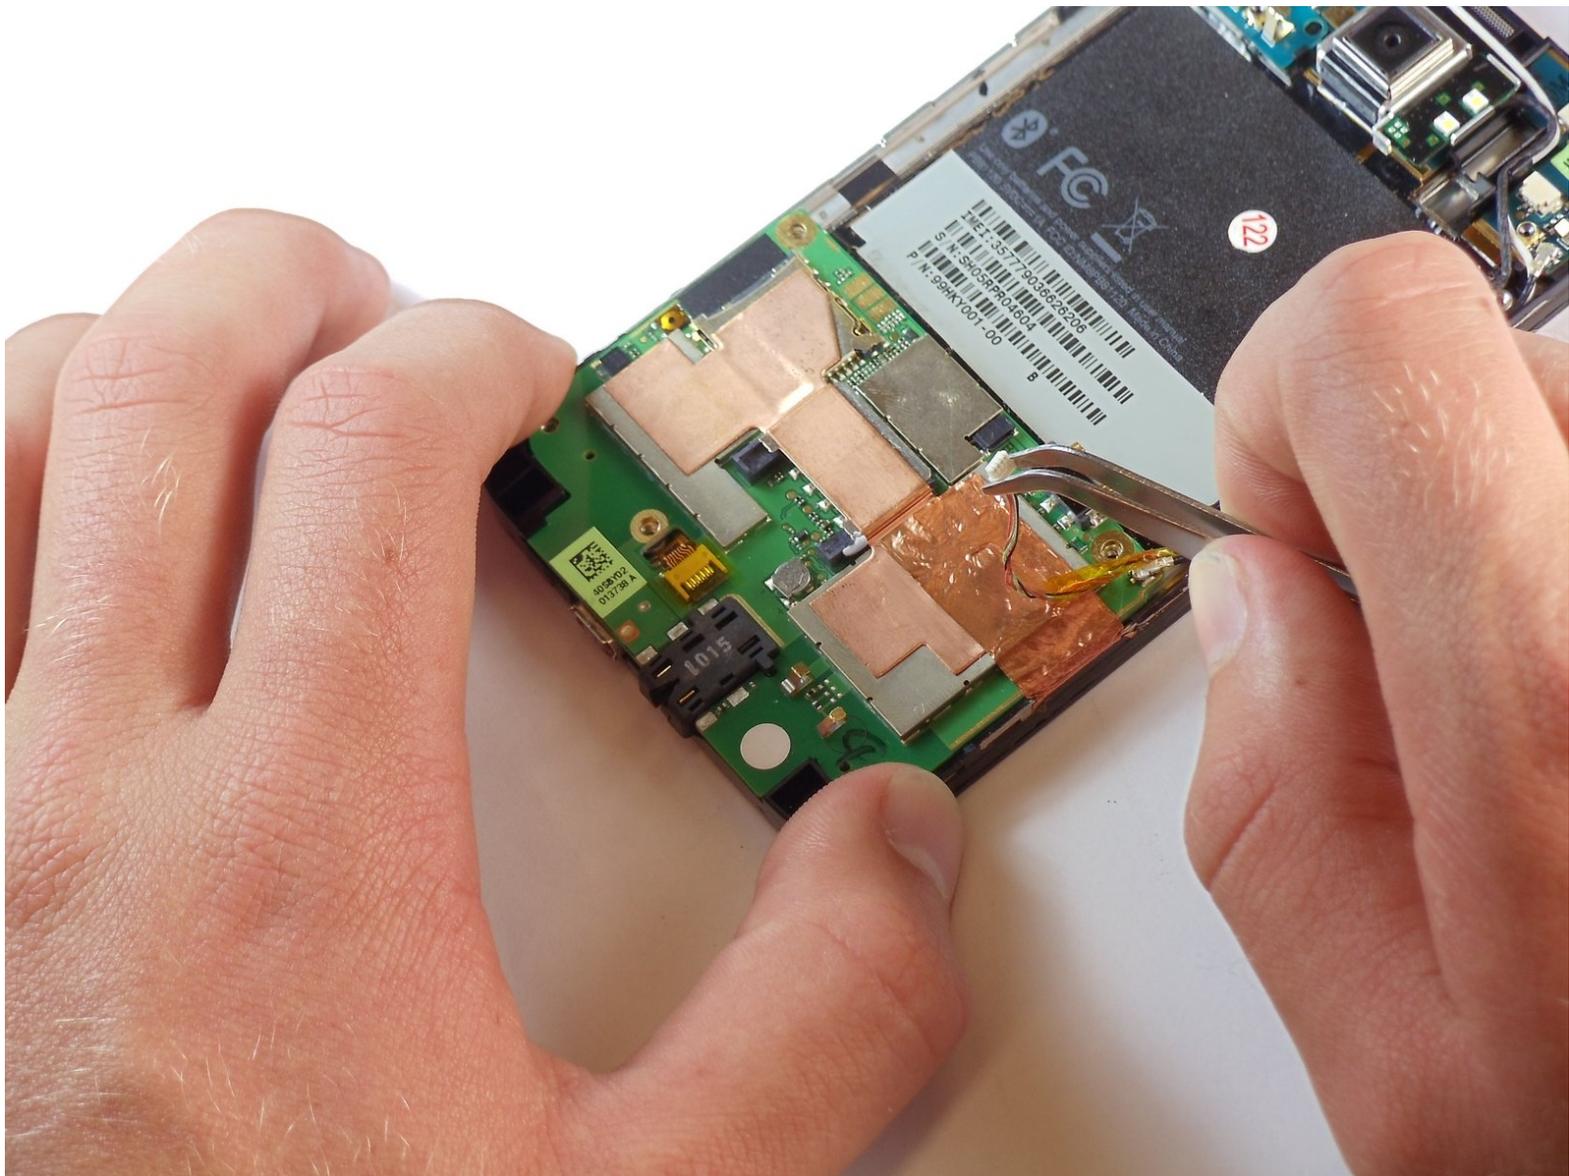

---

## INTRODUCTION

This guide is one of the longer processes, second only to the Logic Board, or the screen. Have a reasonably long time set aside to complete this guide.

---

### TOOLS:

- [Spudger](#) (1)
  - [T5 Torx Screwdriver](#) (1)
  - [Tweezers](#) (1)
-

## Step 1 — Battery




- Carefully pull the rear cover from the back of the phone.
- Place a finger beneath the small lip on the left side of the battery.

## Step 2




- Lay the phone down on its screen.
- Lift up on the lip and pull the battery from the phone.

### Step 3 — Midframe

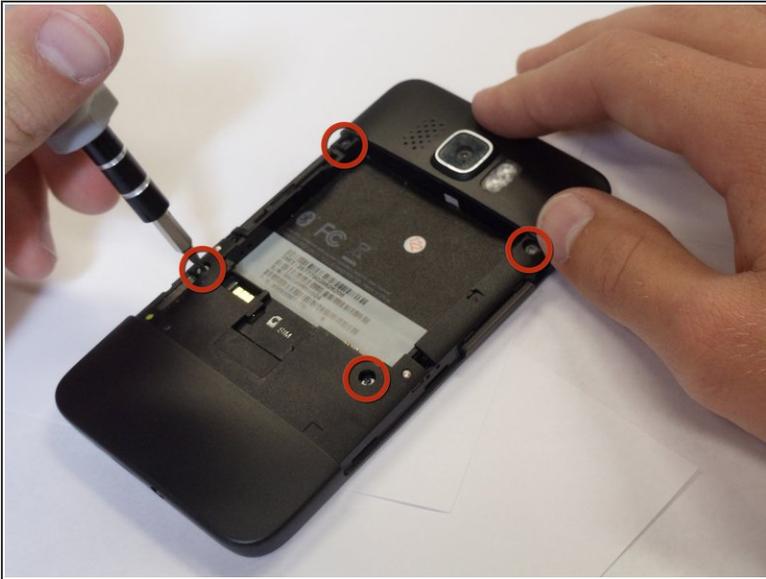


- Remove the four black 3.5mm T5 screws from the back of the phone.

## Step 4

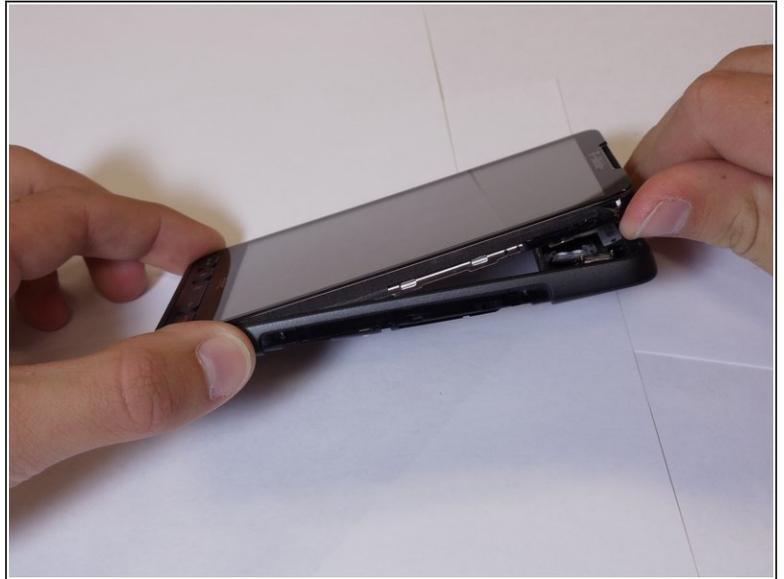


- Insert the flat end of a spudger between the midframe and the display.
- Slide the spudger along the seam between the frame and the display.
- Using the spudger for leverage, carefully pry the midframe away from the display assembly.
  - ⓘ This process will take some effort. Continue to pry slowly and carefully until the frame begins to detach.
- As it releases, pull the midframe away from the phone.
- ⓘ The volume control tab may fall off during removal. It can be easily reattached.

## Step 5 — Camera

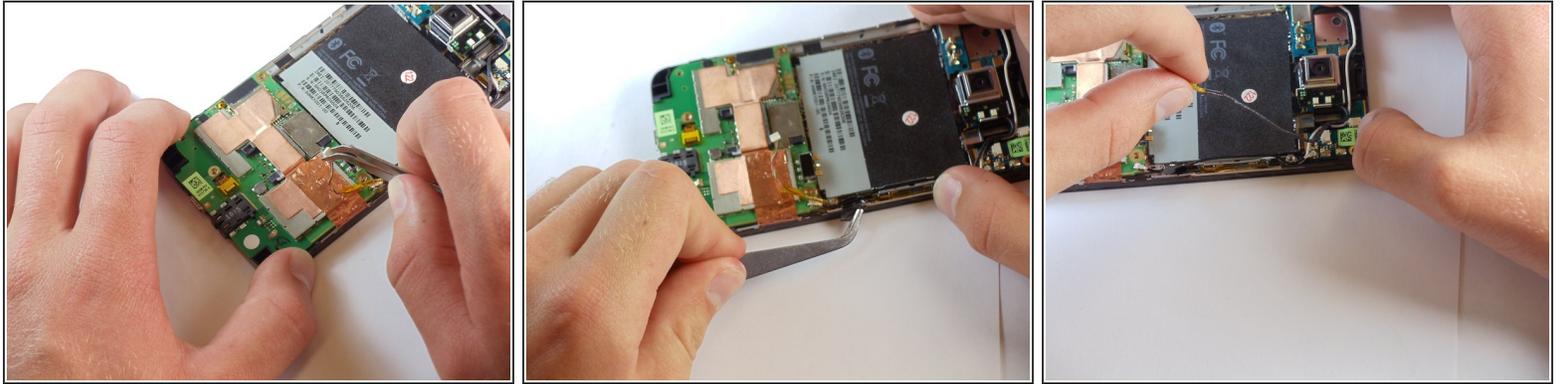


- Disconnect the flash cable from its socket in the bottom of the motherboard.
- Carefully pull the cable from its groove in the frame, working your way back to the camera.

## Step 6

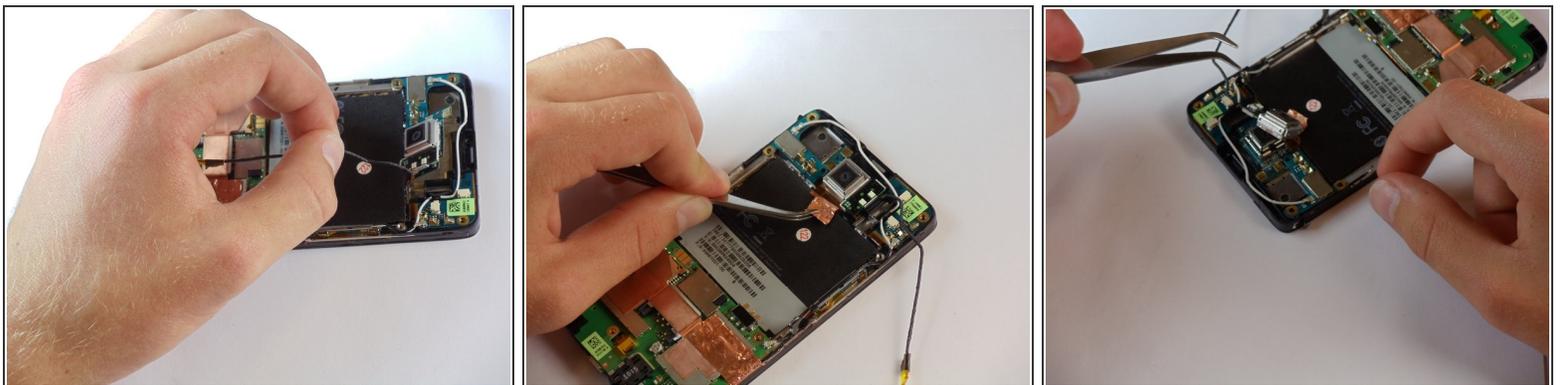

- Pull the camera flash and cover off of the board.
- ⓘ You may need to peel back the sticker that sits behind the battery.
- ⚠ Work carefully. Excessive force can damage the camera or motherboard.

## Step 7

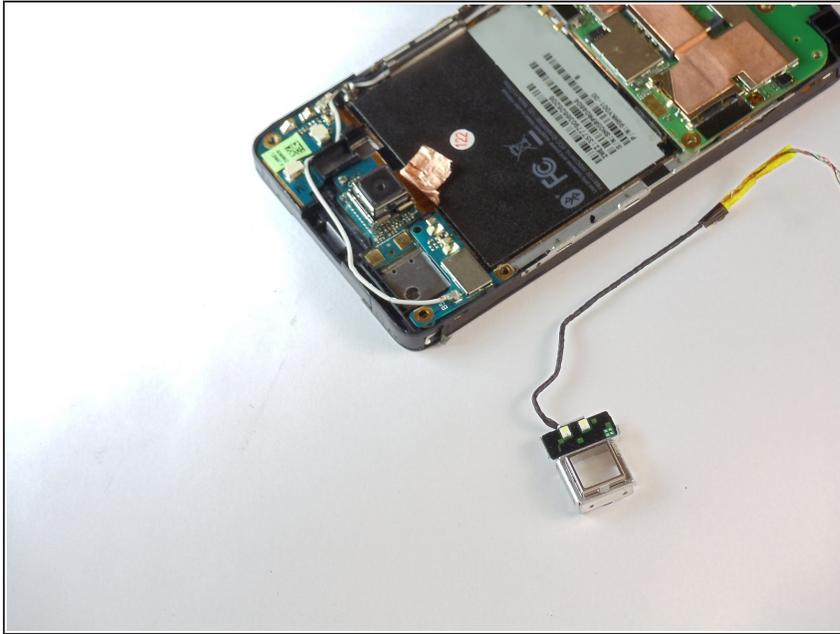

- Around the camera is a thin shielding. Remove it with tweezers.
- Using tweezers, remove the primary camera.

To reassemble your device, follow these instructions in reverse order.