




Vtech Kidibeats Drum Set Green Cymbal Replacement

Replace the green cymbal in order to bring back proper safety and functionality to your drum set.

Written By: Aaron Klementowski

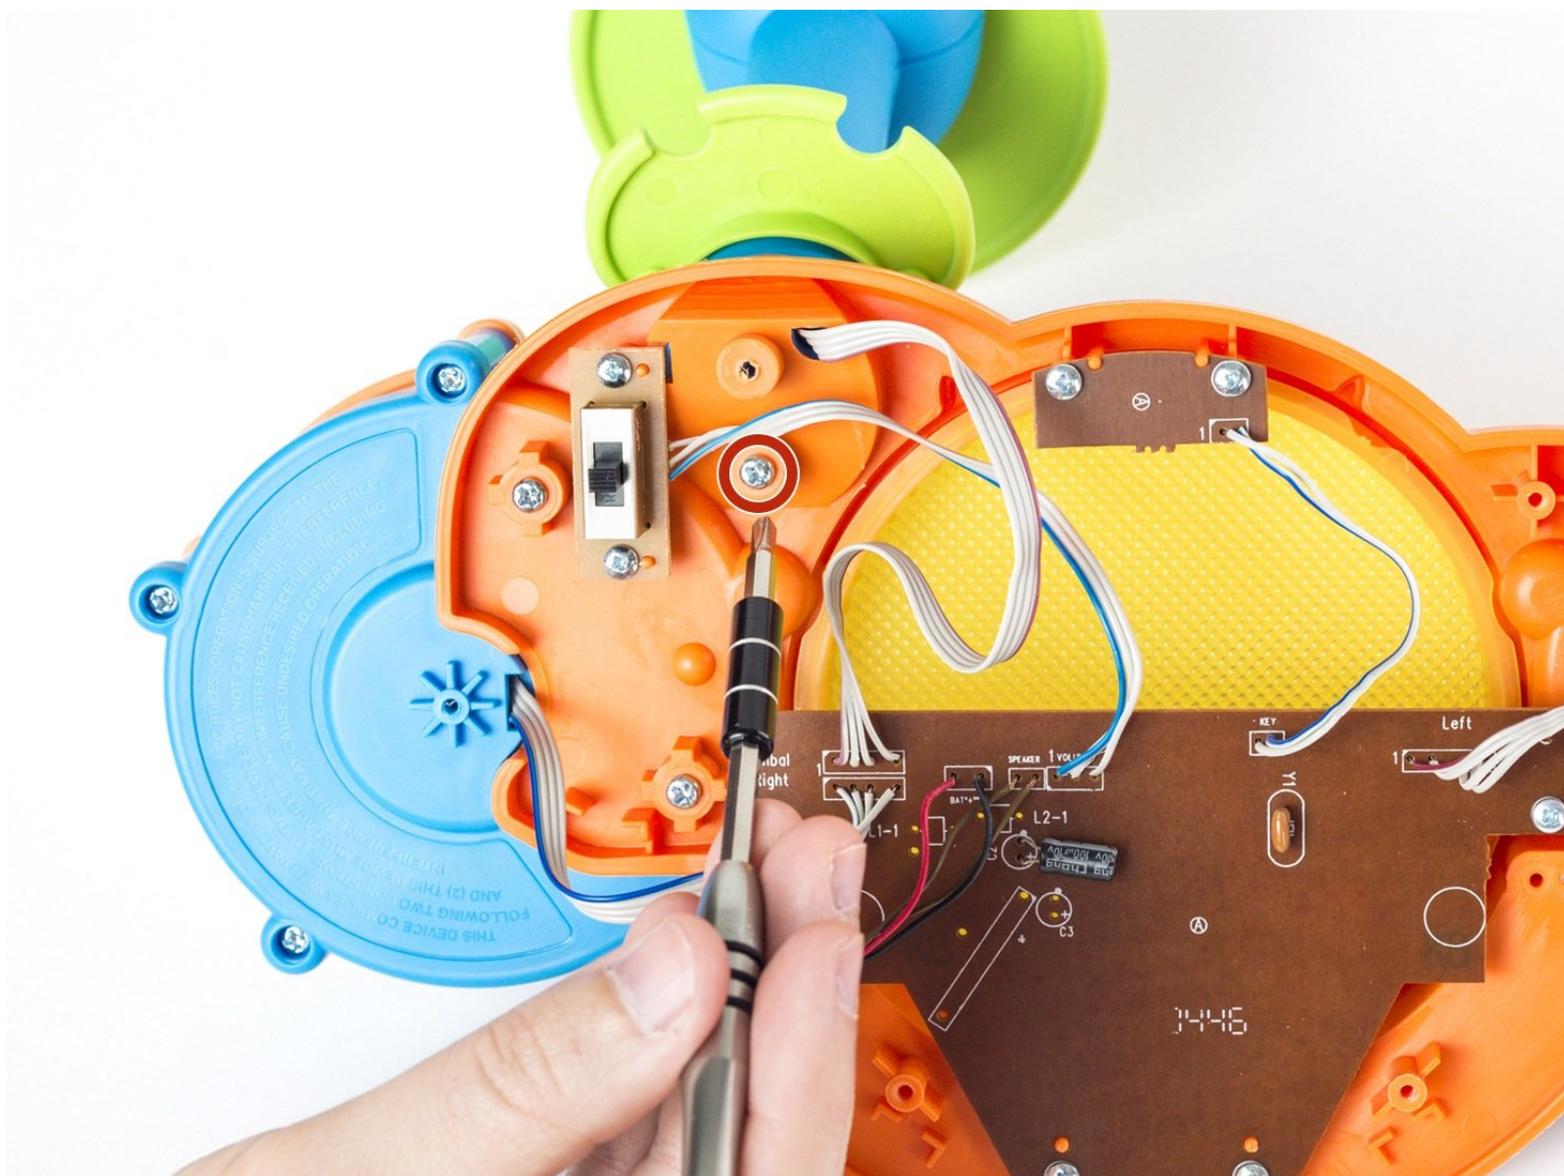


INTRODUCTION

A broken or cracked cymbal can be very hazardous to small children. Additionally, a damaged cymbal could prevent the drum set from working properly. This guide is designed to show how to correctly replace the green cymbal in order restore your drum set to a safe and functioning condition.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)
 - [Phillips #2 Screwdriver](#) (1)
-

Step 1 — Back Panel

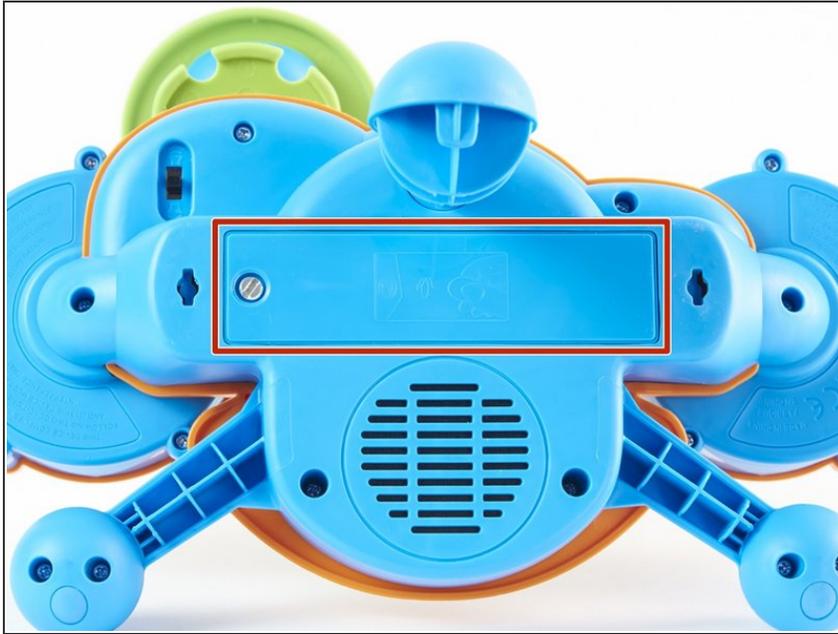


- Locate the battery panel that is centered between the three leg supports at the bottom of the drum set.

Step 2



- To remove the battery panel, loosen the 10 mm panel screw using a flathead 4.0 screwdriver.
- ⓘ You can also use a small coin to loosen the screw.

Step 3

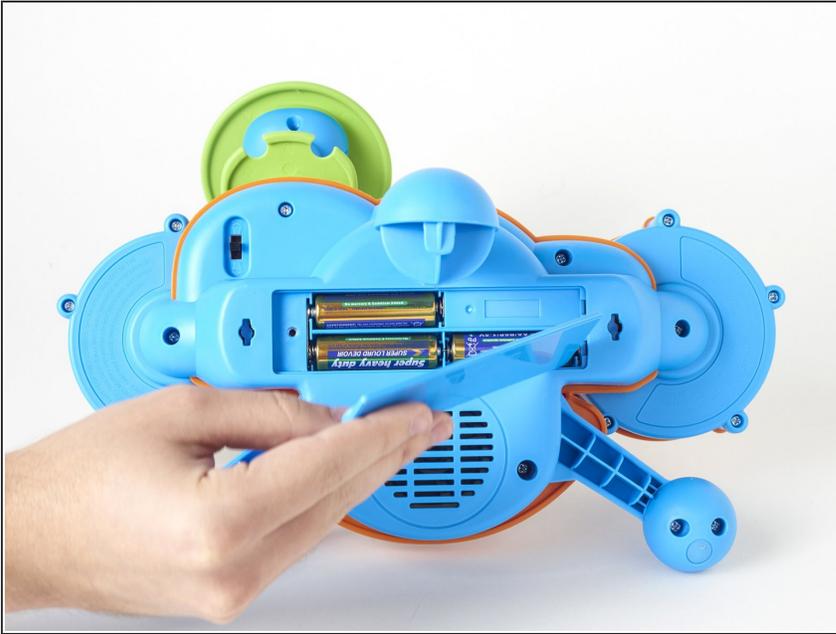


- Using your fingers, pry open and remove the back battery panel.

Step 4



- Use your fingers to remove each battery from its housing.

Step 5

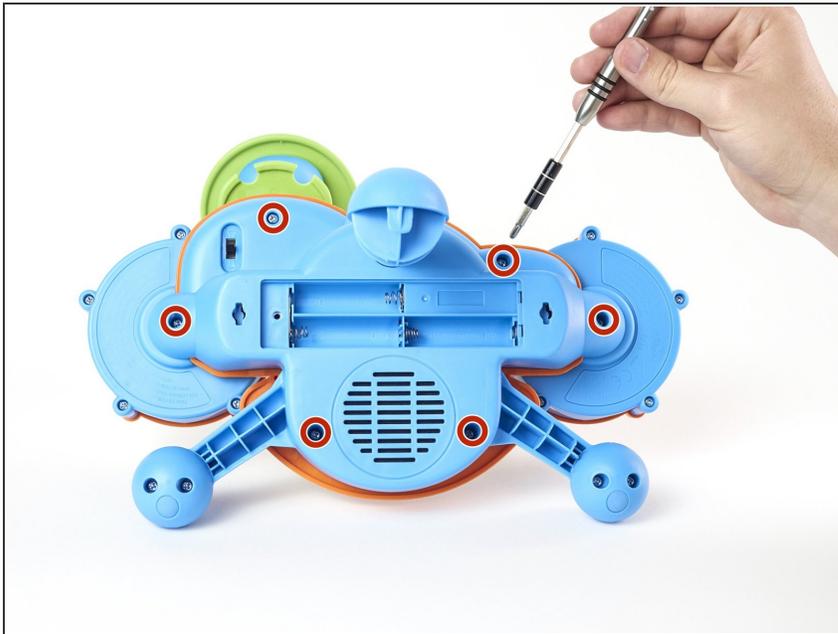

- Using a Phillips #2 screwdriver, loosen and remove the six 14 mm screws.


Step 6



- With your hands, separate the bottom panel from the drum set.

⚠ When removing the bottom panel, be careful not to pull too hard in order to prevent damaging the connections from the motherboard to the speaker and power source.

Step 7 — Green Cymbal

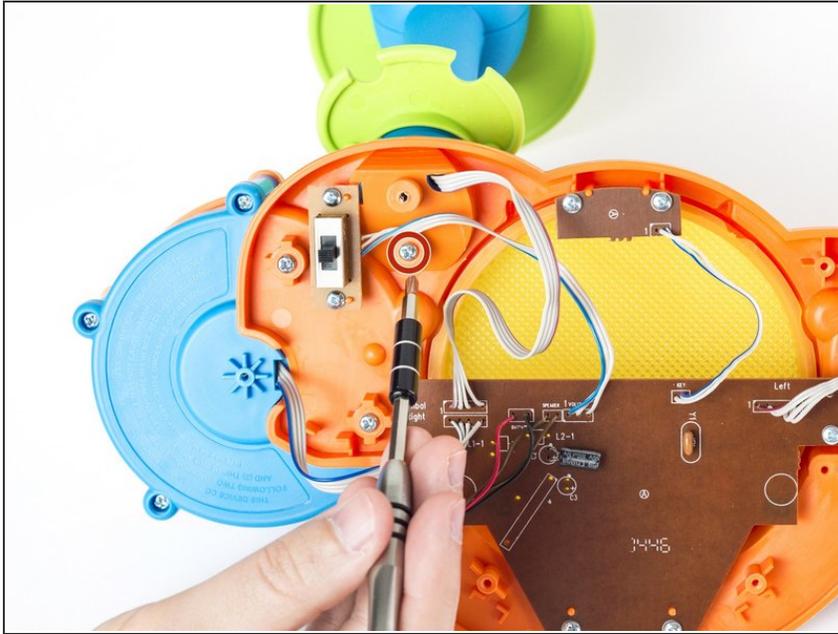

- Use Phillips #2 screwdriver to loosen and remove the single 16 mm screw.

Step 8



- Using your hands, remove the blue cymbal stand from the orange base.

Step 9



- Loosen and remove the two 14 mm screws using a Phillips #2 screwdriver.

Step 10



- Using your hands, separate the two halves of the blue cymbal stand.

Step 11



- Using your hands, separate the green cymbal from the blue cymbal base.

Step 12



- Using a Phillips #00 screwdriver, loosen and remove the three 12 mm screws located on the bottom of the green cymbal.

Step 13



- Using your hands, separate the green cymbal from the green cymbal base.

Step 14



- Using your hands, pull apart the green cymbal from the yellow light casing.

To reassemble your device, follow these instructions in reverse order.