




Nexus 10 Battery Replacement

Replace your Nexus 10 battery.

Written By: Benjamin Troller

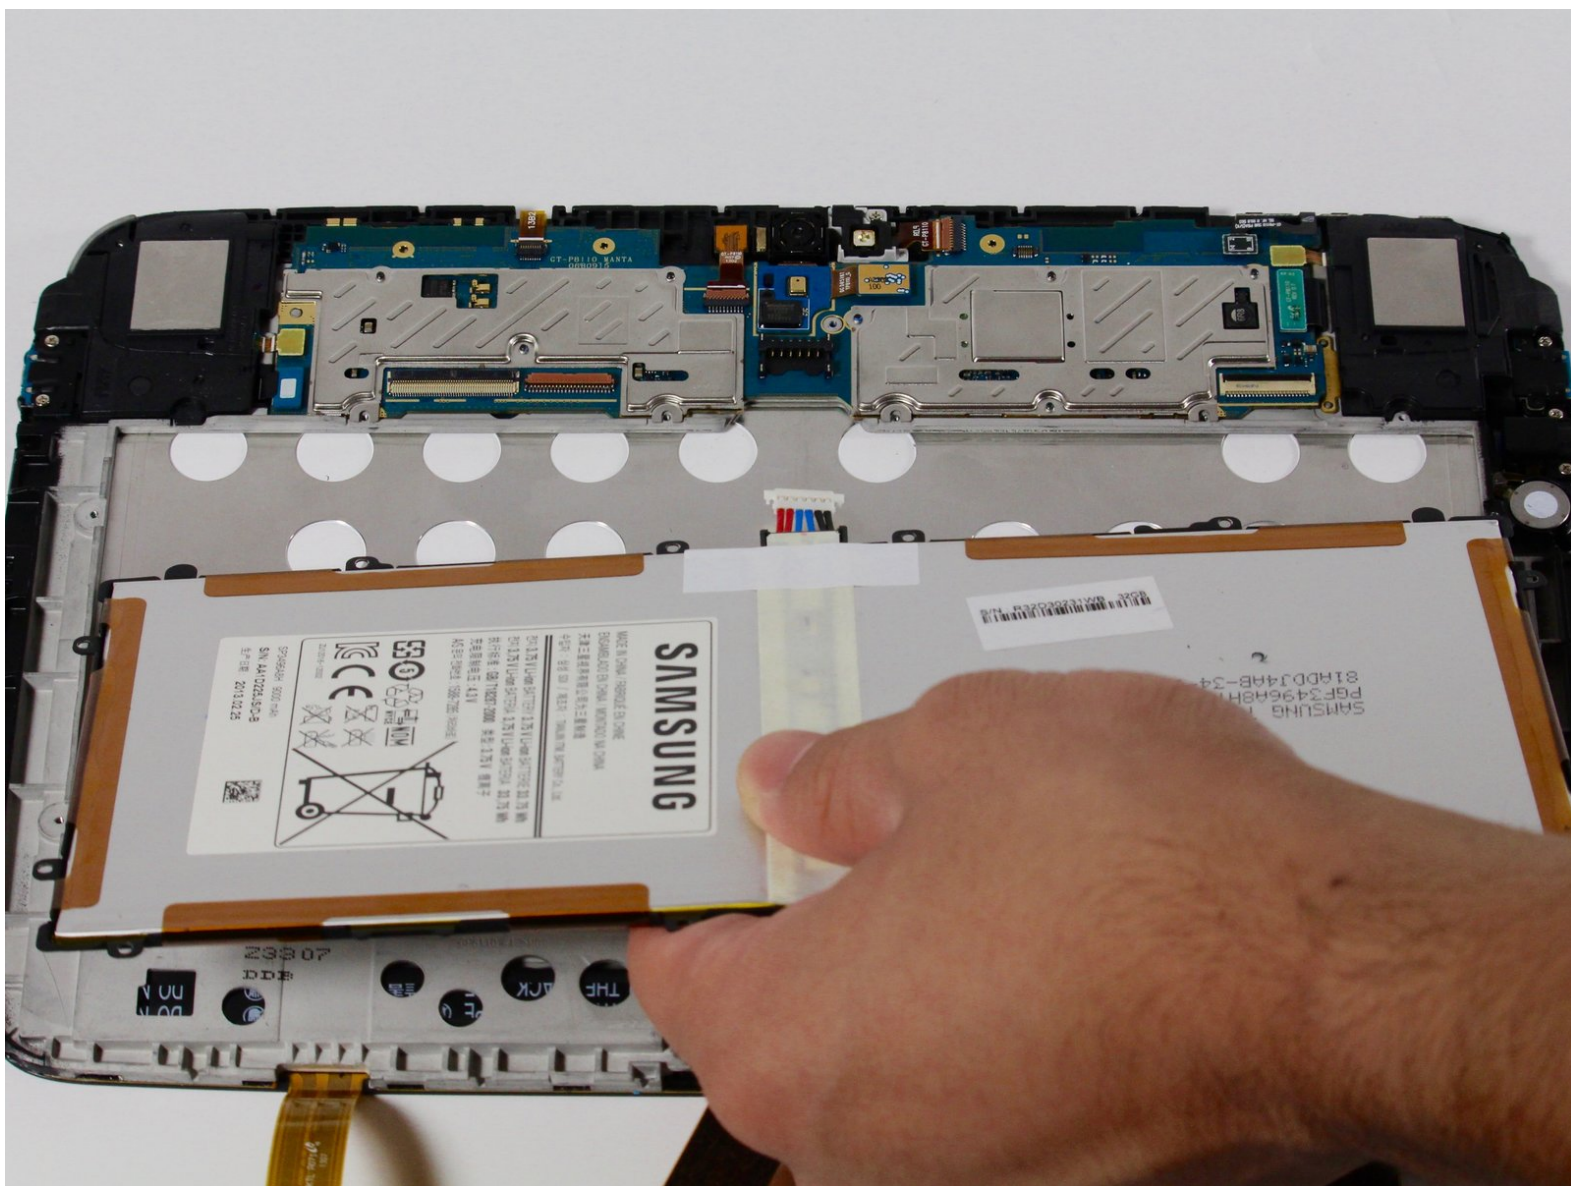

INTRODUCTION

Replace a dead or failing battery in your Nexus 10 by completing the following guide. The battery should also be removed as a safety precaution before performing any other repairs on this device.



TOOLS:

- [iFixit Opening Tool](#) (1)
- [Phillips #00 Screwdriver](#) (1)



PARTS:

- [Nexus 10 Rear Panel](#) (1)

Step 1 — Battery



- Using a plastic opening tool, remove the thin plastic cover from back of the tablet by prying up from its small tab.

Step 2



- Remove the five 2mm screws on the back of the device using a PH00 screwdriver.

Step 3



- Pry the device apart by inserting a plastic opening tool in the seam between the plastic backing and display assembly. Use the tool to unclip the plastic tabs in between the backing and the display.
- Pull the the plastic backing off the display assembly using your hands.


⚠ Do not do this step with only your hands. You will require a significant amount of force to separate the device.

Step 4





- Detach the three connector ribbons passing over the battery using the plastic opening tool.

Step 5

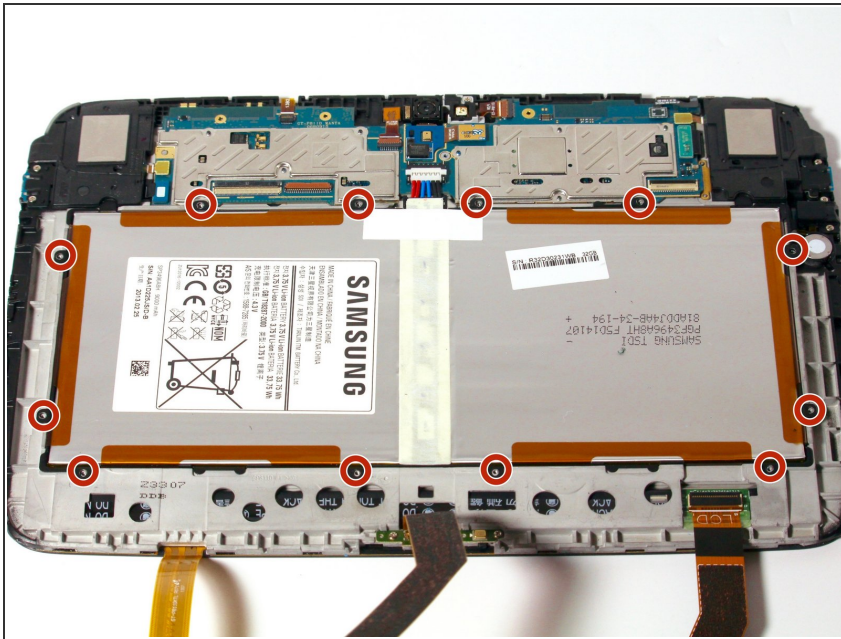

- Remove the twelve 2mm screws around the perimeter of the battery with a PH00 screwdriver.

Step 6

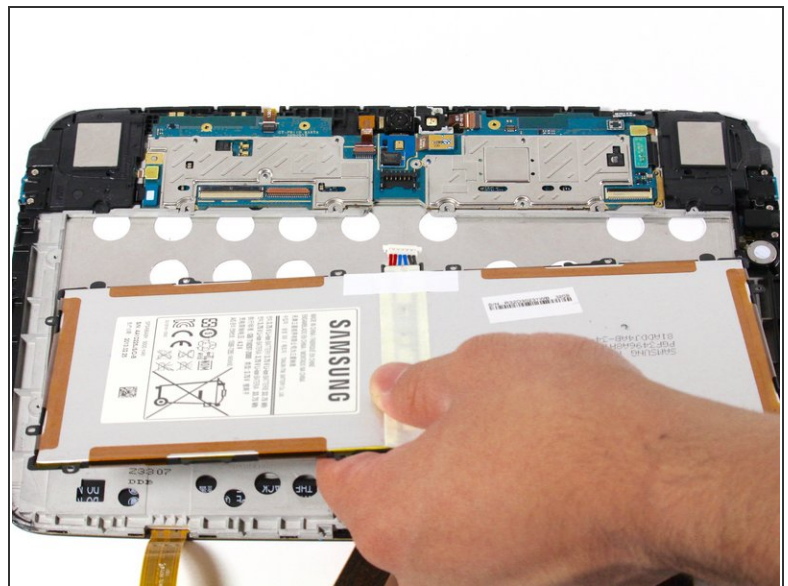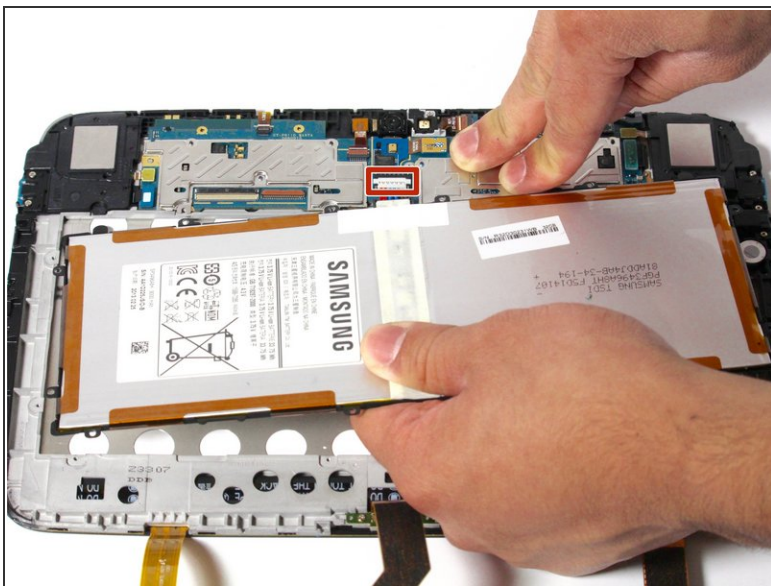

- Disconnect the battery by lifting it upward and pulling it away from the connector.

To reassemble your device, follow these instructions in reverse order.