



iHome iP41BR Ipod Adapter Replacement

Replace the iPod adapter on your iHome iP41BR

Written By: Paige Reisman





TOOLS:

- [Phillips #0 Screwdriver](#) (1)
- [Phillips #00 Screwdriver](#) (1)
- [Metal Spudger \(optional\)](#) (1)

Step 1 — Remove Phillips Screws




- Remove the two 8mm Phillips #0 screws from the iHome's iPod adapter.

Step 2 — Pull Out iPod Adapter





- Use the metal spudger to loosen the edges of the plastic cover.
- Pull the adapter up and away from the housing, rotating it forward slightly as you lift it so the top faces you.

Step 3

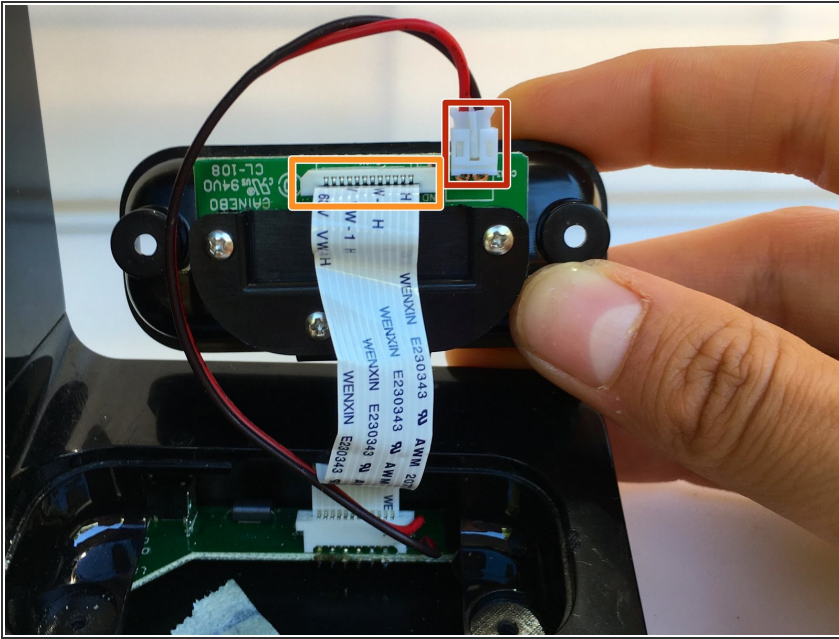


- Pull firmly on the red and black cable connector to disconnect it.
- Pinch the ribbon cable on both sides and pull it firmly to disconnect it.
- ⓘ The ribbon cable takes a bit more force to disconnect than the red and black cable. Make sure to pull evenly on the entire cable for ease of removal.

Step 4 — Remove Plastic Cover

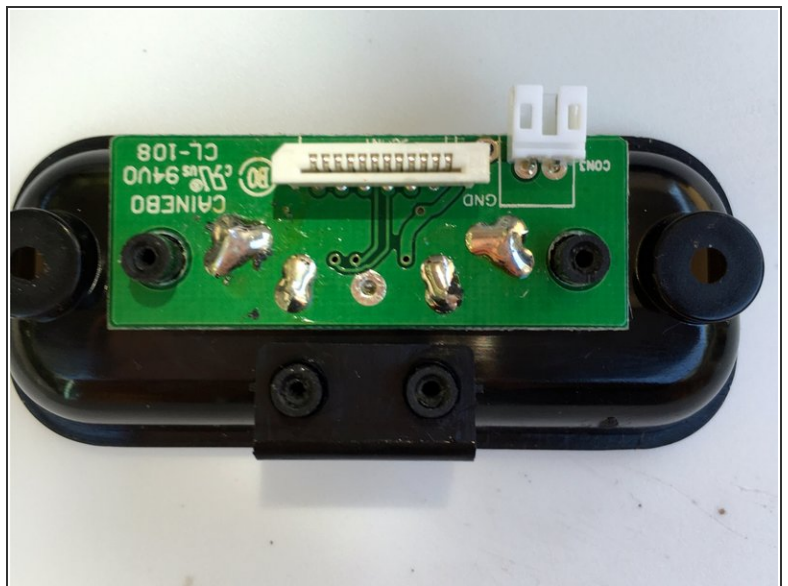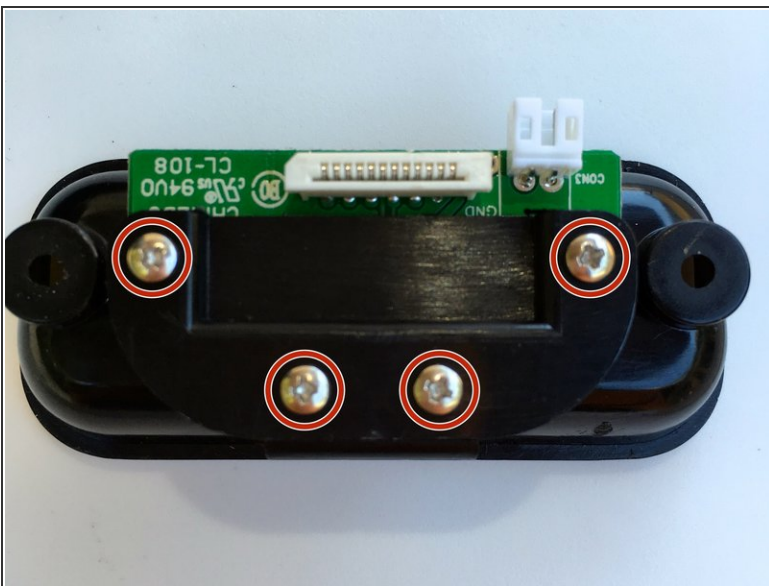

- Remove the four 7mm Phillips #00 screws attaching the black plastic cover to the bottom of the adapter assembly.

Step 5

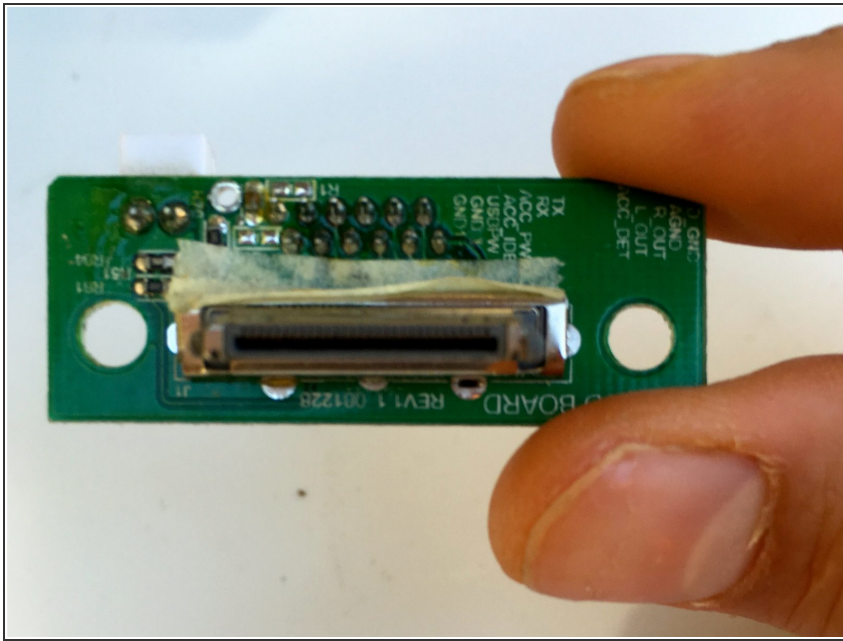

- Pull the ipod adapter out of the plastic holder ad replace.

To reassemble your device, follow these instructions in reverse order.