



Macintosh PowerBook 165c Display Replacement

This guide will demonstrate how to replace the Macintosh PowerBook 165c display.

Written By: Jason



INTRODUCTION

Use this guide to replace the display.



TOOLS:


- [iFixit Opening Tools](#) (1)
 - [T8 Torx Screwdriver](#) (1)
-

Step 1 — Display



- Orientate the computer right side up and open the display case to reveal the display.
- Use a plastic opening tool to remove the two small plastic plugs located on the display case just below the display.

Step 2

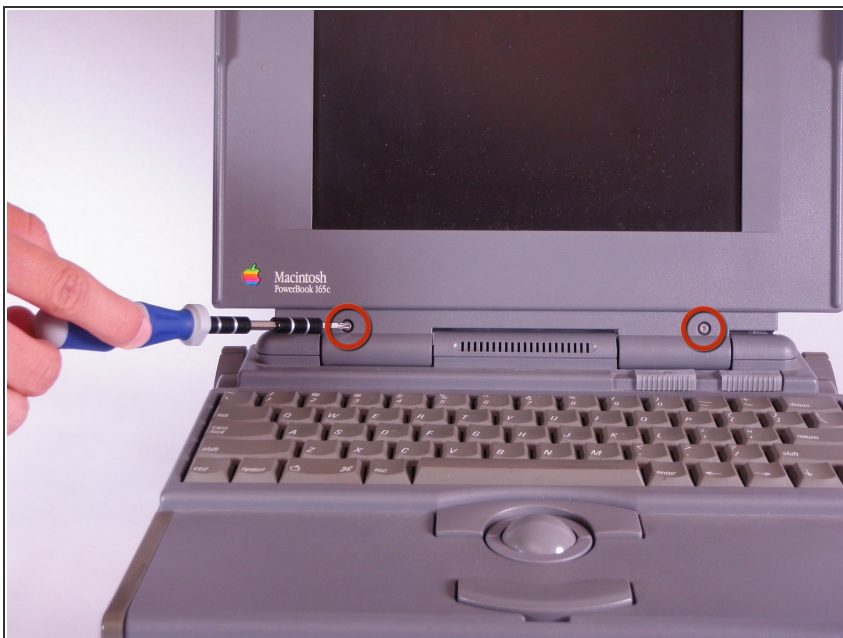


- Use a T8 torx screwdriver to remove the two, 7.7mm long screws that were revealed by removing the plastic plugs.
 - Twist counterclockwise to remove the screw.
- ⚠ Caution: Once the screws are removed, the display is only held by two screws. Handle delicately.

Step 3



- Grip the two bottom corners of the plastic display cover and gently pull towards yourself so that the display cover rotates about the top of the display case.
- The display cover should release from top.
- Remove the display case.

Step 4

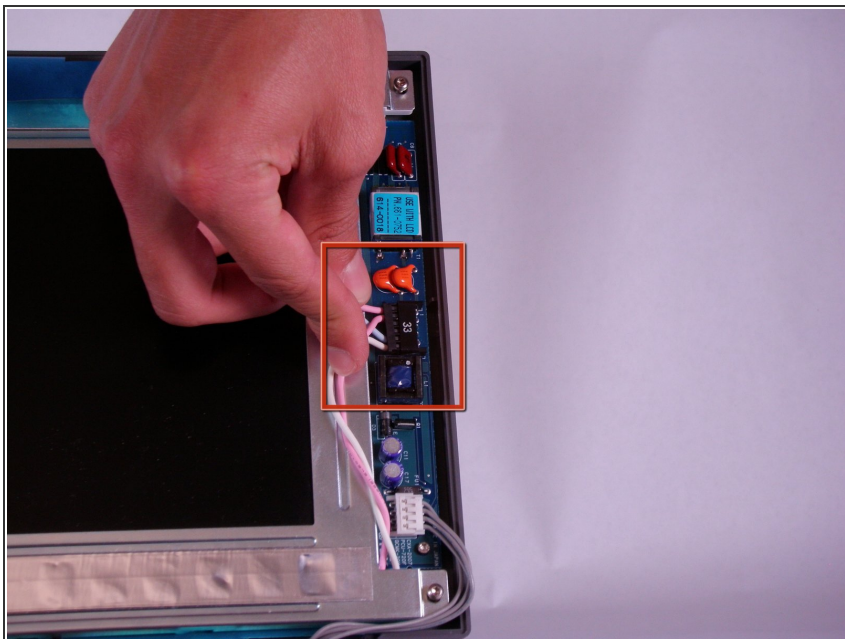

- Locate the black connector on the right of the display. The connector can be identified by the pink, light blue, and white wires protruding from its side.
- Remove the black connector from the circuit board by pulling it away from its adapter.

Step 5





- Using a T8 torx screwdriver, remove the four, 10.8mm long screws from the corners of the display.
- ⚠ Caution: The display is no longer supported and must be handled with care.


Step 6



- Carefully tilt the display downwards and rest it on the keyboard.

Step 7

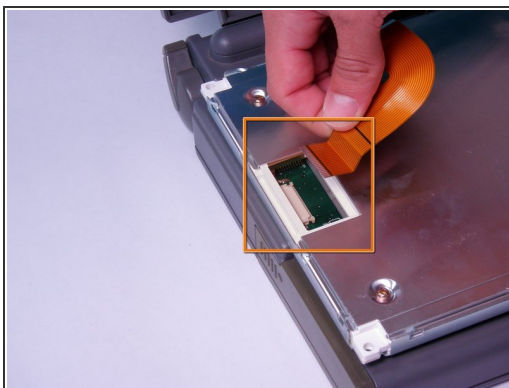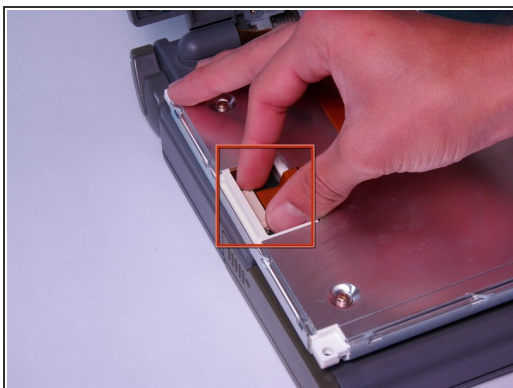

- Locate the orange ribbon cable on the back of the display.
 - Open the white tab fastener by pulling it outward.
 - Remove the orange ribbon cable by gently pulling it away from the opened tab fastener.
-  The display is now free.

To reassemble your device, follow these instructions in reverse order.

