



acer aspire one 725 Teardown

A tear-down of the acer aspire one 725 model

Written By: Poua Yang



TOOLS:

- [Essential Electronics Toolkit \(1\)](#)
-

Step 1 — This is an acer aspire one




- prepare you're self for a lot of screws

Step 2 — Remove the battery



- on the top right corner and slide it to the right
- It release very easily

Step 3 — Getting inside the laptop

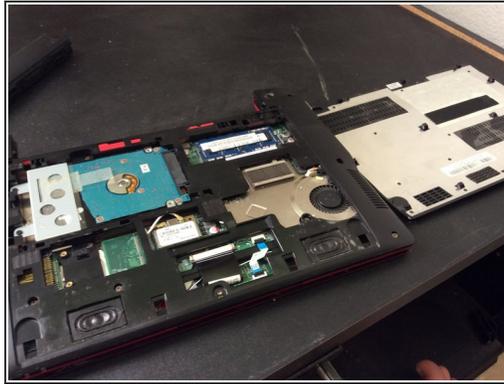

- There's a screw natural reaction unscrew it
- Slide the cover right off

Step 4 — Removing the ram



- Simply push these pins out and it'll come out
- It's kinda fun to taking it out and pushing it back in

Step 5 — Removing the hard drive



- More screws unscrew them
- It might be hard to removing the hard drive so use the screwdriver to push it out

Step 6 — Still removing the hard-drive



- This is what it should look like
- You can also change the hard-drive if you want by unscrewing the metal piece

Step 7 — Just a look




- to see how it looks like

Step 8 — Before removing the keyboard




- Please remove the black and blue strip
- These are connected to the keyboard
- Also unscrew all the screws keeping the panel down

Step 9 — Removing the keyboard

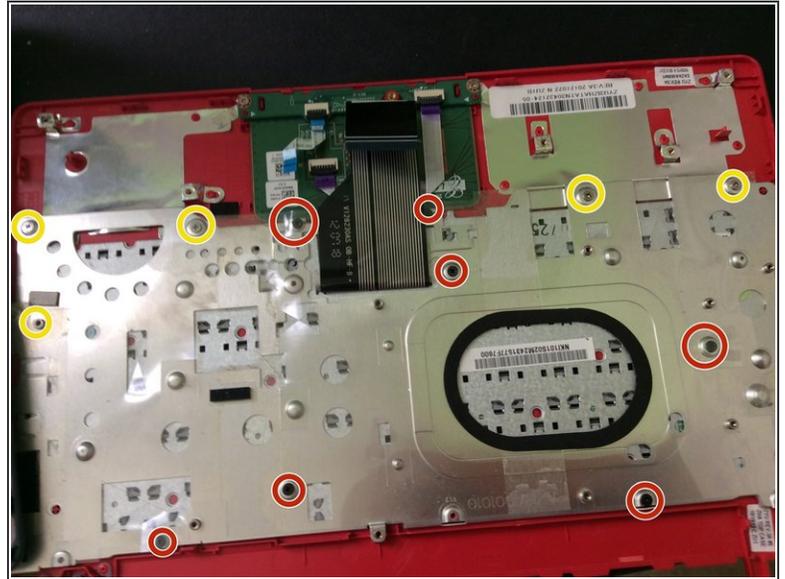


- pry it open by where the battery was
- These show the mother board
- There are multiple screws, black screws and sliver screws
- I labeled black screws with red. I labeled the sliver screws with yellow.

Step 10 — The touch pad

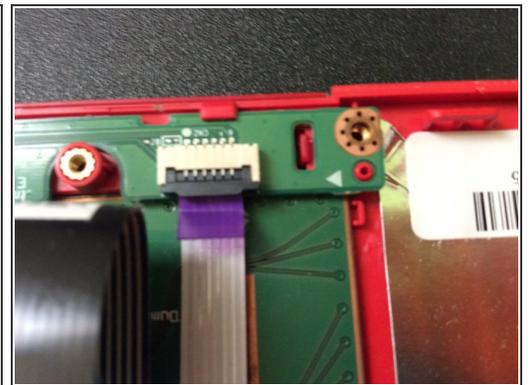

- There is a purple strip and unhook it
- Take off the panel that the blue and purple strip its connected to

Step 11 — The key board separated

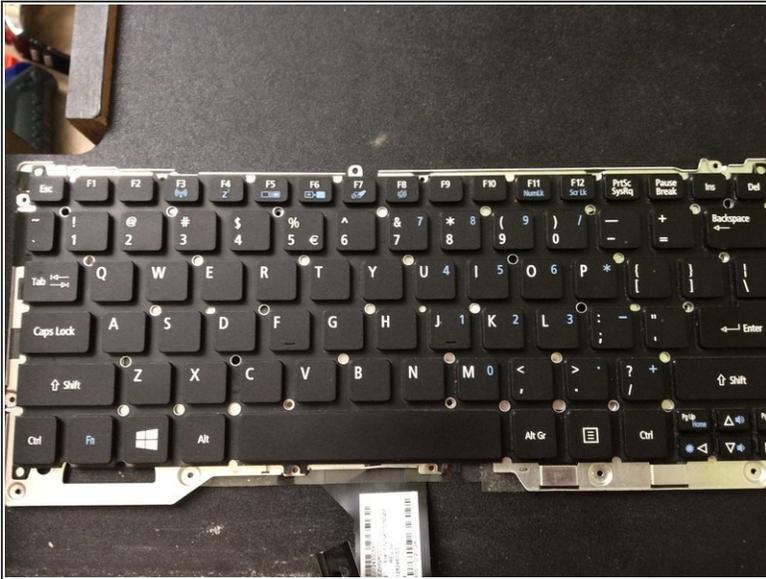

- A look of the key board

Step 12 — So far we gone



- I know that we didn't take apart the mother board but this is all that
- I hope that you find this useful