




Casio FX-115MS Battery Replacement

In this guide you will learn to replace the battery in your Casio Calculator. This guide is very easy, and only takes the time it takes to pop the battery out of place.

Written By: Lindsey Griffin

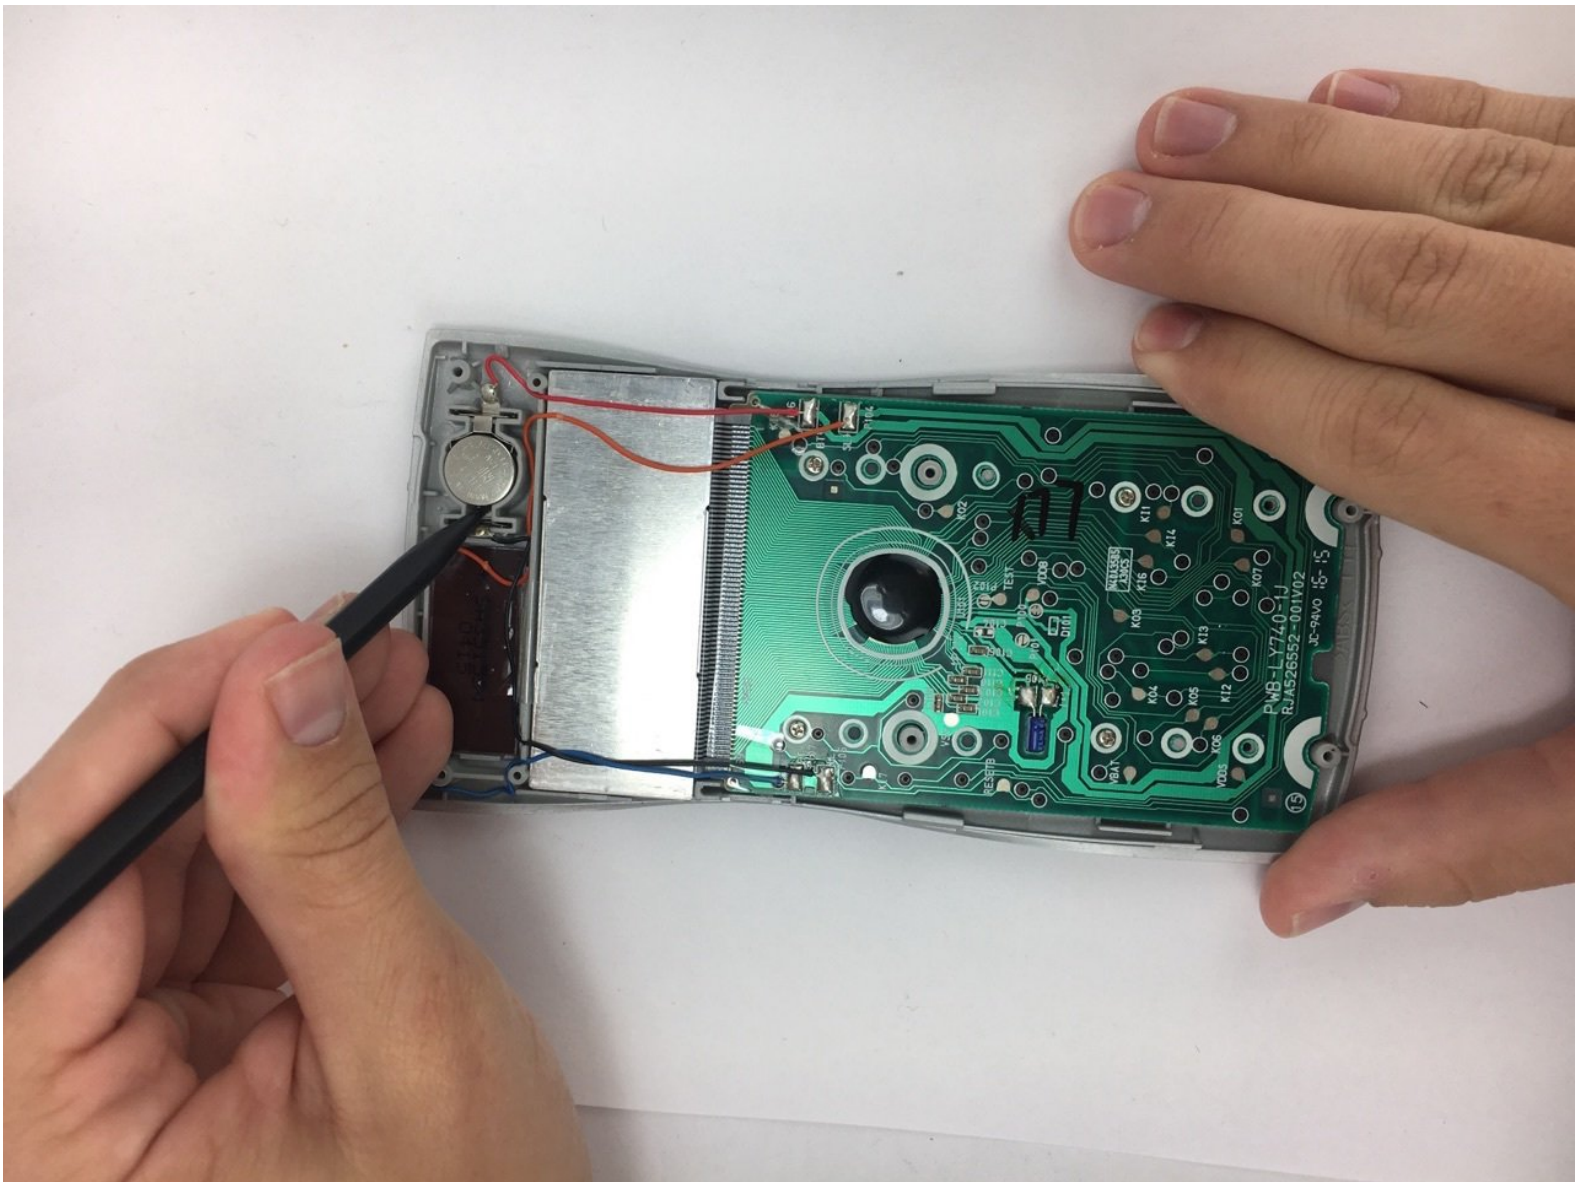

INTRODUCTION

In the event that your battery dies, you will need to replace it. This guide will show you how.



TOOLS:




- [Heavy-Duty Spudger](#) (1)
 - [Phillips #1 Screwdriver](#) (1)
-

Step 1 — Back Plate





- Remove the 6 screws, which are 5mm long, using a PH1 screwdriver.

Step 2

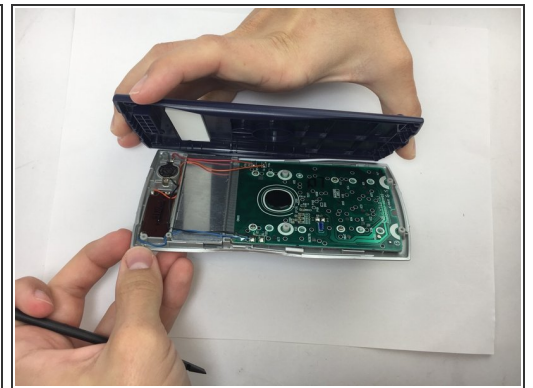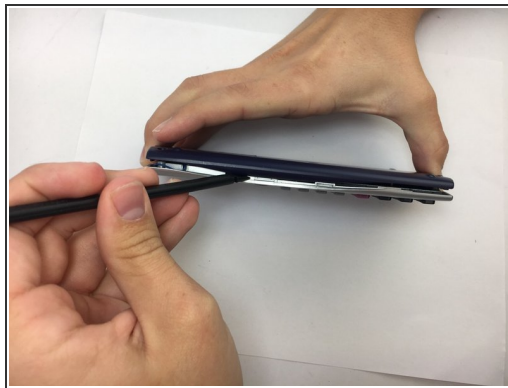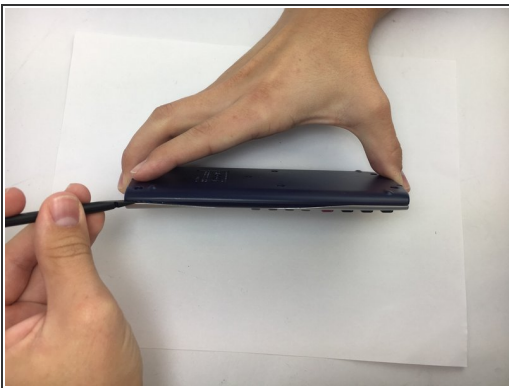

- Use plastic spudger to separate backplate from the front-plate. Place the flat end of the spudger in the seam between the front and back, near one end of the calculator. Then slide the spudger towards the calculator's center. The two sides will pop free from each other as you go through it with the spudger.

Step 3 — Battery

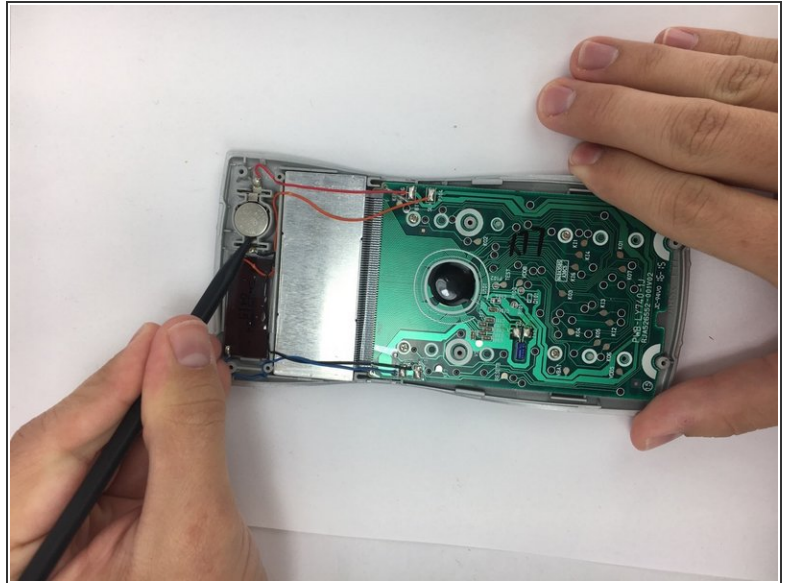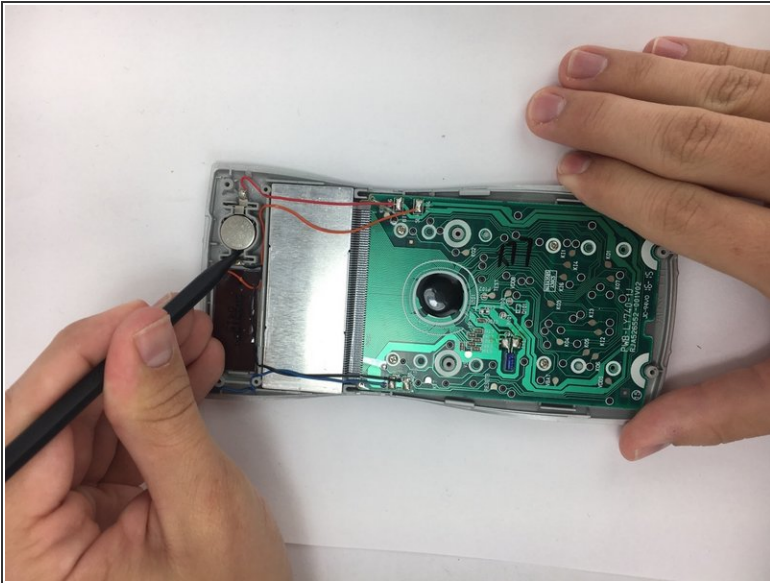

- Using the pointed end of the nylon spudger, carefully pry an edge of the battery, and lift the battery from its socket.

To reassemble your device, follow these instructions in reverse order.