



# HP Compaq Presario cq62-214nr RAM Replacement

A guide to replace the RAM in a HP Compaq Persario cq62-214nr

Written By: Roth Marcelin



---

## INTRODUCTION


This guide will take you step by step in removing the RAM located on the bottom of the HP Compaq Persario. Please make sure the battery is remove and the laptop is not connected to any power source.


---

### TOOLS:


- [Phillips #1 Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
-

## Step 1 — Battery

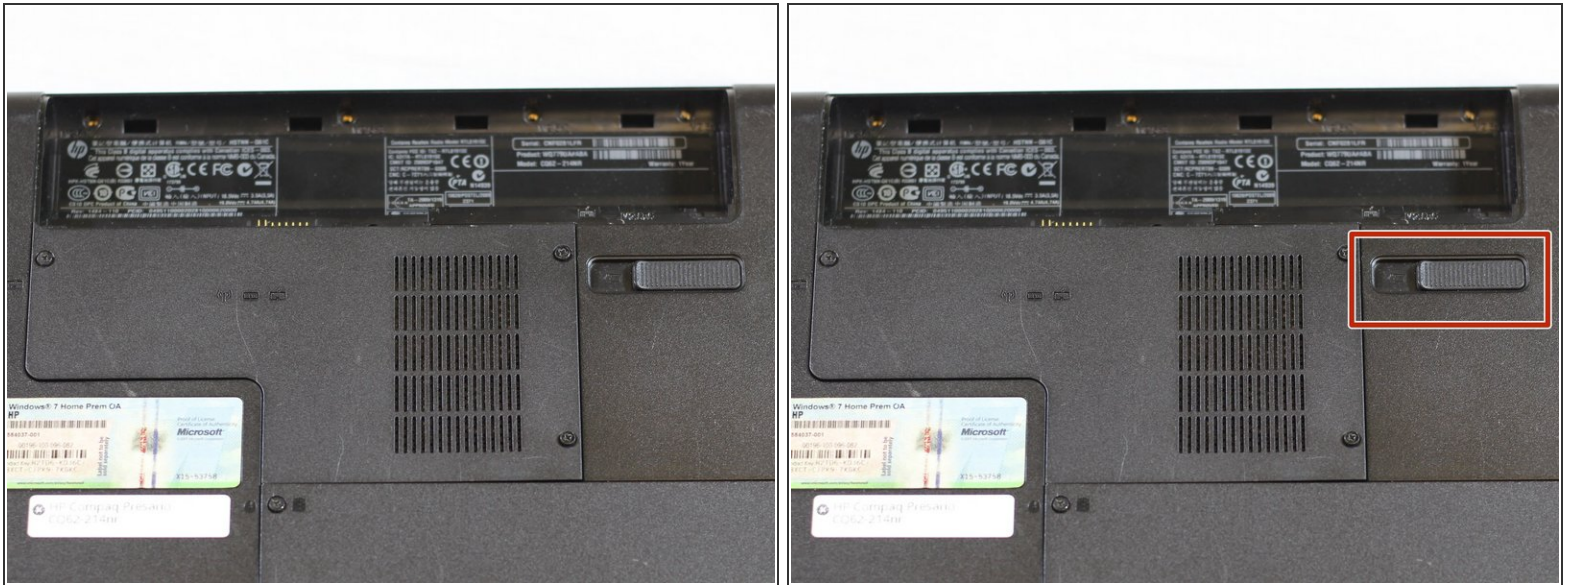


 It is advised to work on this device only when it is OFF, to avoid electrocution risks. Please make sure your laptop is powered off.

- On the underside of the battery, there is lock that keeps the battery in place. Using your finger, slide the battery lock to unlock the battery. When you have unlocked it, just lift the battery to remove it.

 We do not have a battery on our device to show how to take it off.




## Step 2 — RAM

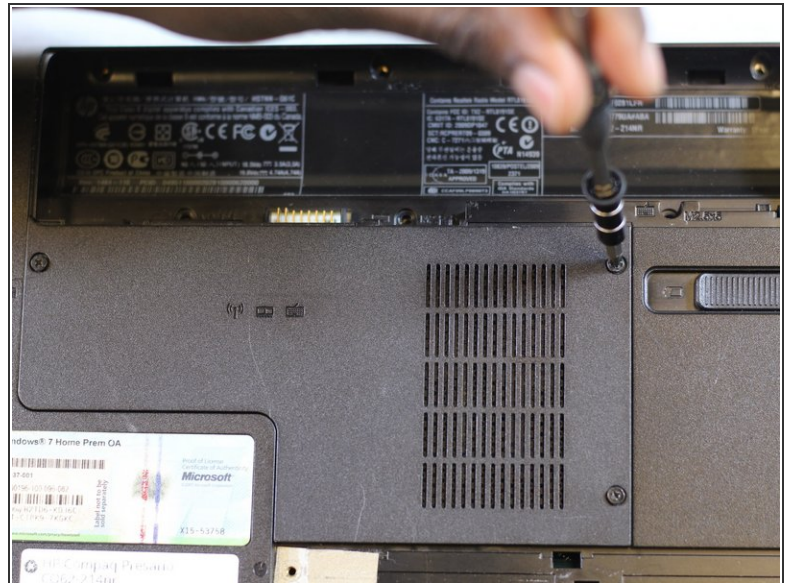



- Remove the three M2.5x5 mm Phillips screws securing the memory case.

## Step 3

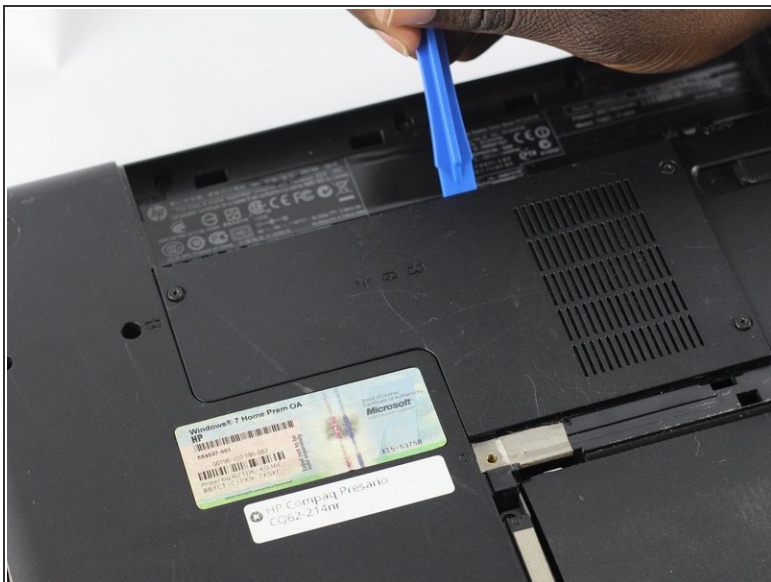

- Using a plastic opening tool, insert it alongside any openings on the case. Lift and slide the tool to remove the case.

## Step 4

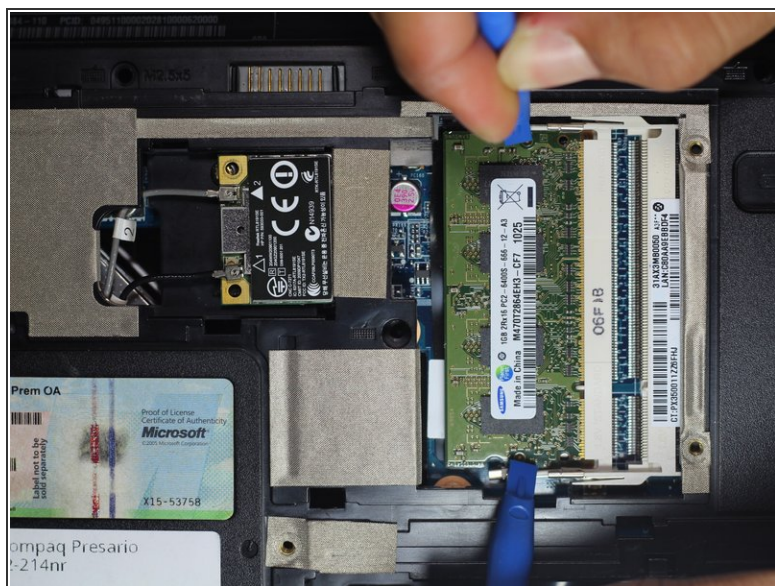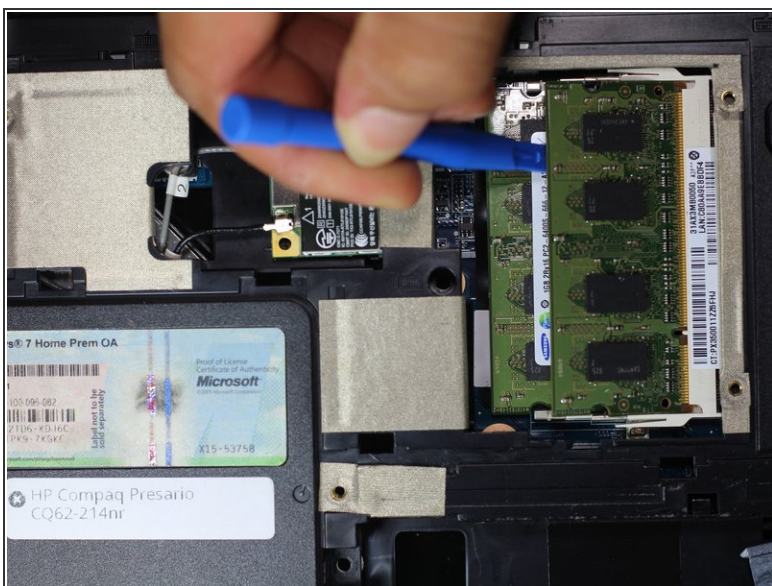

- Remove the top RAM chip by lifting up and pulling it towards the left.
- Once the top RAM chip is removed, remove the one underneath using the same method.

To reassemble your device, follow these instructions in reverse order.