

Alcatel POP C9 OT7047 Touch Screen Glass Digitizer Replacement

Alcatel POP C9 OT7047 Touch Screen Glass Digitizer Replacement

Written By: ZFix



This document was generated on 2020-11-22 12:44:33 PM (MST).

IN	JT	Ю.	\cap		11	C.	TI	\cap	N
ш	N I	П	v	ע	U	C		V	II

[video: https://www.youtube.com/watch?v=DHmEST3S1BE]



TOOLS:

- Phillips #0 Screwdriver (1)
- adhesive tape 3 mm (1)



PARTS:

Alcatel POP C9 touch screen (1)

Step 1 — Battery Cover Removal








- The Battery / Back cover is secured to the main frame by plastic clips.
- Use a plastic tool to remove it.

Step 2 — Battery Disconnecting 1






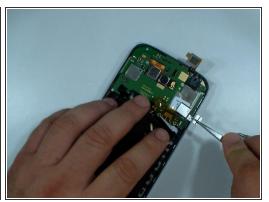

- Use a Phillips screwdriver and remove the two screws secured the battery connector shield.
- With tweezers careful remove the battery connector shield.


Step 3 — **Battery Disconnecting 2**

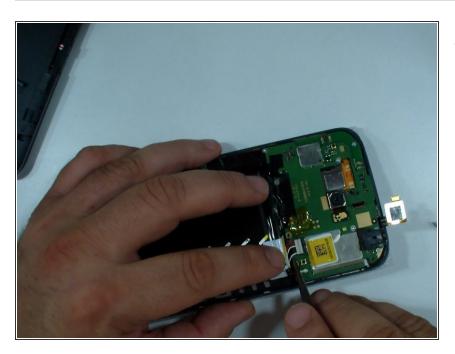

Disconnect the battery cable.

Step 4 — Main Board removal 1



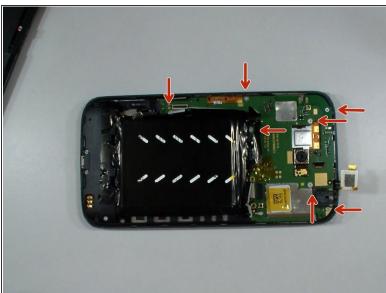

- Disconnect:
 - Touchscreen flex cable
 - Main Camera flex cable
 - LCD flex cable
 - Vibra-motor
- New line.Remove 7x Phillips screws.

Step 5







- Careful unstuck the Volume buttons flex cable and the Power button flex cable.
- Use a plastic tool and remove the Logic board.

Step 6 — Touch screen glass removal








- Use a hair dryer to warm the glass to soften the adhesive.
- Use a knife or tool with a sharp edge and start the separating the glass from the frame.
- Continue with a plastic tool.

Step 7



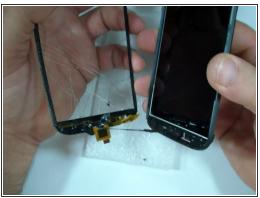



Insert wisdom here.

Step 8







- Clean the frame and install a new adhesive tape.
- Install the touch screen.

To reassemble your device, follow these instructions in reverse order.