



LG Muziq LX570 Motherboard Replacement

Remove the motherboard from the LG Muziq LX570.

Written By: Braden Burk



INTRODUCTION


This guide will instruct you how to carefully remove and replace your LG Muziq's motherboard.



TOOLS:

- [Phillips #00 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Battery

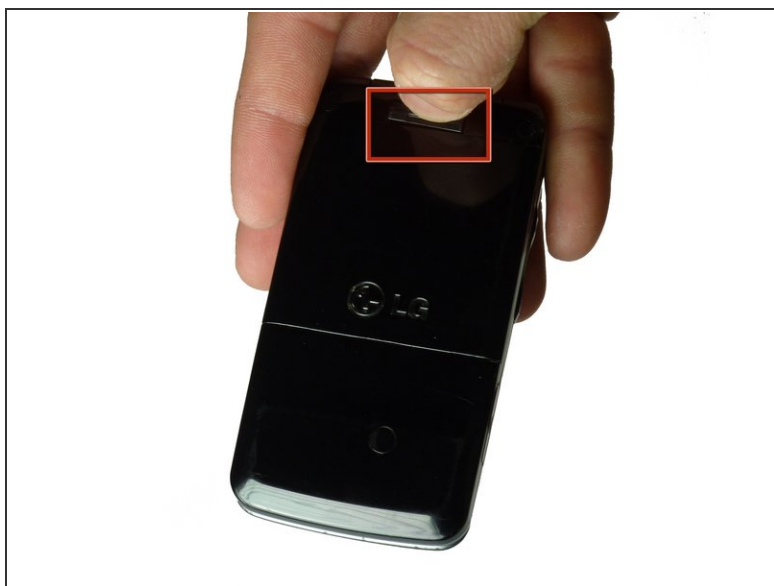


- Slide the battery cover release towards top of phone.
- Place one finger at each side of the battery cover.
- Lift and remove the battery cover.

Step 2



- Place a finger at the top corner of the battery and lift out of the phone.

Step 3 — Rear Case

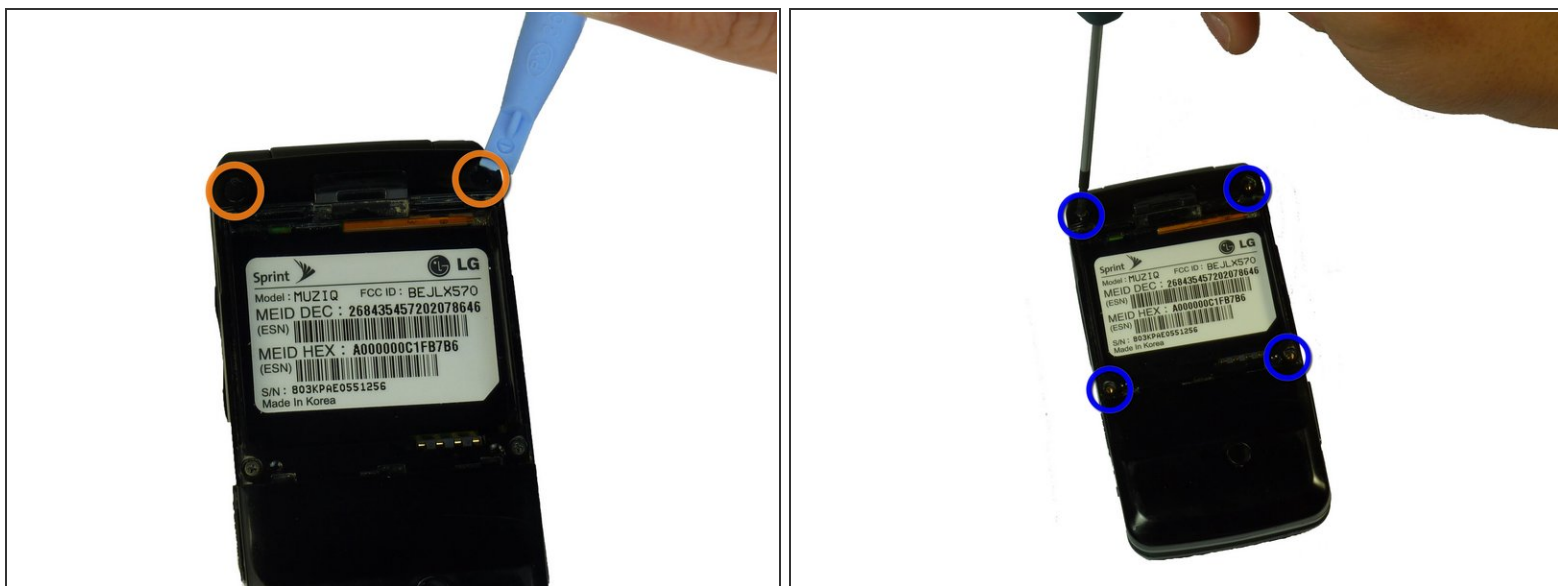


- Use the spudger to lift up the two screw covers at the top of the phone.
- Remove all four Phillips#00 (3.3mm) screws with screwdriver.

Step 4



- Use the spudger to lift up the rear case from the phone.
- ⓘ **Note:** Rear case is connected on all sides and will have to be detached on all sides before removal.
- Remove the rear case from the device.

Step 5 — Motherboard

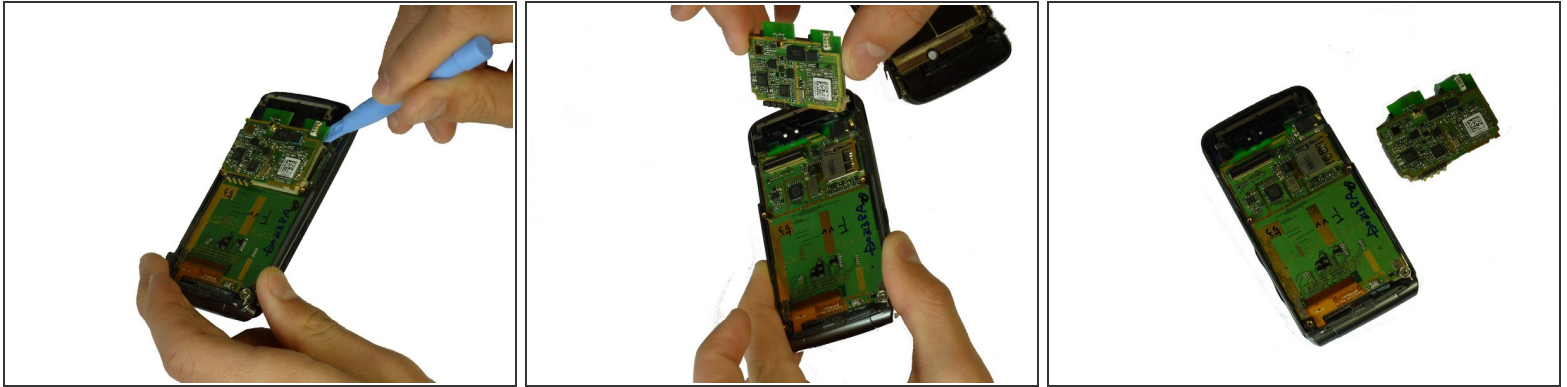

- Use the spudger to lift the motherboard from the phone.

To reassemble your device, follow these instructions in reverse order.