

Asus Zenbook UX31E Speaker Replacement

This guide will show you how to replace the speaker in your Zenbook UX31E.

Written By: Zachary Somerscales



INTRODUCTION

If your audio is distorted, replace the speaker component to get fresh, clear sound.



TOOLS:

- iFixit Opening Tool (1)
- T4 Torx Screwdriver (1)

Step 1 — Back Cover



- Using a T4 Torx screwdriver, remove the ten screws at the marked locations.
- i Place the screws into a container as to not lose them.

Step 2



- Carefully slide your iFixit Opening Tool between the back panel.
- Lift the back plate of your ASUS
 ZenBook UX31E, and place it to the side.


Step 3 — Speaker



- Use the plastic opening tool to pry open the back cover of the laptop.
- Remove the bottom panel of the laptop.

Step 4



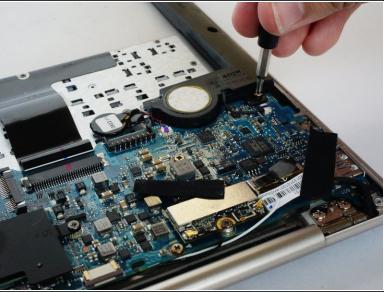


• Remove the screw connecting the speaker component to the motherboard using the screwdriver.

Step 5



Disconnect the sound cable from the motherboard.

Step 6

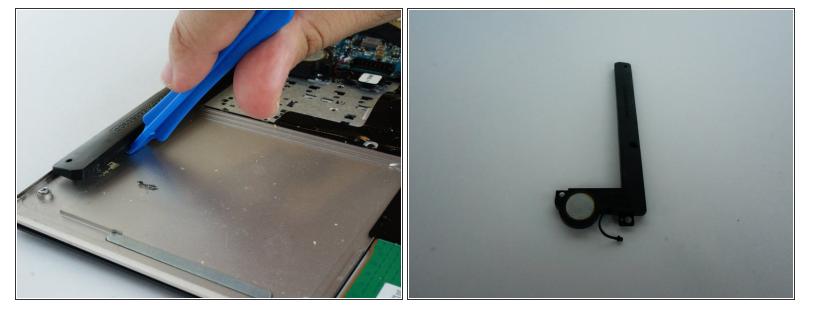

Using the plastic opening tool, pry open the speaker component from the computer.

To reassemble your device, follow these instructions in reverse order.