




# Nokia Classic 2600c-2b Display Screen Replacement

Written By: Ian VanZandt

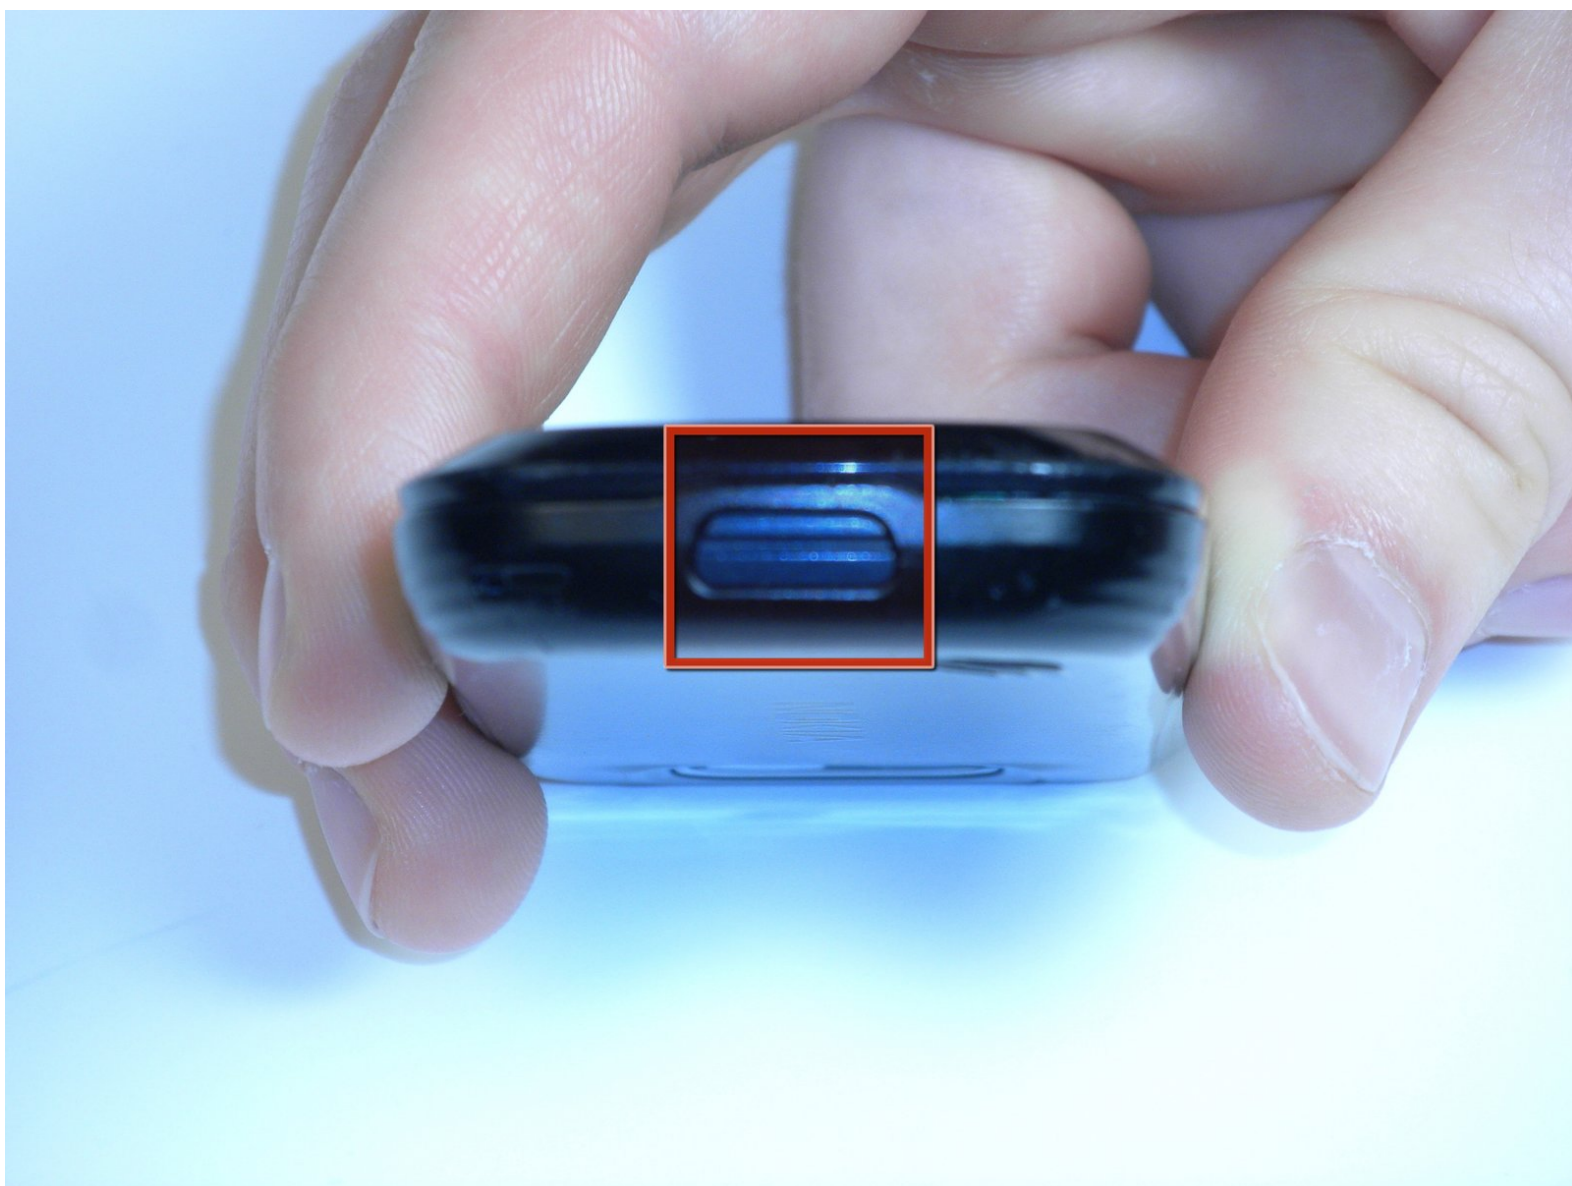




## TOOLS:

- [iFixit Opening Tools](#) (1)
  - [T5 Torx Screwdriver](#) (1)
-

## Step 1 — Replacing Display Screen

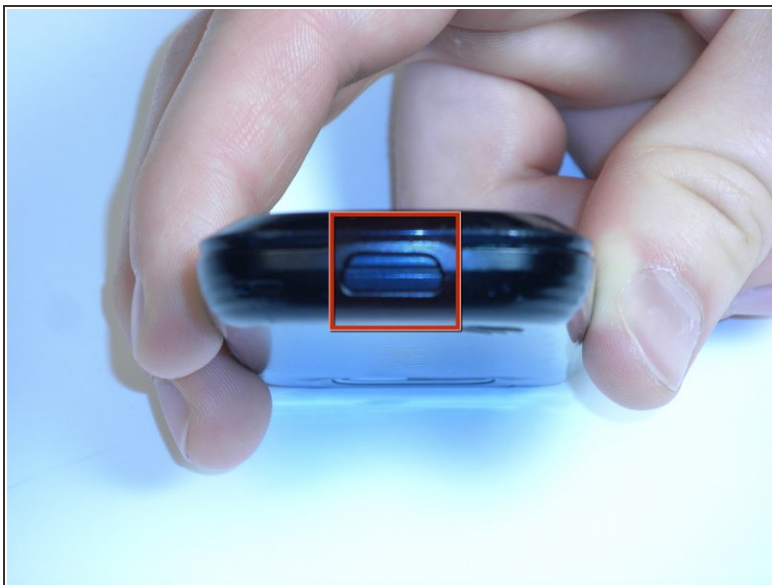

- Press down on the button located at the bottom of the phone, using the center ridge as a guide.
- Pull the phone apart from the bottom, keeping the button pressed down.

 **CAUTION!** The plastic opening tool may be used to gain leverage. Some force is required to open.

## Step 2



- Remove the back cover to expose the battery.

## Step 3




- Place a finger or plastic opening tool in the gap between the battery and the phone.
- Gently lift the battery out.



## Step 4



- Locate the plastic latches on the left and right sides of the phone.
- Insert the plastic opening tool or a fingernail into each latch and pry them open individually.

 **CAUTION!** Some force is required.

## Step 5




- Remove the faceplate with the number pad attached.

## Step 6



- Turn the faceplate so the number pad faces downward.
- Lift the number pad out of the faceplate.

## Step 7

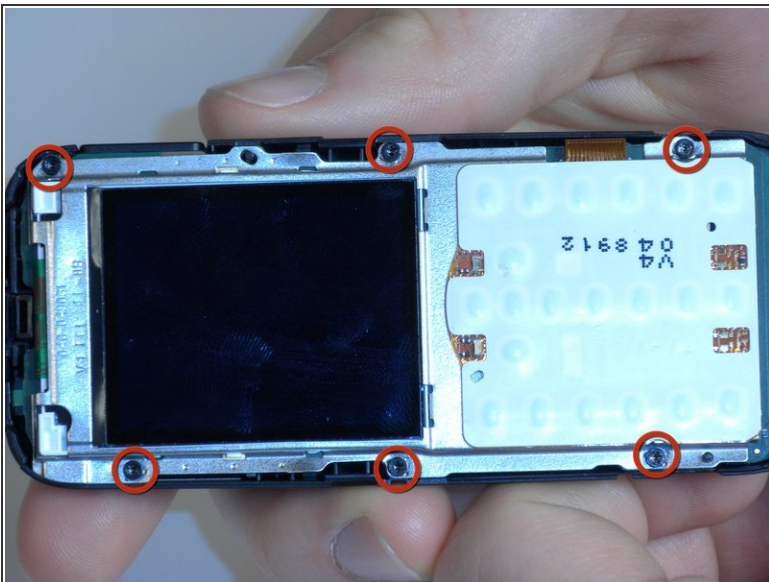



- Locate the six screws positions along the edges of the motherboard.
- Unscrew the six screws using the Torx 5 screwdriver (see Introduction for description of a Torx 5 screwdriver).



**CAUTION!** Place the screws in a secure location.

This document was generated on 2020-11-24 07:34:54 PM (MST).



## Step 8

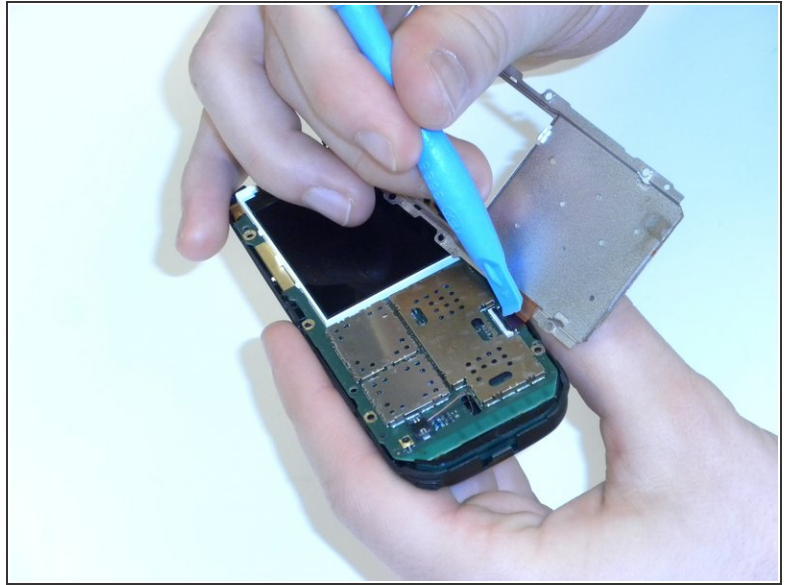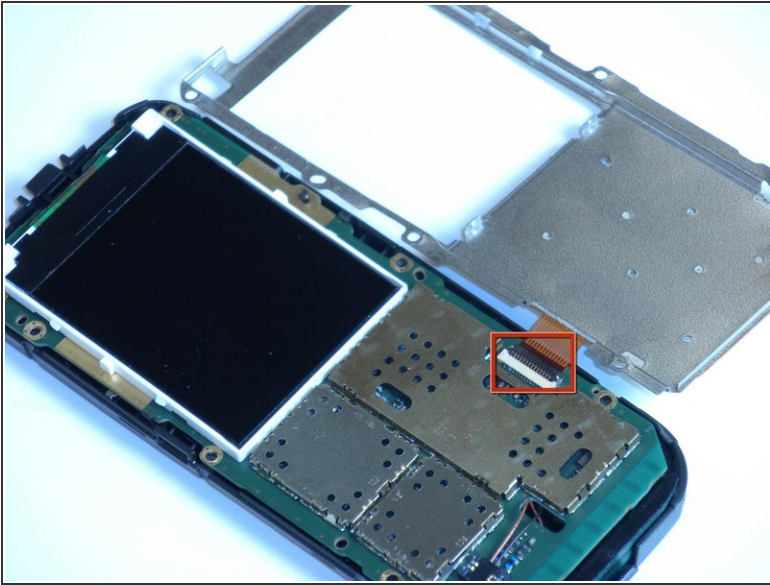

- Locate the orange ribbon tape connecting the metal display plate to the motherboard.
- Lift the black latch attaching the tape to the motherboard.
- Gently pull the tape out of the latch slot to remove the metal display.




## Step 9

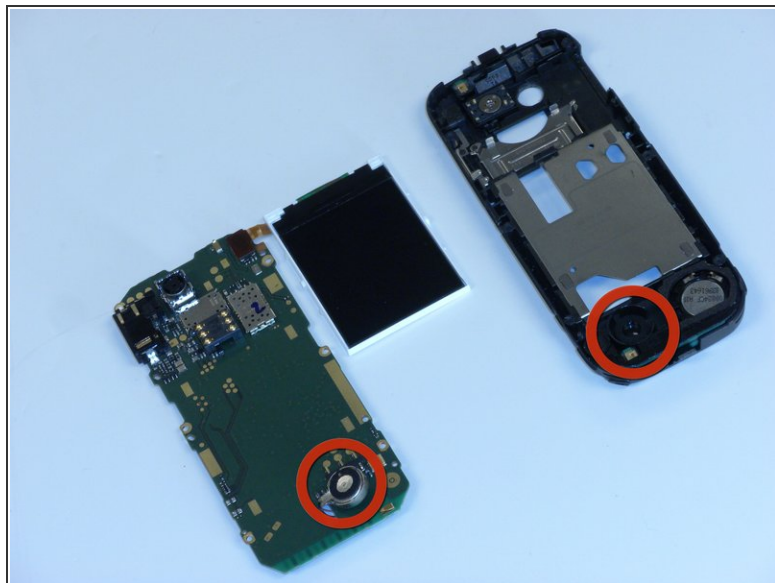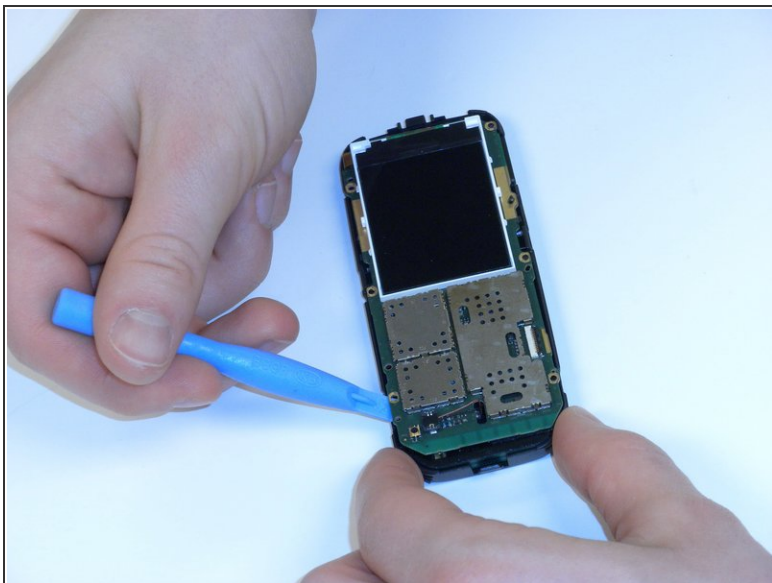

- Using the plastic opening tool, gently pry off the motherboard from the plastic shell.

**⚠ CAUTION!** When pulling the motherboard out, be careful not to damage the battery under the lower left hand corner of the motherboard.

## Step 10

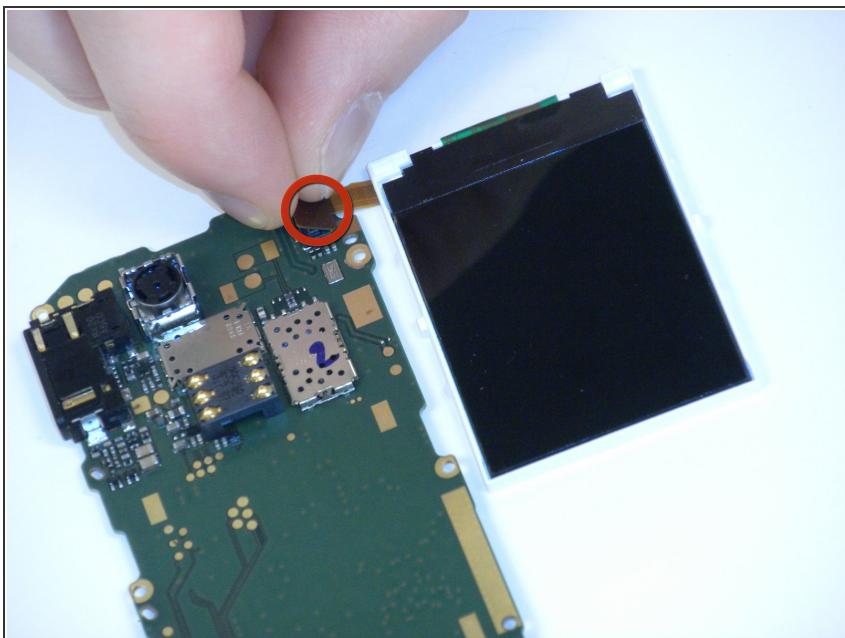

- Gently pull the orange ribbon tape up to remove the display.
- Replace display screen.
- Follow the instructions in reverse order to reassemble the phone.



To reassemble your device, follow these instructions in reverse order.