



# Dell Inspiron 910 Battery Replacement

Before starting the procedures make sure the...


Written By: Kyle Beekman



# INTRODUCTION

Before starting the procedures make sure the Dell Inspiron 910 laptop is turned off and unplugged from the charger.

## Step 1 — Battery

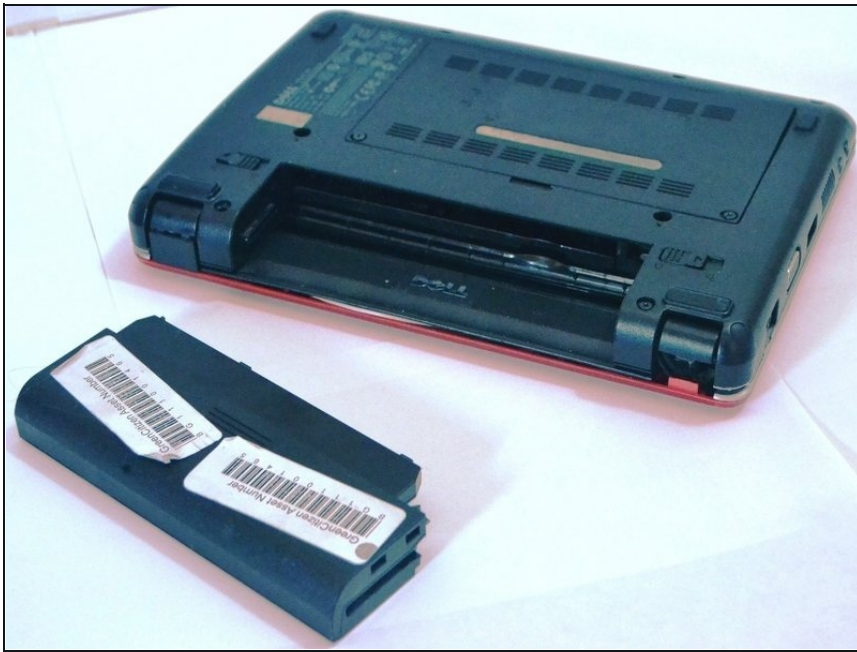

- Flip the laptop so the battery is facing upwards.
- Push the battery release tabs toward the center of the device.
- Remove the battery.

---

To reassemble your device, follow these instructions in reverse order.