



Brookstone Big Blue Unplugged Battery Replacement

Removal and replacement of the battery on Big Blue Unplugged bluetooth speaker.

Written By: Alex P



 **TOOLS:**

- Phillips #1 Screwdriver (1)
- 6-in-1 Screwdriver (1)

 **PARTS:**

- Big Blue Unplugged Replacement Battery (1)

Step 1 — Introduction




- Big Blue Unplugged is a little brother of the Big Blue Party.

Step 2 — Remove bottom cover and screw hole plugs



- The bottom cover is simply glued in place. Use a flat tip screwdriver to lift a corner and then peel it off the bottom.
- Use small flat tip screwdriver to pry 4 screw hole covers out.

Step 3 — Remove bottom screws.

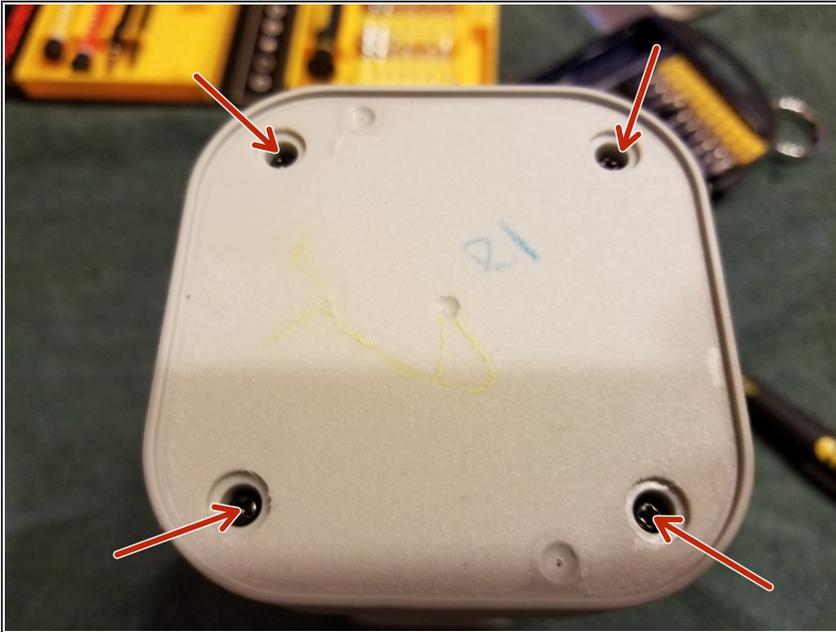

- Use #1 Phillips screwdriver to remove 4 screws from the bottom.

Step 4 — Take the cover off





- The bottom cover should come right off when you pull on it.
- You should see the battery now.

Step 5 — Remove the battery.



- Remove the tape holding the battery in place.
- Unplug the battery by pulling apart white plastic connectors.

Step 6 — Reassembly

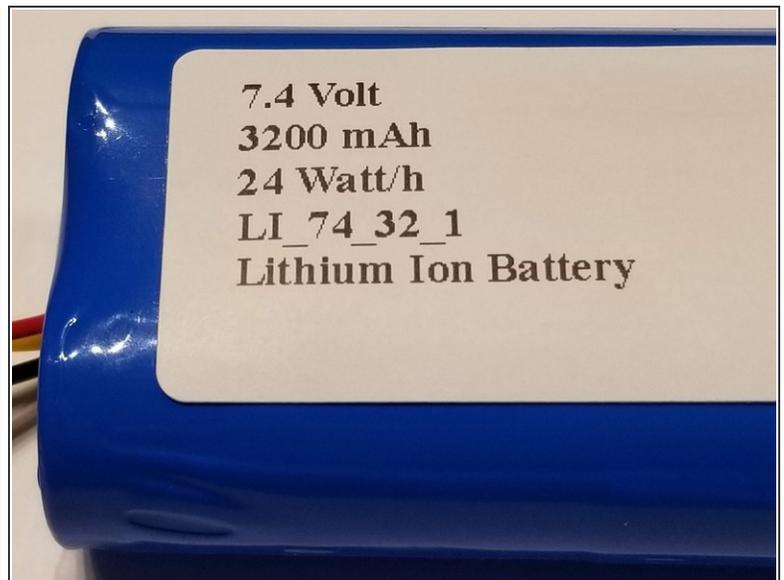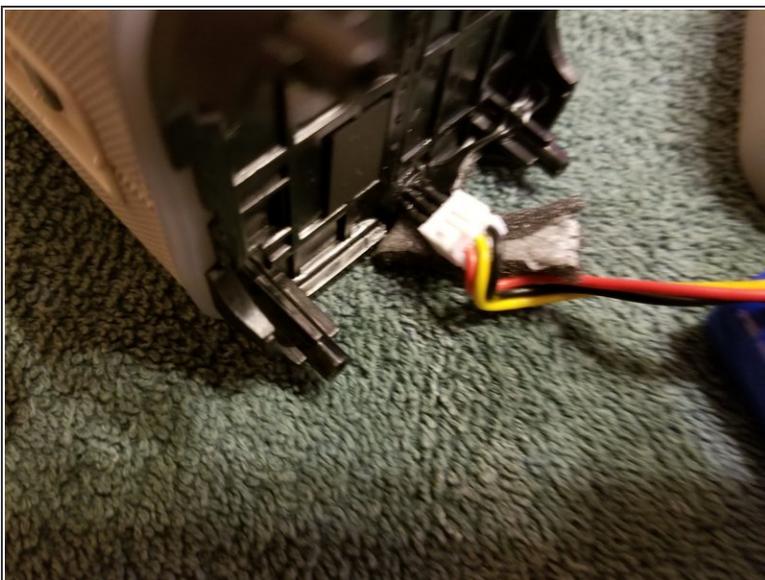

- Connect new battery
- The easiest way to fit the battery, is to put it into the bottom cover first and then put the cover back on the unit.
- The bottom cover will go on one way only - Brookstone logo facing the front.

This document was generated on 2022-01-12 05:11:41 AM (MST).

To reassemble your device, follow these instructions in reverse order.