



# iHome iBT84 Motherboard Replacement

Will show how to take apart the speaker to access the motherboard, a prerequisite for replacing anything else.

Written By: Reece Ahler



---

 **TOOLS:**

- [Phillips #0 Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
-

## Step 1 — Motherboard



- On the opposite side of the speaker should be a sticker, remove it with your fingers or the flat plastic iFixit tool.
- Use a Philip's screwdriver to take the screws out of the cover.

## Step 2




- Once the screws are all out, the cover should come off revealing the motherboard.

### Step 3



- You will notice that the triangular black volume piece is loose, make sure to take that off revealing the buttons.
- Once that is done, the motherboard can be taken out. **May require** some wiggling.
- Make sure none of the wires are damaged and that they are all connected.

### Step 4

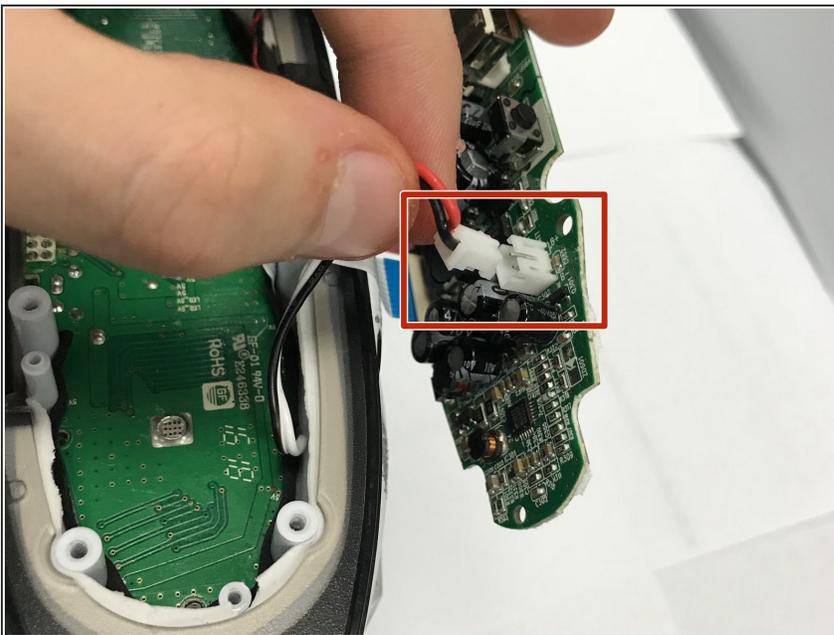

- The connections shown here can be taken off by pulling on the white plastic connector piece.
- The same can be said about the white, paper like, connectors. Pull on them **gently**.
- Once all connections are apart, the motherboard is safe to be replaced.

To reassemble your device, follow these instructions in reverse order.