


Sony PC Companion - How to Flash Password Locked or Not Powered Xperia Device

Sony PC Companion - How to Flash Password Locked or Not Powered Xperia Device

Written By: ZFix

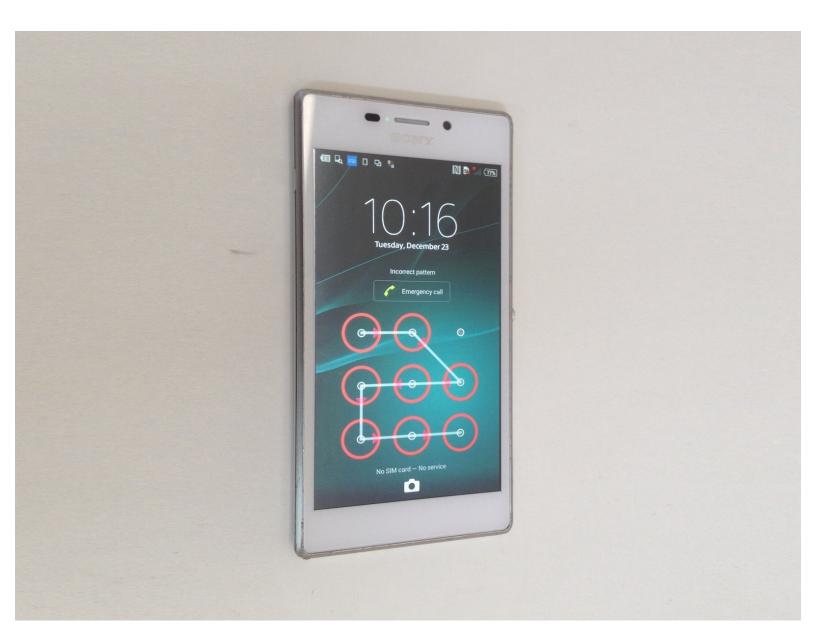

INTRODUCTION

Sony PC Companion - How to change the firmware on your Xperia Device, if you forgot your Password, PIN, Pattern, Screen Lock.

PC Companion will install the latest firmware on your phone and will reset it to the Factory setting.

You can use this technique also if your device is not boot properly.

!!! This will erase all your personal data!!!


If your device is connected to the internet and you have an installed Google account on it, look at this manual:

How to Use Android Device Manager to Remotely Reset an Android Device

<u>"'Please SUBSCRIBE to my channel ツ"</u>


[video: http://youtu.be/u47fAYa0a4w]

Step 1 — Sony PC Companion - How to Flash Password Locked or Not Powered Xperia Device

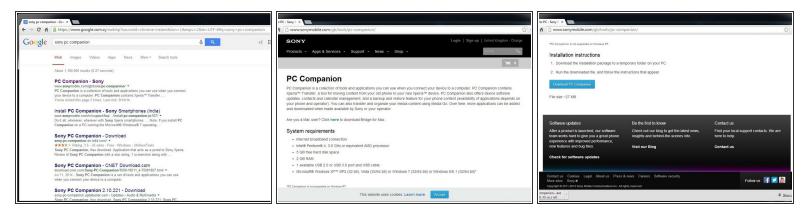

- Search and download Sony PC Companion.
- Direct link to Sony PC Companion

Step 2

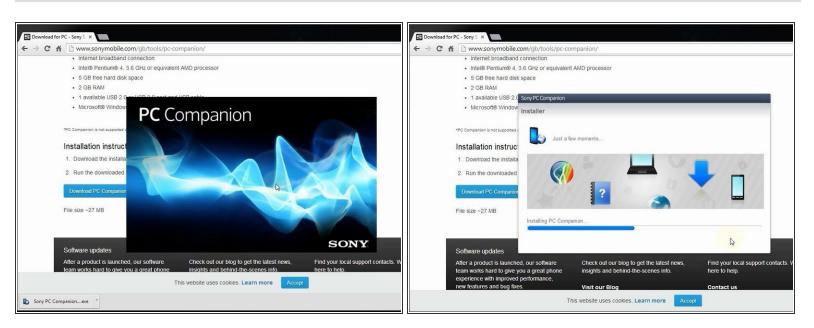


Install Sony PC Companion in your PC.



- From here you can update your firmware, but when you connect the phone, it must be switched on and not in security or password screen.
- We will start "Support Zone" because from here we can flash the phone from switched off state regardless of whether there is a password.
- Now start "Phone / Tablet Software Update".


Step 4

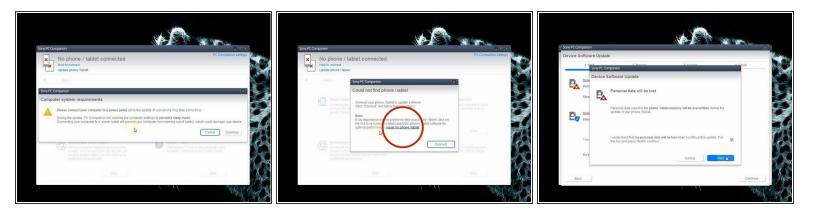

A Connect your laptop to power supply since the update of your phone will take some time.

 Now choose "repair my phone / tablet". By this way you can fully erase your phone and remove any security password, PIN etc., or change firmware if your phone have OS problem and can't be powered on correctly.

A This is your last warning about losing your personal data.

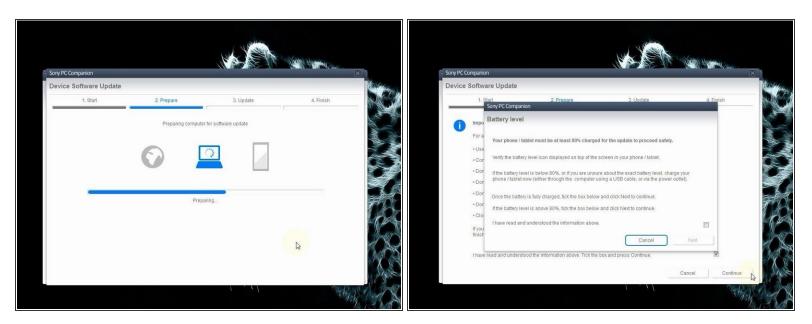


- PC Companion will download some files to prepare your PC for software update.
- Your phone / tablet must be at last 80% for the update to proceed safely!

Step 6



• Select the model of your phone.

\bigwedge You should not confuse the model.

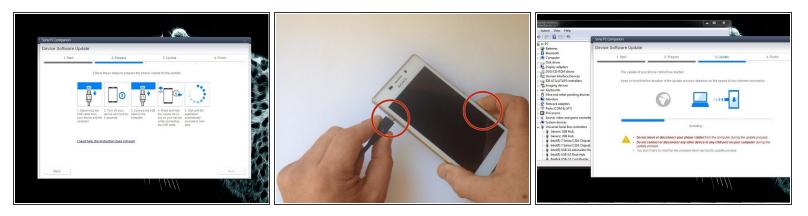

- The USB cable must be connected only to the PC.
- Turn off the phone.
- Press and hold the Volume Down button while plugging the cable into your phone.
- Once connected, PC Companion will download necessary firmware and will upload it to your phone.

Step 8



- Your PC must recognize your phone like SOMC Flash Device.
- If you have a problem with drivers (your PC can't recognize your phone), search in the internet for "S1Boot Fastboot" drivers or use the link below.
- <u>Direc link to Android WinUSB drivers</u>

	Sony Company I		Skyr/Compron si	
tives IDenices controllers strating devices s TT J game controllers 4ub 4ub 4ub 4ub 4ub 4ub 4ub 4ub 4ub 4ub	1. Start 2. Pagent 3. Option 4. Protein These / Total repeated. Fraces below these streps to start the prices rates: Image: I	Ves Devices controllers sinting devices s 17) J game controllers Hub es/C236 Chipset to Datenable Ho J Doot Nes 20 Cand Rewter.	Line Structure Update Line Structure Value Line Structure Value Line Structure Value Remember the Structure Structure Structure Remember the Structure Structure Remember the Structure Structure Structure Remember the Structure Structure Remember the Structure Structure Structure Remember the Structure Structure Structure Remember the Structure Structure Remember the Structure Structure Structure <th>The second secon</th>	The second secon

- When PC Companion finished with update process, disconnect the phone and switch it on.
- Now your phone is in factory condition, with erased custom data and without password protection.
- •
- Did you do it successfully?
- F Please SUBSCRIBE to my channel ツ

To reassemble your device, follow these instructions in reverse order.