

iPad Wi-Fi LCD Replacement

Replace a broken LCD on your iPad Wi-Fi.

Written By: Andrew Bookholt



INTRODUCTION

Use this guide to replace your iPad's LCD.



TOOLS:

- Metal Spudger (1)
- iFixit Opening Tools (1)
- T5 Torx Screwdriver (1)



PARTS:

- iPad Display Clip Set (1)
- iPad Wi-Fi (1st Gen) LCD Flex Cable (1)
- iPad Wi-Fi (1st Gen) LCD Panel (1)

Step 1 — Display Assembly








- If your display glass is cracked, keep further breakage contained and prevent bodily harm during your repair by taping the glass.
- Lay overlapping strips of clear packing tape over the iPad's display until the whole face is covered.
 - This will keep glass shards contained and provide structural integrity when prying and lifting the display.
- Do your best to follow the rest of the guide as described. However, once the glass is broken, it will likely continue to crack as you work, and you may need to use a metal prying tool to scoop the glass out.

Mear safety glasses to protect your eyes, and be careful not to damage the LCD screen.





- In this guide you will be prying the iPad's display assembly away from the aluminum body. Read ahead and follow the directions closely to avoid damaging the display assembly or the fragile clips holding it in place.
- There are 14 metal clips holding the display assembly in place, shown at left. As you pry in the following steps, do your best to pry around these clips and not slice through them with your opening tool.
 - (i) If you do happen to break some clips, you can buy replacements <u>here</u>.

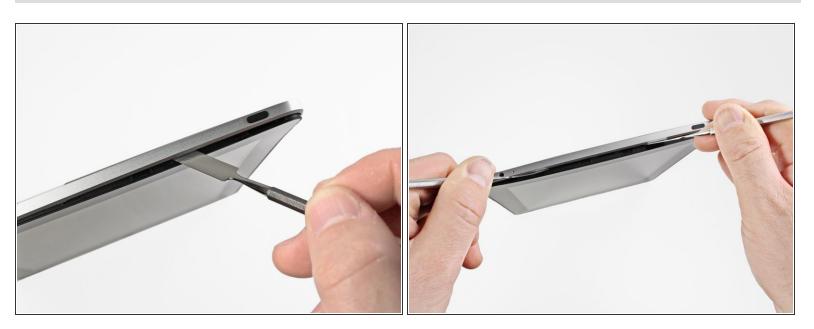

- Insert a metal spudger between the top edge of the display assembly and the rear panel assembly.
- Rotate the spudger away from you to release the tabs along the top edge of the display.
- Insert a second metal spudger between the top edge of the display assembly and the rear panel assembly to keep the tabs from snapping back into place.




- With one spudger, work your way along the right edge of the iPad.
- The front panel is held to the aluminum back by metal clips on the top, bottom, and left sides. The right side has plastic tabs which slide into recesses in the backplate.
- Once the clips are released, lift the left side of the front panel up and slide it to the left to clear the tabs from the aluminum backplate.

Pry carefully and gently—if you feel resistance, stop and pry at another spot.



- Lift the display assembly away from the rear panel assembly by its bottom edge.
- ♠ Do not attempt to remove the display at this time, as it is attached to the rear panel assembly.

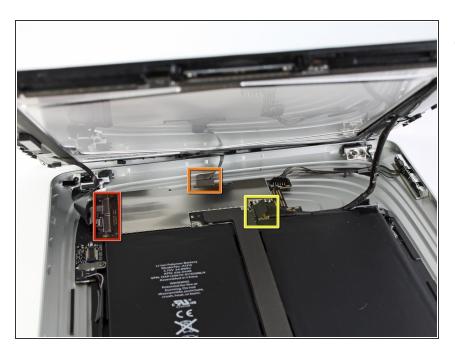

- In the following steps, you will disconnect the three cables attaching the display assembly to the logic board. The cables are for the following components:
 - Digitizer
 - Ambient Light Sensor
 - Display Data Cable








- Use the edge of a plastic opening tool to flip up the retaining flaps holding the digitizer ribbon cables in their sockets on the logic board.
- A Be sure you are flipping up the retaining flap, **not** the socket itself.
- Pull the digitizer ribbon cables straight out of their sockets.




 Use a plastic opening tool to remove the ambient light sensor connector from its socket by gently prying upward.

Step 9

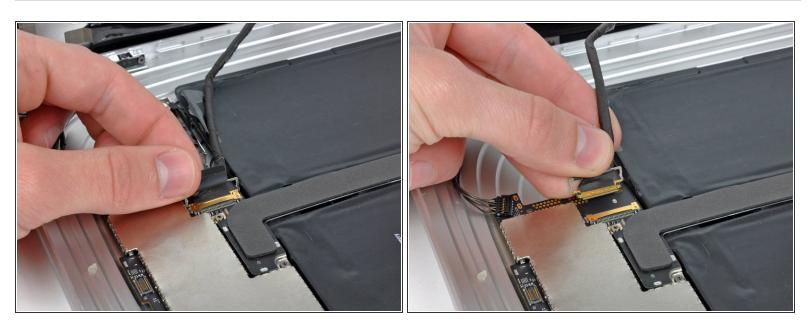


- Disconnect the display data cable from the main board by flipping up the metal retainer by its black plastic pull tab.
- Pull the cable connector away from its socket.
- Pull the connector parallel to the face of the logic board.

This document was generated on 2021-05-18 07:59:45 PM (MST).

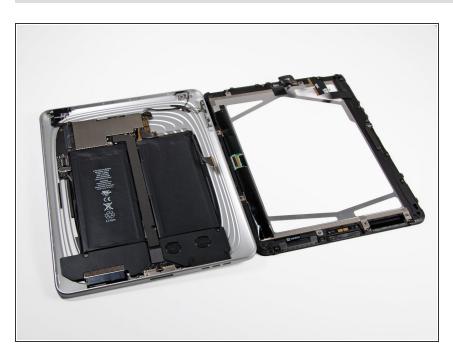


 Remove the display assembly from the rear panel assembly.

Step 11 — Ambient Light Sensor

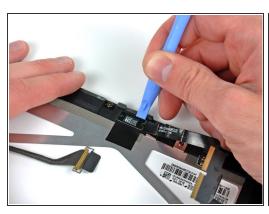



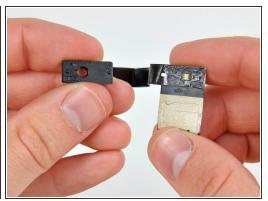

- (i) If you are reusing the LCD, it is not necessary to peel the ambient light sensor off the back face of the LCD.
 - Use the edge of a plastic opening tool to carefully pry the ambient light sensor board off the adhesive securing it to the display frame.
 - Once you've gained enough clearance, peel the ambient light sensor off the LCD.
- ⚠ Be careful not to crease the ambient light sensor below its top section, as the portion with adhesive applied may break off.
- If necessary, attach the plastic view window to your new ambient light sensor before installation.

Step 12 — LCD



 While holding the digitizer cable down, carefully peel back the piece of tape connecting the digitizer cable to the display frame.





- Remove the three T5 Torx screws securing the clips and LCD brackets covered in EMI tape near the home button switch.
- Carefully peel the display clip and its attached tape off the black plastic display frame.
- If you are replacing the LCD, be sure to transfer these pieces of EMI tape and their attached clips to the new LCD.



 Remove the remaining T5 Torx screws securing the LCD to the black plastic display frame.



- Insert the edge of a plastic opening tool under one of the ears attached to the steel LCD frame.
- Twist the plastic opening tool to gently pry the LCD up off the adhesive securing it to the front glass panel.
- Re sure not to excessively bend the LCD, as it is made of glass.




 Repeat the process detailed on the previous step to pry up the display around the three sides opposite the digitizer cable side of the display.






- Lift the LCD from its free end, and remove it from the display frame.
- Carefully peel the adhesive securing the long side of the LCD to the display frame, then remove the LCD.

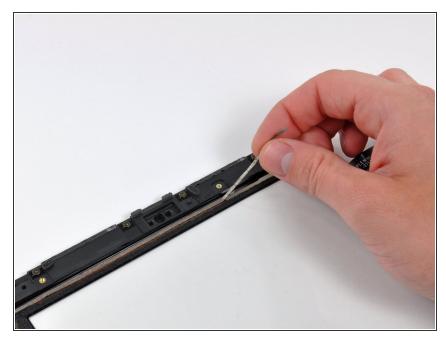

- If it is still stuck to the front panel, remove the strip of EMI tape near the ambient light sensor socket.
- If necessary, transfer this to your new LCD.
- If it is attached to the LCD and you are reusing the LCD, skip this step. If you are replacing the LCD as well, transfer the strip of EMI tape to your new LCD.

Step 19

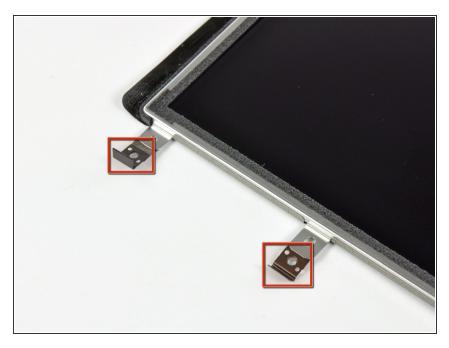

 If they are still in good shape, transfer the clips and EMI tape near the bottom of the LCD to your new LCD.

To reassemble your device, follow these instructions in reverse order.