




Nokia 6133 Logic Board Replacement

Use this guide for removal and replacement of a Nokia 6133 logic board.

Written By: Vincent Benvin

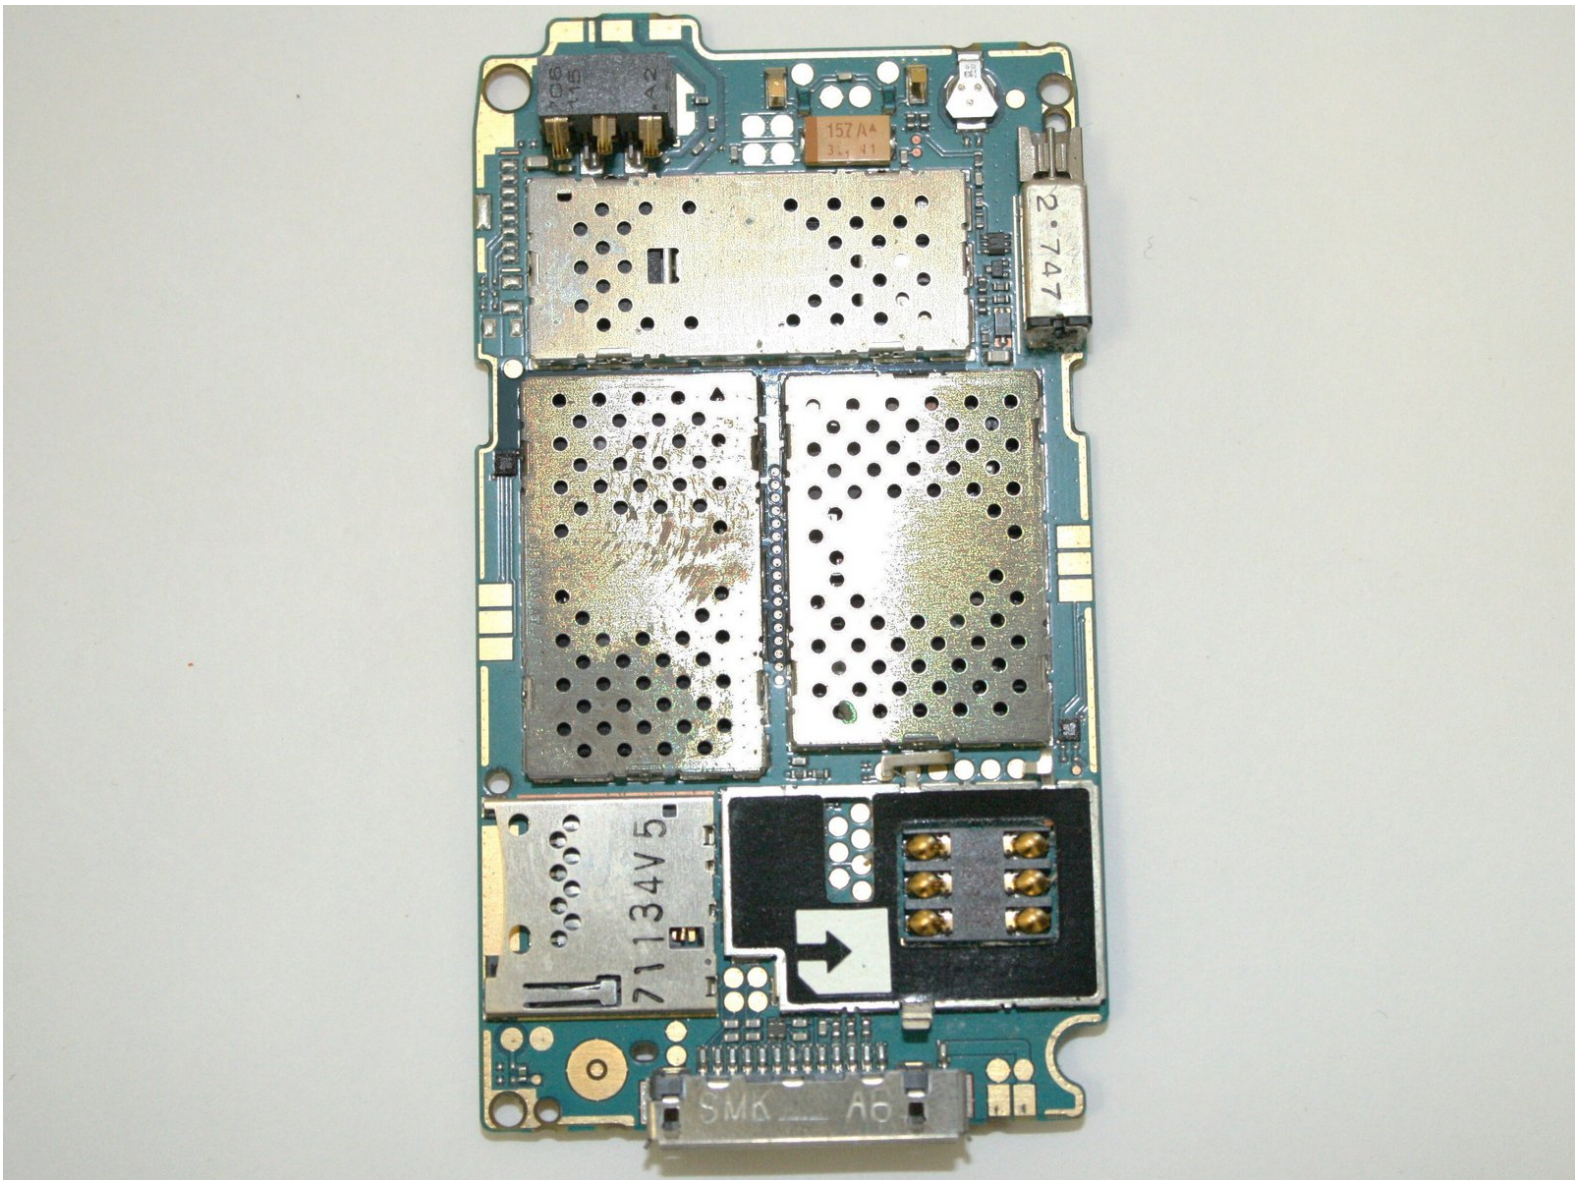



TOOLS:


- [T6 Torx Screwdriver](#) (1)
 - [64 Bit Driver Kit](#) (1)
-

Step 1 — Battery



- Remove the back cover of your cell phone by applying slight pressure with your thumb and pushing up towards the top of the phone.
- Lift off back cover.

Step 2

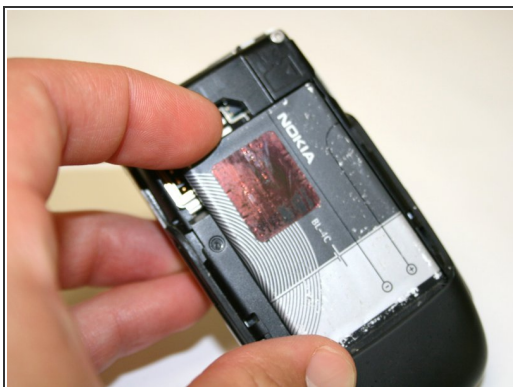

- Use your index finger to first push down and then lift up the battery as shown.
- Remove battery from cell phone.

Step 3 — Keypad



- Unscrew two T5 torx screws easily visible on the back side of the cell phone
 - Screws: 7.8mm
 - Once screws are removed, the phone will separate easily into two pieces connected by a flexible wire strip.
- ⚠ Be sure to not lose or disconnect the indicated piece that the screw mounts to. It is spring loaded and is very difficult to reattach.

Step 4



- Use an iPod opening tool to gently pry open the back case as indicated in the picture.
- Work your way down the side of the phone starting from the top down to the bottom. (Use multiple prying tools if necessary)
- REPEAT on both sides, and be careful not to stab the circuitry with the tools.

Step 5




- Gently pull the phone apart and the flexible wire should detach from its connection as shown.
- If not, lift up on the black tab within the left box in the picture.
- With the front half of the phone, push the keypad towards the removed portion of the phone.
- To clean, use a damp cloth with water.

Step 6 — Logic Board



- Use a T6 Torx Screwdriver to remove the screw located in the bottom right corner of the back panel.
- Screw: 6.4 mm

Step 7

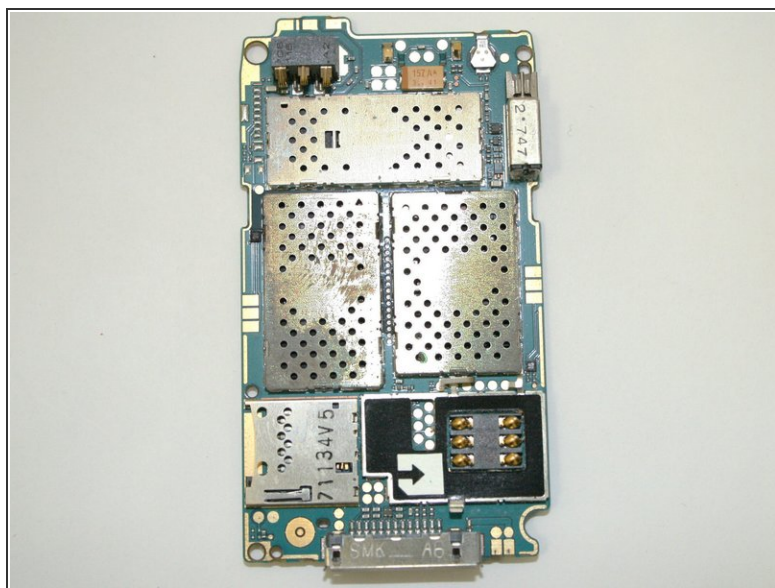

- Lift up from the top of the logic board as shown to remove.

To reassemble your device, follow these instructions in reverse order.