



# HTC One X Button Replacement

The HTC One X features 3 hard buttons, power, volume up, and volume down, as well as 3 capacitive buttons at the bottom of its screen. Follow this guide to repair your HTC One X's buttons.

Written By: Nyles Peterson



---

## INTRODUCTION

# IMPORTANT NOTE FOR FIXING CAPACITIVE BUTTONS

Repairing your phone's capacitive buttons may require replacement of your phone's digitizer, which may be very difficult, but is outlined in the screen replacement guide. There's a simple software work around for unresponsive capacitive buttons via an app called Button Savior which can be found [here](#).



### TOOLS:



- [iFixit Opening Tools](#) (1)
  - [Safety Pin](#) (1)
  - [Phillips #00 Screwdriver](#) (1)
  - [Tweezers](#) (1)
-

## Step 1 — Remove SIM card slot





- Insert a safety pin, or other small object in the small opening next to the Sim card slot to remove the SIM card.
- ⓘ The Sim Card Slot is located at the top of the rear panel.

## Step 2 — Remove front panel

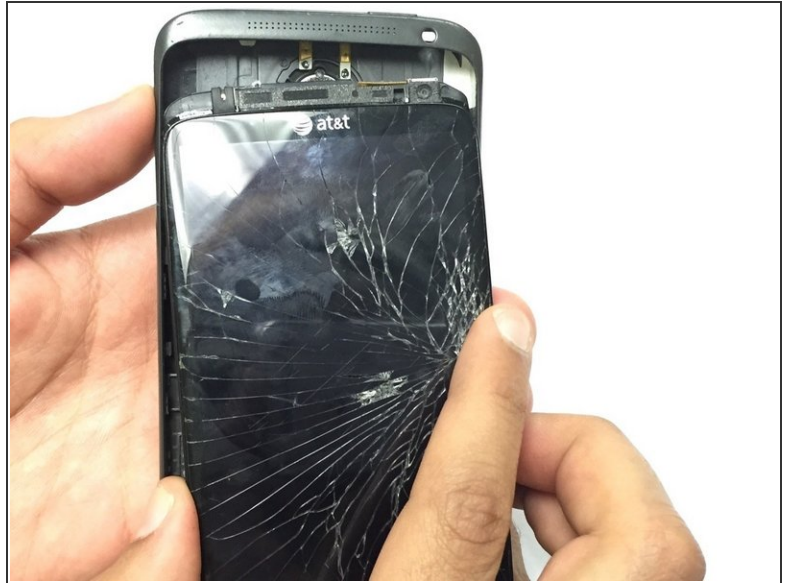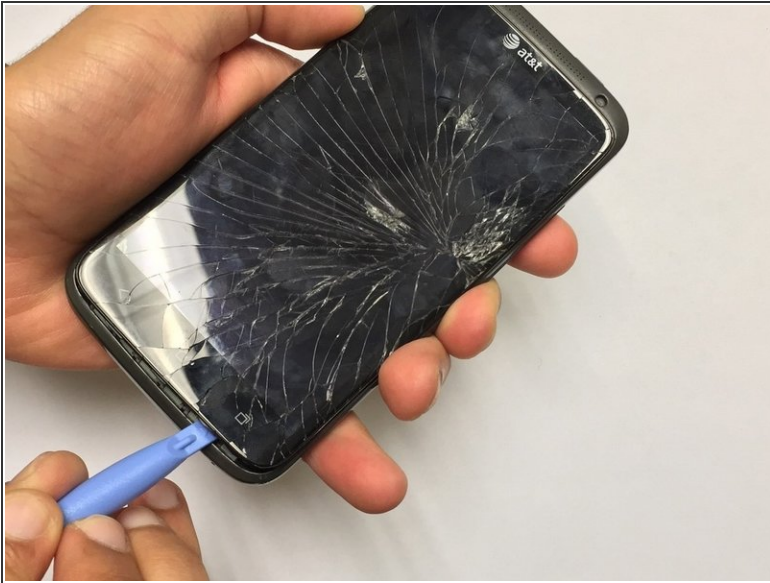

- Using a plastic opening tool, carefully separate the display screen from the rear panel.
  - ⓘ The display assembly is a tight fit therefore the removal must be carried out carefully with firm, constant force being applied around the bottom corners and sides of the panel. Note that the top of the phone is underneath the panel, and will not come out.
- ⚠ If your display is cracked, take extra caution when separating the display from the rear panel to prevent further breakage.
- Set aside the rear panel.


## Step 3 — Remove the top plastic panel

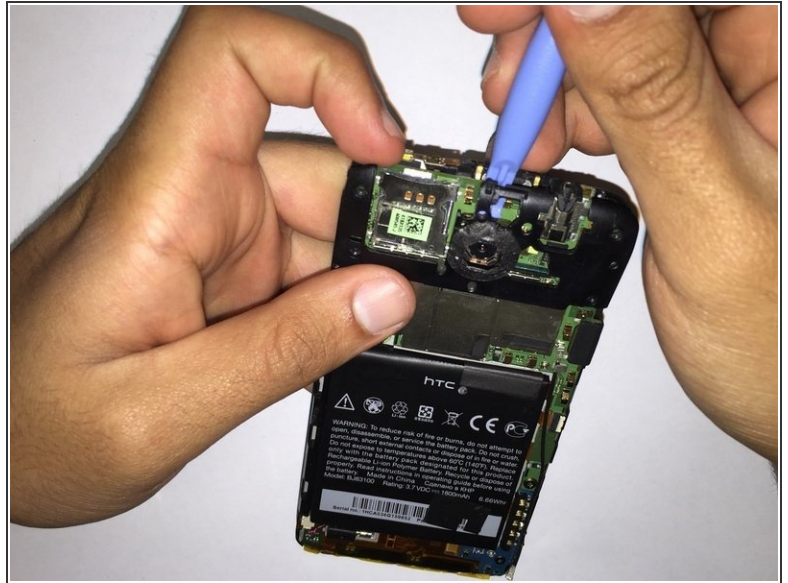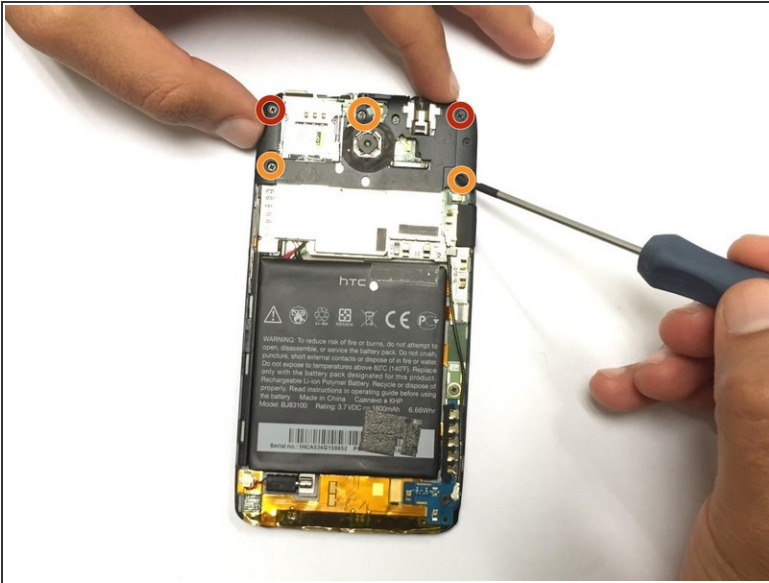

- Remove the five screws at the top of the panel using a Phillips head screwdriver.
  - Two 2.05mm Philips head screws
  - Three 2.44mm Philips head screws
- ❗ Also remove the screws with the warranty stickers.
- Once the screws are removed, gently remove the plastic cover using a plastic opening tool to detach the edges from the front panel.
- ⚠ Once you have disassembled your device, your warranty will no longer be valid.




## Step 4 — Remove antenna and disconnect the PCB board

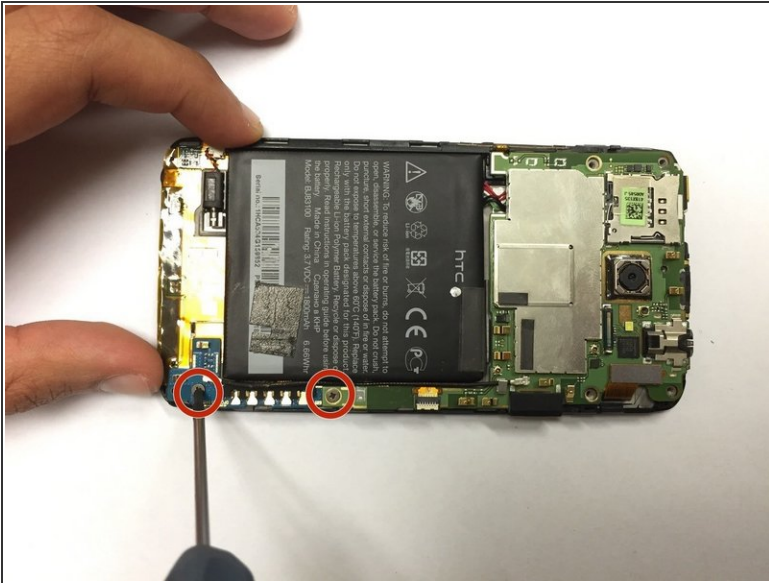

- Remove the two screws at the bottom right corner of the front panel using a Phillips head screwdriver, as shown in the image.
  - Two 3.35mm Philips head screws
- Use tweezers to disconnect the antenna from the logic board to the PCB board.
- Remove the tape connected to the motherboard.

## Step 5 — Disconnect the battery and remove PCB board

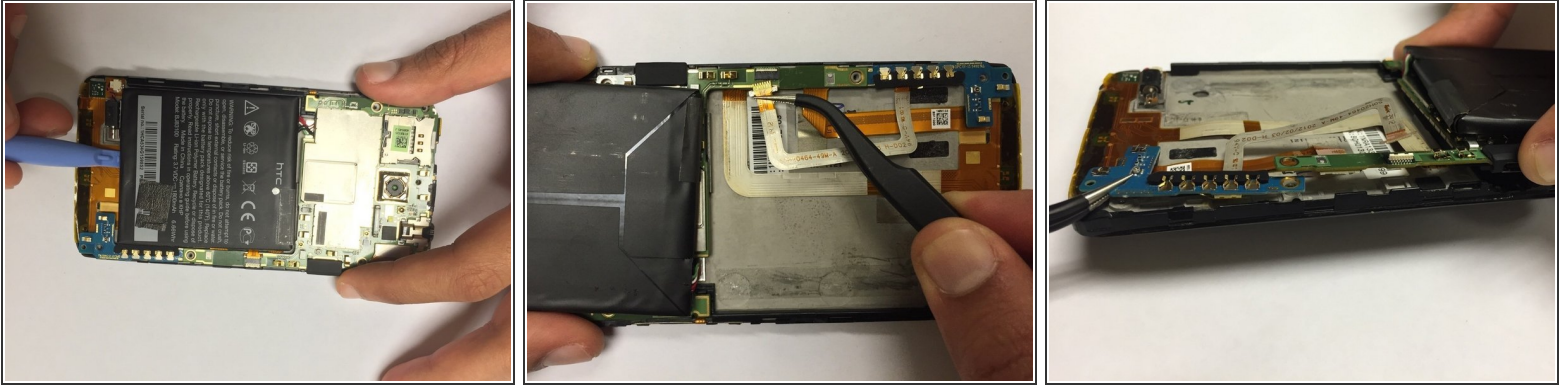


- Remove the tape holding the battery in place.
- Gently lift the battery from the bottom using a plastic opening tool.
- ⓘ You may have to apply heat to melt the glue holding the battery in place.

⚠ Do not completely remove the battery yet

- You can now disconnect the flex cable holding the PCB board in place. Gently open the gates using tweezers or a plastic opening tool and use tweezers to slide the flex cable out.
- Now that it's separated, remove and set aside the PCB board.

## Step 6 — Disconnect flex cables

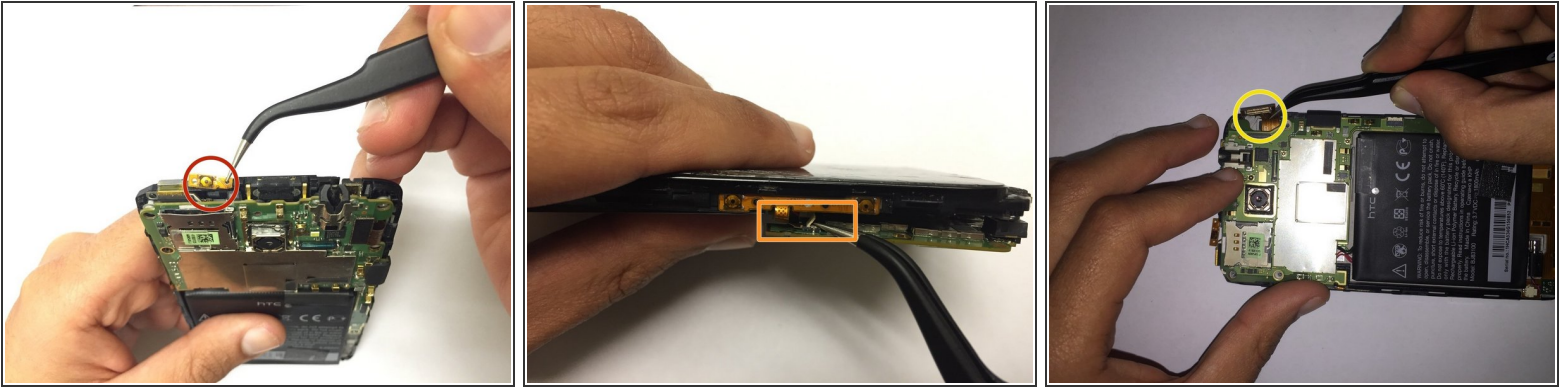

- Place the battery back into its original position once the PCB board has been removed
- Use tweezers to disconnect the power button flex cables.
- Disconnect the volume flex cable by opening the gate and then sliding the cable out using tweezers.
- Disconnect the touchscreen flex cable

⚠ If repairing hard buttons, skip step 7.


## Step 7 — Remove logic board



- Disconnect the remaining two flex cables in a similar manner before completely removing the logic board.
- You may now remove the board safely



## Step 8 — Ensure flex cables and buttons are connected

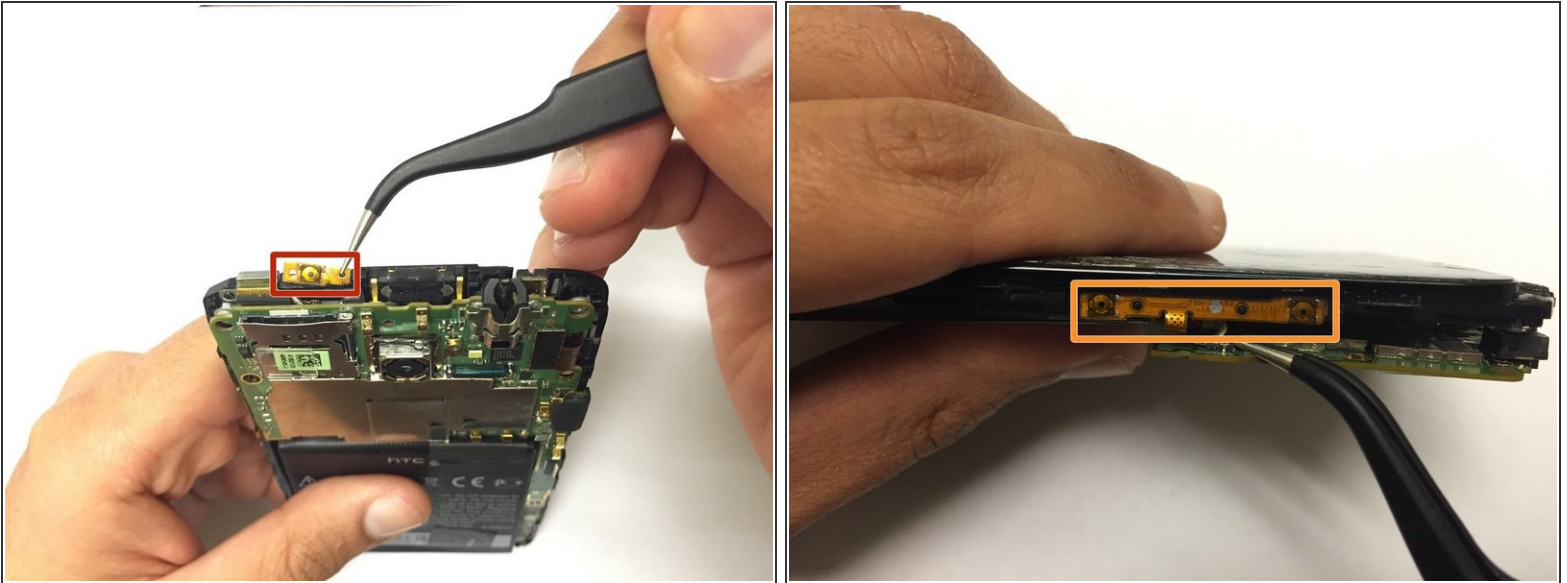

- Ensure that the power button flex cable from Step 6 is connected securely with its base.
- Ensure that the volume flex cable from Step 6 is connected securely with its base.
- ⓘ If necessary you may need to replace these flex cables completely.
- Follow these steps in reverse and specifically check the power and volume buttons as they're placed into the phone.

To reassemble your device, follow these instructions in reverse order.